

Jeep **RECON**



2026 OWNER'S MANUAL

ROADSIDE ASSISTANCE

24 HOURS, 7 DAYS A WEEK AT YOUR SERVICE.

CALL 1-800-521-2779 OR VISIT [CHRYSLER.RSAHELP.COM](https://www.chrysler.rsahelp.com) (USA)

CALL 1-800-363-4869 OR VISIT [FCA.ROADSIDEAID.COM](https://www.fca.roadsideaid.com) (CANADA)

SERVICES: Flat Tire Service, Out of Charge, 12 Volt Battery Jump Assistance, Lockout Service and Towing Service.

Please see the Customer Assistance chapter in this Owner's Manual for further information.

FCA US LLC reserves the right to modify the terms or discontinue the Roadside Assistance Program at any time. The Roadside Assistance Program is subject to restrictions and conditions of use, that are determined solely by FCA US LLC.

Vehicle images are for illustration purposes only.

Actual products sold may vary.

This Owner's Manual illustrates and describes the operation of features and equipment that are either standard or optional on this vehicle. This manual may also include a description of features and equipment that are no longer available or were not ordered on this vehicle. Please disregard any features and equipment described in this manual that are not on this vehicle. FCA US LLC reserves the right to make changes in design and specifications, and/or make additions to or improvements to its products without imposing any obligation upon itself to install them on products previously manufactured.

With respect to any vehicles sold in Canada, the name FCA US LLC shall be deemed to be deleted and the name FCA Canada Inc. used in substitution therefore.

This Owner's Manual is intended to familiarize you with the important features of your vehicle. Your most up-to-date Owner Handbook, Owner's Manual, Radio Instruction Manual and Warranty Booklet can be found by visiting the website on the back cover.

 **WARNING:** Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to **www.P65Warnings.ca.gov/passenger-vehicle**.

CONTENTS

1	INTRODUCTION.....	7
2	GETTING TO KNOW YOUR VEHICLE.....	13
3	DASHBOARD INSTRUMENTS AND CONTROLS.....	95
4	INFOTAINMENT.....	113
5	STARTING AND OPERATING.....	122
6	ENHANCED DRIVING ASSISTANCE SYSTEMS	157
7	IN CASE OF EMERGENCY.....	204
8	MAINTENANCE AND VEHICLE CARE.....	215
9	TECHNICAL SPECIFICATIONS.....	258
10	CUSTOMER ASSISTANCE	261
11	INDEX.....	266

1

2

3

4

5

6

7

8

9

10

11

INTRODUCTION

WELCOME	7
ROLLOVER WARNING.....	8
SYMBOLS KEY — DANGER, WARNINGS AND CAUTIONS.....	8
VEHICLE MODIFICATIONS/ALTERATIONS	9
SYMBOLS GLOSSARY.....	9

GETTING TO KNOW YOUR VEHICLE

KEYS	13
Key Fob.....	13
Auto Key Off.....	16
Sentry Key.....	16
REMOTE CLIMATE ACTIVATION — IF EQUIPPED.....	16
Description.....	16
How To Use Remote Climate Control.....	17
To Exit Remote Climate Mode	17
Remote Start Windshield Wiper De-Icer Activation — If Equipped.....	17
VEHICLE SECURITY SYSTEM — IF EQUIPPED....	17
Description.....	17
To Arm The System	18
To Disarm The System	18
Rearming Of The System.....	18
Security System Manual Override.....	18
DOORS	18
Power Door Locks	18
Interior Door Opening	19
Keyless Enter 'n Go™ — Passive Entry.....	19
Automatic Unlock Doors On Exit.....	21

Automatic Door Locks — If Equipped	21
Child-Protection Door Lock System — Rear Doors.....	21
Manual Door Latching.....	22
Front Door Removal	23
Rear Door Removal.....	26
Door Off Mirror Kit — If Equipped.....	27
WINDOWS	31
Power Window Controls.....	31
Rear Quarter Window Removal	32
Rear Window Removal.....	34
MIRRORS	36
Inside Rearview Mirror.....	36
Illuminated Vanity Mirrors	38
Outside Mirrors	38
Power Mirrors.....	39
Heated Mirrors — If Equipped	39
USER MEMORY SETTINGS — IF EQUIPPED.....	39
Description.....	39
HEAD RESTRAINTS	40
Description.....	40
FRONT SEATS	41
Power Adjustment Front Seats — If Equipped.....	41
Manual Adjustment Front Seats — If Equipped.....	42
Front Heated Seats.....	43
Front Ventilated Seats — If Equipped.....	43
REAR SEATS	44
Manual Adjustment Rear Seats.....	44
Rear Seat Armrest	44

Rear Heated Seats - If Equipped.....	45
OCCUPANT RESTRAINT SYSTEMS	45
Occupant Restraint Systems Features	45
Important Safety Precautions.....	45
Seat Belt Systems	46
SUPPLEMENTAL RESTRAINT SYSTEM (SRS).....	52
Air Bag System Components.....	52
Air Bag Warning Light	52
Redundant Air Bag Warning Light	53
Front Air Bags.....	53
Driver And Passenger Front Air Bag Features.....	54
Front Air Bag Operation	54
Knee Impact Bolsters	54
Occupant Classification System (OCS) — Front Passenger Seat.....	55
Supplemental Driver Knee Air Bag.....	58
Supplemental Side Air Bags.....	58
Air Bag System Components.....	60
If A Deployment Occurs	60
Enhanced Accident Response System	60
Enhanced Accident Response System Reset Procedure (EV)	61
Maintaining Your Air Bag System	61
Event Data Recorder (EDR).....	61
CHILD RESTRAINTS	62
Summary Of Recommendations For Restraining Children In Vehicles.....	62
Infant And Child Restraints.....	63
Older Children And Child Restraints	63
Children Too Large For Booster Seats	64

Recommendations For Attaching Child Restraints	64	Description.....	74	UNIVERSAL GARAGE DOOR OPENER (HOMELINK®) — IF EQUIPPED.....	83
Lower Anchors And Tethers For Children (LATCH) Restraint System	65	Windshield Wiper Operation.....	74	Description.....	83
LATCH Positions For Installing Child Restraints In This Vehicle.....	65	Rear Window Wiper/Washer.....	75	Before You Begin Programming HomeLink®.....	84
Locating The LATCH Anchorages.....	67	Rain Sensing Wipers — If Equipped.....	75	Erasing All The HomeLink® Channels.....	84
Locating The Upper Tether Anchorages.....	67	EXTERIOR LIGHTS	76	Identifying Whether You Have A Rolling Code Or Non-Rolling Code Device.....	84
Center Seat LATCH.....	68	Headlight Switch.....	76	Programming HomeLink® To A Garage Door Opener.....	84
To Install A LATCH-Compatible Child Restraint.....	68	Multifunction Lever.....	76	Programming HomeLink® To A Miscellaneous Device.....	85
How To Stow An Unused Switchable-ALR (ALR) Seat Belt.....	68	Daytime Running Lights (DRLs).....	76	Reprogramming A Single HomeLink® Button.....	85
Installing Child Restraints Using The Vehicle Seat Belt.....	68	High/Low Beam Switch	77	Canadian/Gate Operator Programming.....	85
Lap/Shoulder Belt Systems For Installing Child Restraints In This Vehicle.....	69	Automatic High Beams — If Equipped.....	77	Security.....	86
Installing A Child Restraint With A Switchable Automatic Locking Retractor (ALR):	70	Flash-To-Pass	77	Troubleshooting Tips.....	86
Installing Child Restraints Using The Top Tether Anchorage.....	71	Automatic Headlights.....	77	INTERIOR STORAGE AND FEATURES.....	87
STEERING WHEEL AND CONTROLS.....	71	Parking Lights And Panel Lights.....	77	Storage.....	87
Tilt/Telescoping Steering Column.....	71	Headlights On Automatically With Wipers....	77	USB Control.....	88
Heated Steering Wheel.....	72	Headlight Delay.....	77	Power Outlets	88
Power Steering	72	Lights-On Reminder.....	78	Power Inverter — If Equipped	89
START BUTTON	73	Fog Lights.....	78	Wireless Charging Pad — If Equipped.....	90
Keyless Enter 'n Go™ Propulsion System On.....	73	Turn Signals.....	78	REAR SWING GATE	91
WIPERS AND WASHERS	74	Lane Change Assist — If Equipped.....	78	Description.....	91
		Automatic Headlight Leveling — If Equipped.....	78	Cargo Area Features.....	91
		Battery Saver.....	78	HOOD.....	92
		INTERIOR LIGHTS	78	Opening The Hood.....	92
		Courtesy Lights.....	78	Closing The Hood.....	93
		Dimmer Controls.....	79	Frunk Safety — If Equipped.....	94
		Multicolor Ambient Lighting — If Equipped..	79		
		ROOF SYSTEMS.....	79		
		Power Sliding Top — If Equipped.....	79		
		Power Sunroof — If Equipped.....	81		
		Roof Luggage Rack — If Equipped.....	82		

DASHBOARD INSTRUMENTS AND CONTROLS

INSTRUMENT CLUSTER	95
12-inch Instrument Cluster.....	95
Instrument Cluster Display.....	96
WARNING LIGHTS AND MESSAGES.....	99
Warning Messages	99
Red Warning Lights.....	101
Yellow Warning Lights.....	103
Yellow Indicator Lights.....	106
Green Indicator Lights.....	106
White Indicator Lights.....	107
Blue Indicator Lights.....	108
CLIMATE CONTROLS	108
Description.....	108
Automatic Climate Control Descriptions And Functions.....	108
Automatic Temperature Control (ATC) — If Equipped.....	110
Climate Voice Commands	110
Operating Tips	111

INFOTAINMENT

INTRODUCTION	113
Uconnect Systems	113
RADIO OPERATION, MOBILE PHONES, AND CYBERSECURITY	113
Radio Operation and Mobile Phones	113
Cybersecurity	113
MULTIMEDIA SYSTEM.....	114

Steering Wheel Audio Controls — If Equipped.....	114
Uconnect Voice Recognition.....	114
Uconnect Settings	115
3RD PARTY APPS — IF EQUIPPED.....	117
OFF-ROAD PAGES — IF EQUIPPED	118
Description	118

STARTING AND OPERATING

STARTING PROCEDURE	122
Normal Starting.....	122
AutoPark.....	122
After Starting.....	124
To Turn Off The Vehicle Using Start Button	124
BRAKES	125
Electric Park Brake (EPB)	125
TRANSMISSIONS	127
Electric Drive Module (EDM).....	127
SELEC-TERRAIN — IF EQUIPPED.....	129
Selec-Terrain Mode Selection.....	129
Locking Rear Axle — If Equipped.....	130
Instrument Cluster Display Messages.....	130
CHARGING.....	130
High Voltage Battery	130
High Voltage Charging Operation	133
VEHICLE LOADING	145
Certification Label.....	145
TRAILER TOWING.....	146
Description.....	146
RECREATIONAL TOWING	151
Towing This Vehicle Behind Another Vehicle.....	151

DRIVING TIPS.....	151
On-Road Driving Tips.....	151
Off-Road Driving Tips.....	152

ENHANCED DRIVING ASSISTANCE SYSTEMS

SENSORS.....	157
Audible Pedestrian Warning System - If Equipped.....	157
Rear Seat Reminder Alert (RSRA) — If Equipped.....	157
COLLISION AVOIDANCE ASSISTANCE SYSTEM	157
Forward Collision Warning (FCW) With Mitigation — If Equipped.....	157
VEHICLE STABILITY ASSISTANCE SYSTEM.....	160
Electronic Stability Control (ESC)	160
Traction Control System (TCS)	160
BRAKING PERFORMANCE ASSISTANCE SYSTEM.....	161
Brake System Warning Light.....	161
Brake Assist System (BAS)	161
Ready Alert Braking (RAB).....	161
Electronic Brake Force Distribution (EBD)	161
Rain Brake Support (RBS).....	161
Anti-Lock Brake System (ABS)	161
Anti-Lock Brake System (ABS) Warning Light.....	162
VISIBILITY ASSISTANCE SYSTEM.....	162
Blind Spot Monitoring (BSM) — If Equipped	162
LANE CENTERING ASSISTANCE SYSTEM.....	167

Active Lane Management System — If Equipped.....	167	JACKING THE VEHICLE AND WHEEL		SCHEDULED MAINTENANCE	216
Active Driving Assist System — If Equipped.....	169	CHANGING — IF EQUIPPED.....	207	Description.....	216
PARKING AND REVERSE OPERATIONS		Description	207	Maintenance Plan.....	217
ASSISTANCE SYSTEM.....	173	Preparations For Jacking	207	UNDERHOOD COMPARTMENT.....	219
ParkView Rear Back Up Camera.....	173	Jack Location	207	EV Compartment.....	219
TrailCam System — If Equipped.....	174	Spare Tire Removal	207	Adding Washer Fluid.....	220
Surround View Camera System	175	Jacking Instructions	208	Maintenance-Free Battery	220
ParkSense Front/Rear Park Assist System w/Stop.....	177	JUMP STARTING	209	Pressure Washing.....	220
ParkSense Active Park Assist System — If Equipped.....	184	Description.....	209	VEHICLE MAINTENANCE.....	221
Interior Camera System — If Equipped.....	188	Preparations For Jump Start.....	210	Description.....	221
DRIVER ATTENTION ASSISTANCE SYSTEM.....	188	Jump Starting Procedure.....	211	Air Conditioner Maintenance.....	221
Drowsy Driver Detection (DDD) — If Equipped.....	188	FREEING A STUCK VEHICLE.....	212	Body Lubrication	222
SPEED CONTROL ASSISTANCE SYSTEM.....	189	Description.....	212	Windshield Wiper Blades	223
OFF ROAD AND LOW-RANGE OPERATIONS		TOWING A DISABLED VEHICLE.....	212	Cooling System.....	224
ASSISTANCE SYSTEM.....	197	Description.....	212	Brake System	227
Hill Start Assist (HSA)	197	Without The Key Fob.....	213	Front/Rear Axle Fluid.....	227
UTILITY FEATURES ASSISTANCE SYSTEM.....	197	Emergency Tow Hooks — If Equipped	213	FUSES	227
Traffic Sign Assist System.....	197	ENHANCED ACCIDENT RESPONSE		General Information.....	227
Tire Pressure Monitoring System (TPMS) .	199	SYSTEM (EARS).....	213	Power Distribution Center.....	228
IN CASE OF EMERGENCY		EVENT DATA RECORDER (EDR).....	214	Rear Power Distribution Center.....	232
HAZARD WARNING FLASHERS	204	MAINTENANCE AND VEHICLE CARE		LIGHT REPLACEMENT	238
Description.....	204	SAFETY TIPS	215	Description.....	238
ASSIST AND SOS — IF EQUIPPED.....	204	Transporting Passengers.....	215	TIRES AND WHEELS.....	238
Description.....	204	Transporting Pets	215	Tire Safety Information	238
		Connected Vehicles.....	215	Tires — General Information	245
		Safety Checks You Should Make Inside The Vehicle	215	Tire Types.....	248
		Periodic Safety Checks You Should Make Outside The Vehicle.....	216	Spare Tires — If Equipped.....	248
				Wheel And Wheel Trim Care	249
				Snow Traction Devices	250
				Tire Rotation Recommendations	251
				DEPARTMENT OF TRANSPORTATION.....	251

Description.....	251
Treadwear.....	251
Traction Grades.....	252
Temperature Grades.....	252
VEHICLE STORAGE.....	252
Description.....	252
BODYWORK AND EXTERIOR CARE	253
Protection From Atmospheric Agents	253
Body And Underbody Maintenance.....	253
Preserving The Bodywork.....	253
INTERIOR CARE	255
Seats And Fabric Parts.....	255
Seat Belt Maintenance.....	255
Carpet Safety Information.....	255
Plastic And Coated Parts.....	256
Cleaning Plastic Instrument Cluster	
Lenses	256
Leather Surfaces.....	256
Vegan Leather Surfaces.....	256
Glass Surfaces	257

TECHNICAL SPECIFICATIONS

VEHICLE IDENTIFICATION NUMBER (VIN).....	258
Description.....	258
FLUIDS AND LUBRICANTS.....	258
Description.....	258
FLUID CAPACITIES	259
Description.....	259
WHEEL AND TIRES	259
Torque Specifications.....	259

CUSTOMER ASSISTANCE

CUSTOMER ASSISTANCE.....	261
Roadside Assistance.....	261
For California Residents	262
FCA US LLC Customer Center.....	262
FCA Canada Customer Care.....	262
Mexico.....	263
Puerto Rico And US Virgin Islands	263
Customer Assistance For The Hearing	
Or Speech Impaired (TDD/TTY).....	263
Service Contract.....	263
Warranty Information.....	263
MOPAR® PARTS.....	263
Reporting Safety Defects.....	264
Ordering and Accessing Additional	
Owner's Information.....	264
Change Of Ownership Or Address.....	264
General Information.....	265

INTRODUCTION

WELCOME

1

Congratulations on the purchase of your new Jeep® vehicle. Be assured that it represents precision workmanship, distinctive styling, and high quality.

This is a specialized utility vehicle. It can go places and perform tasks that are not intended for conventional passenger vehicles. It handles and maneuvers differently from many passenger vehicles both on-road and off-road, so take time to become familiar with your vehicle. Before you start to drive this vehicle, read this Owner's Manual. Be sure you are familiar with all vehicle controls, particularly those used for braking, steering and shifting. Learn how your vehicle handles on different road surfaces. Your driving skills will improve with experience. When driving off-road, or working the vehicle, don't overload the vehicle or expect the vehicle to overcome the natural laws of physics. Always observe federal, state, provincial and local laws wherever you drive. As with other vehicles of this type, failure to operate this vehicle correctly may result in loss of control or a collision
⇒ page 151.

This Owner's Manual has been prepared with the assistance of service and engineering specialists to acquaint you with the operation and maintenance of your vehicle. It is supplemented by customer-oriented documents. Within this information, you will find a description of the services that FCA US LLC offers to its customers as well as the details of the terms and conditions for maintaining its validity. Please take the time to read all of these publications carefully before driving your vehicle for the first time. Following the instructions, recommendations, tips, and important warnings in this manual will help ensure safe and enjoyable operation of your vehicle.


This Owner's Manual describes all versions of this vehicle. Options and equipment dedicated to specific markets or versions are not expressly indicated in the text. Therefore, you should only consider the information that is related to the trim level and version that you have purchased. Any content introduced throughout the Owner's Information, which may or may not be applicable to your vehicle, will be identified with the wording "If Equipped". All data contained in this publication are intended to help you use your vehicle in the best possible way. FCA US LLC aims at a constant improvement of the vehicles produced. For this reason, it reserves the right to make changes to the model described for technical and/or commercial reasons. For further information, contact an authorized dealer.

When it comes to service, remember that authorized dealers know your Jeep® best, have factory-trained technicians, genuine Mopar® parts, and care about your satisfaction.

ROLLOVER WARNING

Utility vehicles have a significantly higher rollover rate than other types of vehicles. This vehicle has a higher ground clearance and a higher center of gravity than many passenger vehicles. It is capable of performing better in a wide variety of off-road applications. Driven in an unsafe manner, all vehicles can go out of control. Because of the higher center of gravity, if this vehicle is out of control it may roll over while some other vehicles may not.

Do not attempt sharp turns, abrupt maneuvers, or other unsafe driving actions that can cause loss of vehicle control. Failure to operate this vehicle safely may result in a collision, rollover of the vehicle, and severe or fatal injury. Drive carefully.

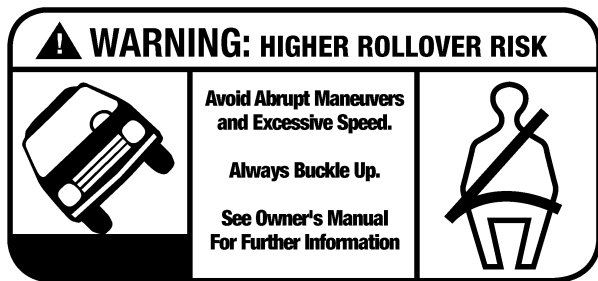

80bre0f0

Rollover Warning Label

Failure to use the driver and passenger seat belts provided is a major cause of severe or fatal injury. In fact, the US government notes that the universal use of existing seat belts could cut the highway death toll by 10,000 or more each year and could reduce

disabling injuries by two million annually. In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Always buckle up.

SYMBOLS KEY — DANGER, WARNINGS AND CAUTIONS

WARNING!	These statements apply to operating procedures that could result in a collision, bodily injury and/or death.
CAUTION!	These statements apply to procedures that could result in damage to your vehicle.
NOTE:	A suggestion which will improve installation, operation, and reliability. If not followed, may result in damage.
TIP:	General ideas/solutions/suggestions on easier use of the product or functionality.
 PAGE REFERENCE ARROW	Follow this reference for additional information on a particular feature.
 FOOTNOTE	Supplementary and relevant information pertaining to the topic.

If you do not read the entire Owner's Manual, you may miss important information. Observe all Cautions and Warnings.

VEHICLE MODIFICATIONS/ALTERATIONS

WARNING!

Any modifications or alterations to this vehicle could seriously affect its roadworthiness and safety and may lead to a collision resulting in serious injury or death.

SYMBOLS GLOSSARY

Some car components have colored labels with symbols indicating precautions to be observed when using this component. It is important to follow all warnings when operating your vehicle. See below for the definition of each symbol ➞ page 99.

NOTE:

Warning and Indicator lights are different based upon equipment options and current vehicle status. Some telltales are optional and may not appear.

Red Warning Lights	
	Air Bag Warning Light ➞ page 101
	Brake Warning Light ➞ page 101
	Brake Temperature Warning Light ➞ page 102

Red Warning Lights	
	Battery Charge Warning Light ➞ page 102
	Door Open Warning Light ➞ page 102
	Drowsy Driver Detected Warning Light ➞ page 188
	Electric Power Steering (EPS) Fault Warning Light ➞ page 102
	Service Electric Vehicle System Warning Light ➞ page 102
	Power Battery Failure Warning Light ➞ page 103
	Low High-Voltage Charge Warning Light ➞ page 102
	Hood Open Warning Light ➞ page 102

Red Warning Lights	
	Swing Gate Open Warning Light ⇒ page 103
	Charging System Fault Warning Light ⇒ page 103
	Torque Limited Warning Light ⇒ page 102
	Seat Belt Reminder Warning Light ⇒ page 103
	HV Coolant Low ⇒ page 103
	Vehicle Security Warning Light ⇒ page 103
Yellow Warning Lights	
	Anti-Lock Brake System (ABS) Warning Light ⇒ page 103

Yellow Warning Lights	
	Service Acoustic Vehicle Alerting System (AVAS) Warning Light ⇒ page 104
	Drowsy Driver Detected System Fault Warning Light ⇒ page 188
	Electric Park Brake Warning Light ⇒ page 104
	Electronic Stability Control (ESC) Active Warning Light ⇒ page 104
	Electronic Stability Control (ESC) OFF Warning Light ⇒ page 104
	Service Active Lane Management Warning Light ⇒ page 104
	Active Lane Management Warning Light ⇒ page 104
	Low Washer Fluid Warning Light ⇒ page 104

Yellow Warning Lights	
	Rear Axle Lock Fail Warning Light ⇒ page 104
	Service Adaptive Cruise Control (ACC) Warning Light ⇒ page 105
	Service Forward Collision Warning (FCW) Or Pedestrian Emergency Braking (PEB) Warning Light ⇒ page 105
	Tire Pressure Monitoring System (TPMS) Warning Light ⇒ page 105
	Traffic Sign Recognition (TSR) Fault ⇒ page 106
	Trailer Fault Warning Light ⇒ page 106

Yellow Indicator Lights	
	Auto HOLD! Fault Indicator Light ⇒ page 106

Yellow Indicator Lights	
	Forward Collision Warning (FCW) / Pedestrian Emergency Braking (PEB) Off Indicator Light ⇒ page 106
	Rear Axle Lock Indicator Light ⇒ page 106

Green Indicator Lights	
	Auto HOLD Indicator Light ⇒ page 106
	Front Fog Indicator Light ⇒ page 106
	Parking/Headlights On Indicator Light ⇒ page 107
	Plug Status Indicator Light ⇒ page 107
	Ready To Drive Indicator Light ⇒ page 107

Green Indicator Lights	
	Rough Road Cruise Control ⇒ page 106
	Turn Signal Indicator Lights ⇒ page 107

White Indicator Lights	
	Regenerative Braking Unavailable Indicator Light ⇒ page 107

White Indicator Lights	
	Rear Seat Unoccupied Indicator Light ⇒ page 107
	Rough Road Cruise Control Indicator Light ⇒ page 108

Blue Indicator Lights	
	High Beam Indicator Light ⇒ page 108

GETTING TO KNOW YOUR VEHICLE

KEYS

Key Fob

Your vehicle is equipped with a key fob which supports Passive Entry, Remote Keyless Entry (RKE), Keyless Enter 'n Go™, and Remote Climate Activation. The key fob allows you to lock or unlock all doors, swing gate, and charge port door as well as activate the Panic Alarm from distances up to approximately 66 ft (20 m). The key fob does not need to be pointed at the vehicle to activate the system. The key fob also contains an emergency key, which is stored in the rear of the key fob.

NOTE:

In vehicles equipped with Remote Start, the key fob will operate at distances up to 328 ft (100 m).

NOTE:

- The key fob's wireless signal may be blocked if the key fob is located next to a mobile phone, laptop, or other electronic device. This may result in poor performance.
- If your vehicle is equipped with a Wireless Charging Pad, the key fob may not be detected if it is placed within 6 inches (15 cm) of the pad ➞ page 90.
- With the vehicle in the ON position and the vehicle moving at 2 mph (4 km/h), all RKE commands are disabled.



Key Fob

- 1 — LED Indicator
- 2 — Unlock
- 3 — Lock
- 4 — Remote Start (If Equipped)
- 5 — Panic
- 6 — Emergency Key

In case the start button does not change positions, the key fob may have a low or fully depleted battery. A low key fob battery can be verified by referring to the instrument cluster, which will display directions to follow.

For more information on power start positions, see ➞ page 73.

NOTE:

A low key fob battery condition may be indicated by a message in the instrument cluster display, or by the LED light on the key fob. If the LED key fob light no longer illuminates after a key fob button is pushed, then the key fob battery requires replacement ➞ page 265.

To Lock/Unlock The Doors And Swing Gate

Push and release the unlock button on the key fob once to unlock the driver's door, or twice to unlock all the doors, swing gate and charge port door. To lock all the doors, swing gate, and charge port door, push the lock button once.

When the doors are unlocked, the turn signals will flash. When the doors are locked, the turn signals will flash and the horn will chirp.

NOTE:

All doors can be programmed to unlock on the first push of the unlock button through the Uconnect Settings ➞ page 115.

Using The Panic Feature — If Equipped

To turn the Panic feature on or off, push the Panic button on the key fob. When the Panic feature is activated, the turn signals will flash, the horn may pulse on and off (if equipped with horn alarm), and the interior lights will turn on.

The Panic feature will stay on for three minutes unless you turn it off by either pushing the Panic button a second time or drive the vehicle at a speed of 15 mph (24 km/h) or greater.

NOTE:

- The interior lights will turn off if you place the ignition in the ON/RUN position while the Panic feature is activated. However, the exterior lights and horn (if equipped with horn alarm) will remain on.
- You may need to be closer than 66 ft (20 m) from the vehicle when using the key fob to turn off the Panic feature due to the radio frequency noises emitted by the system.

Key Left Vehicle Feature

If a valid key fob is no longer detected inside the vehicle while the vehicle's ignition system is in the ON/RUN or START position, the message "Key Fob Has Left The Vehicle" will be shown in the instrument cluster display along with an interior chime. An exterior audible and visual alert will also be activated to warn the driver.

The vehicle's horn will rapidly chirp three times along with a single flash of the vehicle's exterior lights.

NOTE:

- The doors have to be open and then closed in order for the vehicle to detect a key fob. The Key Left Vehicle feature will activate when the first door is closed and no key fob is detected in the vehicle. If the warning has been activated, and the other doors are closed, no other warnings will be issued.
- These alerts will not be activated in situations where either the vehicle's electric motor is left running with

the key fob inside, or the key fob's wireless signals are blocked.

Replacing The Battery In The Key Fob

The replacement battery model is one CR2450 battery.

NOTE:

- Customers are recommended to use a battery obtained from Mopar®. Aftermarket coin battery dimensions may not meet the original OEM coin battery dimensions.
 - Perchlorate Material — special handling may apply. See <https://dtsc.ca.gov/perchlorate/> for further information.
 - Do not touch the battery terminals that are on the back housing or the printed circuit board.
 - Do not replace the coin battery if the LED on the key fob above the top row buttons blinks when a button is pressed. The coin battery should last a minimum of three years with normal vehicle usage.
1. Remove the emergency key by pushing the emergency key release button (1) on the side of the key fob, and pulling the emergency key (2) out with your other hand.



Emergency Key Removal

- 1 — Emergency Key Release Button
- 2 — Emergency Key



Emergency Key Removed

2. Hold the key fob with the button side facing down, and locate the small rectangular gap on the left side between the housing and the back cover of the key fob. Use a small flat-bladed tool to pry open the left side of the fob cover while applying pressure until the cover snaps open.



SB0201003295

Pry Apart Key Fob Halves

- Next, locate bottom left of the key fob and pry off the battery cover by lifting upward.



SB0201003293

Key Fob Battery Location


- Remove the battery by using your thumb to slide the battery downward and back toward the key ring.

NOTE:

When replacing the battery, ensure the (+) sign on the battery is facing upward. Avoid touching the new battery with your fingers. Skin oils may cause

battery deterioration. If you touch a battery, clean it with rubbing alcohol.

- Replace the battery by using your thumb to push down and slide the battery under the small lip on the top edge of the opening.

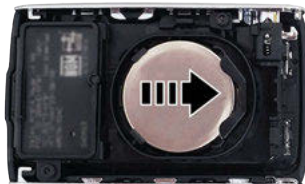

SB0201003294

Key Fob Battery Replacement

- To assemble the key fob case, line up the top edge of the back cover with the top of the fob, and press the edges into the interlocking hinges until all edges snap together with no large visual gaps.
- Reinsert the emergency key until it locks into place.

NOTE:

The key fob battery should only be replaced by qualified technicians. If the battery requires replacement, see an authorized dealer.

WARNING!

- The integrated key fob contains a coin cell battery. Do not ingest the battery; there is a chemical burn

(Continued)

WARNING!

hazard. If the coin cell battery is swallowed, it can cause severe internal burns in just two hours and can lead to death.

- If you think a battery may have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

Programming And Requesting Additional Key Fobs

Programming the key fob may be performed by an authorized dealer.

NOTE:

- Once a key fob is programmed to a vehicle, it cannot be repurposed and reprogrammed to another vehicle.
- Only key fobs that are programmed to the vehicle electronics can be used to start and operate the vehicle.

WARNING!

- Always remove the key fobs from the vehicle and lock all doors when leaving the vehicle unattended.
- For vehicles equipped with Keyless Enter 'n Go™ Propulsion System, always remember to place the

(Continued)

WARNING!

start button in the OFF position when exiting the vehicle.

Duplication of key fobs may be performed at an authorized dealer. This procedure consists of programming a blank key fob to the vehicle electronics. A blank key fob is one that has never been programmed.

NOTE:

- When having the Sentry Key Immobilizer system serviced, bring all vehicle keys with you to an authorized dealer.
- Keys must be ordered to the correct key cut to match the vehicle locks.
- It is not mandatory to replace the key fob if a new emergency key is needed, and vice versa.

AUTO KEY OFF

Auto Key Off is designed to preserve battery life by shutting off the vehicle. The time intervals for vehicle shut off is dependent on the voltage levels. A pop-up will be displayed in the Cluster indicating that the vehicle will shut off.

12V Battery Low. Plug in Vehicle. Vehicle Will Shut Off Soon

If an Auto Key Off occurred, there will be a short delay upon vehicle start. If the vehicle is on but not running and locked from the outside, the vehicle will shut off.

SENTRY KEY

The Sentry Key Immobilizer system prevents unauthorized vehicle operation by disabling the electric motor. The system does not need to be armed or activated. Operation is automatic, regardless of whether the vehicle is locked or unlocked.

The system uses a key fob, keyless Start button and a Radio Frequency (RF) receiver to prevent unauthorized vehicle operation. Therefore, only key fobs that are programmed to the vehicle can be used to start and operate the vehicle. The system cannot reprogram a key fob obtained from another vehicle.

After placing the vehicle in the ON position, the Vehicle Security Light will turn on for three seconds for a bulb check. If the light remains on after the bulb check, it indicates that there is a problem with the electronics. In addition, if the light begins to flash after the bulb check, it indicates that someone attempted to start the electric motor with an invalid key fob. In the event that a valid key fob is used to start the electric motor but there is an issue with the vehicle electronics, the electric motor will start and shut off after two seconds.

If the Vehicle Security Light turns on during normal vehicle operation (vehicle running for longer than 10 seconds), it indicates that there is a fault in the electronics. Should this occur, have the vehicle serviced as soon as possible by an authorized dealer.

CAUTION!

The Sentry Key Immobilizer system is not compatible with some aftermarket Remote Start systems. Use of

(Continued)

CAUTION!

these systems may result in vehicle starting problems and loss of security protection.

All of the key fobs provided with your new vehicle have been programmed to the vehicle electronics
⇒ page 265.

NOTE:

A key fob that has not been programmed is also considered an invalid key.

REMOTE CLIMATE ACTIVATION — IF EQUIPPED**DESCRIPTION****NOTE:**

Remote climate activation on EV while plugged in may not always start the electric motor.



This system uses the key fob to start the vehicle conveniently from outside the vehicle while still maintaining security. The system has a range of 328 ft (100 m).

The Remote Climate Control activates the Climate Control system and vented seats in temperatures above 80 °F (26.7 °C). It activates the heated seats, heated steering wheel, heated mirrors and rear defroster in temperatures below 40 °F (4.4 °C).

NOTE:

Obstructions between the vehicle and key fob may reduce this range.

HOW TO USE REMOTE CLIMATE CONTROL

Push and release the Remote Climate Control button on the key fob twice within five seconds. The vehicle doors will lock, the parking lights will flash, and the horn will chirp twice (if programmed). Then, the vehicle will start, and remain in the Remote Climate Control mode for a 15 minute cycle.

Pushing the Remote Climate Control button a third time shuts the vehicle off.

NOTE:

- With Remote Climate Control, the vehicle will only run for 15 minutes.
- Remote Climate Control can only be used twice.
- If an electric motor fault is present or battery level is low, the vehicle will turn on and then shut down in 10 seconds.
- The parking lights will turn on and remain on during Remote Climate Control mode.
- For security, power window and power sunroof (if equipped) operations are disabled when the vehicle is in Remote Climate Control mode.
- The vehicle must be placed in the ON/RUN position before the Remote Start sequence can be repeated for a third cycle.

All of the following conditions must be met before Remote Climate will engage:

- Gear selector in PARK
- Doors closed
- Hood closed
- Swing gate closed

- Hazard switch off
- Brake switch inactive (brake pedal not pressed)
- The high voltage battery at an acceptable charge level
- Key fob Panic button not pushed
- System not disabled from previous Remote Climate event
- Vehicle Security system indicator flashing
- Vehicle in the OFF position
- Malfunction Indicator Light (MIL) is off while vehicle is in propulsion system active
- Electric Vehicle Service Light is not illuminated

WARNING!

Keep key fobs away from children. Operation of the Remote Start system, windows, door locks or other controls could cause serious injury or death.

TO EXIT REMOTE CLIMATE MODE

Push and release the Remote Climate button one time or allow the Remote Climate cycle to complete the entire 15 minute cycle.

In addition, the Start button can be cycled to the RUN (Pre-Propulsion System Active) position by pressing the Start button with the key fob in the vehicle, and then pushing the Start button one more time to place the vehicle in the OFF position.

NOTE:

To avoid unintentional shutdowns, the system will temporarily disable for two seconds after receiving a valid Remote Start request.

REMOTE START WINDSHIELD WIPER DE-ICER ACTIVATION — IF EQUIPPED

- **Activation By Front Defrost** — The Windshield Wiper De-Icer shall be activated automatically in the case of a cold weather manual start with full front defrost, and when the ambient temperature is below 35 °F (1.2 °C).
- **Activation By Rear Defrost** — The Windshield Wiper De-Icer shall be activated automatically when the rear defrost is turned on and when the ambient temperature is below 40 °F (4.4 °C).

VEHICLE SECURITY SYSTEM — IF EQUIPPED

DESCRIPTION

The Vehicle Security system monitors the vehicle doors for unauthorized entry and the start button for unauthorized operation. When the alarm is activated, the interior switches for door locks are disabled. The Vehicle Security system provides both audible and visible signals. If something triggers the alarm, the Vehicle Security system will provide the following audible and visible signals: the horn will pulse, the park lamps and/or turn signals will flash, and the Vehicle Security Light in the instrument cluster will flash.

TO ARM THE SYSTEM

Follow these steps to arm the Vehicle Security system:

1. If any doors or windows are open, close them.
2. Make sure the vehicle's start button is placed in the OFF position.
3. Perform one of the following methods to lock the vehicle:
 - Push lock on the interior power door lock switch with the driver and/or passenger door open.
 - Push the lock button on the exterior Passive Entry door handle with a valid key fob available in the same exterior zone ➡ page 74.
 - Push the lock button on the key fob.

NOTE:

The Vehicle Security system will not arm if you lock the doors using the manual door lock.

TO DISARM THE SYSTEM

The Vehicle Security system can be disarmed using any of the following methods:

- Push the unlock button on the key fob.
- Grab the Passive Entry door handle (if equipped) ➡ page 74.
- Cycle the vehicle's start button out of the OFF position.

NOTE:

- The driver's door key cylinder cannot arm or disarm the Vehicle Security system.
- When the Vehicle Security system is armed, the interior power door lock switches will not unlock the doors.

The Vehicle Security system is designed to protect your vehicle. However, you can create conditions where the system will give you a false alarm. If one of the previously described arming sequences has occurred, the Vehicle Security system will arm regardless of whether you are in the vehicle or not. If you remain in the vehicle and open a door, the alarm will sound. If this occurs, disarm the Vehicle Security system.

If the Vehicle Security system is armed and the battery becomes disconnected, the Vehicle Security system will remain armed when the battery is reconnected; the exterior lights will flash, and the horn will sound. If this occurs, disarm the Vehicle Security system.

REARMING OF THE SYSTEM

If something triggers the alarm and no action is taken to disarm it, the Vehicle Security system will turn the horn off after a 29 second cycle (with five seconds between cycles and up to eight cycles if the trigger remains active) and then rearm itself.

SECURITY SYSTEM MANUAL OVERRIDE

The Vehicle Security system will not arm if you lock the doors using the manual door lock.

DOORS

POWER DOOR LOCKS

The power door lock buttons are located on each front door panel. Use these buttons to lock or unlock all doors and swing gate.

When the doors are locked, an indicator light in the lock button will illuminate.



Power Door Lock Switches

The driver's door will unlock automatically if the key fob is detected inside the vehicle when the door lock button on the front door panel is used to lock the door, then the door is closed. The horn will also chirp to alert the driver. This will occur for two attempts. On the third attempt, the doors will lock even if the key fob is inside.

NOTE:

If the key fob is located next to a mobile phone, laptop, or other electronic device, the wireless signal may get blocked, and the driver's door may not unlock automatically.

If the door lock switch is pushed while the start button is in ON/RUN and the driver's door is open, the doors will not lock.

Rear Passenger Power Door Locks

Power door lock buttons are located on each rear door trim panel. Push the lock button to lock the rear door or push the unlock button to unlock the rear door.

INTERIOR DOOR OPENING

The door can be opened by pressing the button located above each front door panel. If all doors are locked, pressing the button on either door will unlock the other door and swinggate. This ability can be activated or deactivated via Uconnect Settings ➡ page 114.

NOTE:

The doors will not open electrically when the vehicle is traveling above 2 mph (4 km/h).



Power Door Button Opening

The doors can also be locked and unlocked with the Keyless Enter 'n Go - Passive Entry system.

Manual Door Opening

If the electronic door button does not work, for example if the 12V battery of the car is low, the doors can still be opened from the inside by pulling the manual door handle located on each front door.

NOTE:

If after using the manual door handle, the door does not close, you must rotate the manual latch located on the inside of the door frame. ➡ page 22



Manual Door Handle

KEYLESS ENTER 'N Go™ — PASSIVE ENTRY

The Passive Entry system is an enhancement to the vehicle's Remote Keyless Entry (RKE) system and a feature of Keyless Enter 'n Go™. This feature allows you to lock and unlock the vehicle's door(s) without having to push the key fob lock or unlock buttons.

NOTE:


- Passive Entry may be programmed on/off through Uconnect Settings ➡ page 115.

- The key fob may not be detected by the vehicle Passive Entry system if it is located next to a mobile phone, laptop or other electronic device; these devices may block the key fob's wireless signal and prevent the Passive Entry handle from locking/unlocking the vehicle.
- Passive Entry Unlock initiates illuminated approach (low beams, license plate lamp, parking lights, door handle pocket lights [if equipped], power side steps [if equipped]) for whichever duration is set between 0, 30, 60 or 90 seconds. Passive Entry Unlock also initiates two flashes of the turn signals.
- If wearing gloves, if it has been raining/snowing, or if there is salt/dirt covering the Passive Entry door handle, the unlock and lock sensitivity can be affected, resulting in a slower response time.
- The doors may lock and unlock when water is sprayed on the Passive Entry door handles, if the key fob is located outside of the vehicle within 5 ft (1.5 m) of the handle.
- Passive Entry lock initiates one horn chirp and one flash of turn signals. These settings can be programmed on/off within Uconnect Settings ➡ page 115.
- If the vehicle is unlocked by Passive Entry and no door is opened within 60 seconds, the vehicle will relock and will arm the Vehicle Security system (if equipped).

To Unlock From The Driver Or Passenger Side

With a valid Passive Entry key fob within 5 ft (1.5 m) of the door handle, grab the handle to unlock the vehicle. Grabbing the driver's door handle will unlock the driver door automatically. Grabbing the front passenger door

handle (or a rear handle when equipped with four-door Passive Entry) will unlock all doors and the swing gate automatically.

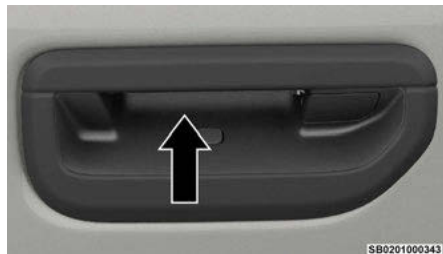

Lift The Door Handle To Unlock

NOTE:

- Either the driver's door only or all doors will unlock when you grab hold of the front driver's door handle, depending on the selected setting in the Uconnect system ➞ page 115.
- All doors will unlock when the front passenger (or a rear door when equipped with four-door Passive Entry) door handle is grabbed regardless of the driver's door unlock preference setting.

Frequency Operated Button Integrated Key (FOBIK-Safe)

To minimize the possibility of unintentionally locking a Passive Entry key fob inside your vehicle, the Passive Entry system is equipped with an automatic door unlock feature which will function if the start button is in the OFF position.

There are five situations that trigger a FOBIK-Safe search in any Passive Entry vehicle:

- A lock request is made by a valid Passive Entry key fob while a door is open.
- A lock request is made by the Passive Entry door handle while a door is open.
- A lock request is made by the door panel switch while the door is open.
- When the Vehicle Security system is in pre-arm or armed status and the swing gate transitions from opened to closed.
- When the swing gate transitions from open to closed and Remote Start is active.

When any of these situations occur, after all open doors are shut, the FOBIK-Safe search will be executed. If it detects a Passive Entry key fob inside the vehicle, the vehicle will unlock and alert the customer.

NOTE:

The vehicle will only unlock the doors when a valid Passive Entry key fob is detected inside the vehicle. The vehicle will not unlock the doors when any of the following conditions are true:

- Three attempts are made to lock the doors using the door panel switch and then the doors are closed.
- There is a valid Passive Entry key fob outside the vehicle within 5 ft (1.5 m) of a Passive Entry door handle.

To Lock The Vehicle's Doors And Swing Gate

With one of the vehicle's Passive Entry key fobs within 5 ft (1.5 m) of the driver or passenger front door handles,

pushing the Passive Entry lock button will lock the vehicle doors and the swing gate.



Press The Door Handle Button To Lock

NOTE:

- After pressing the door handle lock button, you must wait two seconds before you can lock or unlock the doors using any Passive Entry door handle. This is done to allow you to check if the vehicle is locked by pulling the door handle, without the vehicle unlocking.
- If Passive Entry is disabled using the Uconnect Settings, the key fob protection described in "Frequency Operated Button Integrated Key (FOBIK-Safe)" remains active/functional.
- The Passive Entry system will not operate if the key fob battery is depleted.

To Unlock/Enter The Swing Gate

The swing gate Passive Entry unlock feature is built into the swing gate handle. With a valid Passive Entry key fob within 5 ft (1.5 m) of the swing gate handle,

grab the swing gate handle to unlock the swing gate automatically, and pull the swing gate to open.



Swing Gate Release Lever

To Lock The Swing Gate

With a valid Passive Entry key fob within 5 ft (1.5 m) of the swing gate handle, pushing the Passive Entry lock button will lock the vehicle doors and the swing gate ➡ page 265.

AUTOMATIC UNLOCK DOORS ON EXIT

The doors will unlock automatically on vehicles with power door locks after the following sequence of actions:

1. The Automatic Unlock Doors On Exit feature is enabled within Uconnect Settings ➡ page 115.
2. All doors are closed.
3. The gear selector was not in PARK, then is placed in PARK.
4. Any door is opened.


AUTOMATIC DOOR LOCKS — IF EQUIPPED

The Automatic Door Lock feature default condition is enabled. When enabled, the door locks will lock automatically when the vehicle's speed exceeds 15 mph (24 km/h). The Automatic Door Lock feature can be enabled or disabled by an authorized dealer per written request of the customer. Please see an authorized dealer for service.

CHILD-PROTECTION DOOR LOCK SYSTEM — REAR DOORS

To provide a safer environment for small children riding in the rear seats, the rear doors are equipped with a Child-Protection Door Lock system.

To use the system, press the Window Lockout switch on the driver's side door panel or on the instrument panel below the radio. When the system is engaged, the rear doors can only be opened by using the outside door handle.

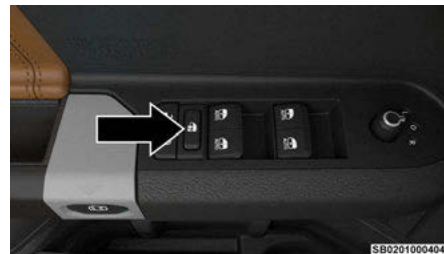

Child-Protection Door Lock and Window Lockout Switch (Driver's Door Trim Panel)



Child-Protection Door Lock and Window Lockout Switch (Instrument Panel)

When the vehicle is turned off the Child-Protection Door Lock will remain active. When the vehicle is powered back on, it will retain the last set setting.

NOTE:

- When the Child-Protection Door Lock system is engaged, the door can be opened only by using the outside door handle.
- After disengaging the Child-Protection Door Lock system, always test the door from the inside to make certain it is in the unlocked position.
- After engaging the Child-Protection Door Lock system, always test the door from the inside to make certain it is in the locked position.

WARNING!

Avoid trapping anyone in a vehicle in a collision. Remember that the rear doors can only be opened from the outside with the Child-Protection locks engaged (locked).

NOTE:

Always use this device when carrying children. After engaging the child lock on both rear doors, check for effective engagement by trying to open a door with the internal handle. Once the Child-Protection Door Lock system is engaged, it is impossible to open the doors from inside the vehicle. Before getting out of the vehicle, be sure to check that there is no one left inside.

MANUAL DOOR LATCHING

In the event of a power failure or depleted key fob battery, the front driver's door can be manually opened and manually closed.

1. To manually unlatch the driver door, first remove the cover plate over the latch release cylinder on

the door handle. Use the emergency key from the key fob to pry off the cover, as shown in the following example:

**Door Latch Release Cover**

2. Insert the emergency key from the key fob into the latch release and turn it toward the rear of the vehicle. This will unlatch the door, allowing you to access the vehicle.

**Latch Release**

3. Replace the latch release cover by first inserting the tab on the right (1), then gently pushing in the tab on the left (2) until it clicks into place.

**Replacing The Cover****Latching The Door**

All doors can be manually latched by turning the latch cylinder in the inside door frame. Using the emergency key from the key fob, turn the latch and then shut the door.

**Door Close Manual Latch**

WARNING!

- For personal security and safety in the event of a collision, lock the vehicle doors before you drive as well as when you park and leave the vehicle.
- When exiting the vehicle, always make sure the power button is in the OFF position, remove the key fob from the vehicle and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector.
- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave the Keyless Enter 'n Go™ Propulsion System in the ON/RUN position. A child could operate power windows, other controls, or move the vehicle.

FRONT DOOR REMOVAL

Scan this QR code to learn more about how to remove the front doors.

**NOTE:**

Before beginning the door removal process, place the vehicle in PARK and place the vehicle in the OFF position. Ensure you have a clean, secure storage area prepared to safely store the doors after removal.

WARNING!

- Do not drive your vehicle on public roads with the doors removed as you will lose the protection they can provide. This procedure is furnished for use during off-road operation only. Failure to follow this warning can result in death or serious personal injury.
- All occupants must wear seat belts during off-road operation with doors removed. For off-road driving tips, see ➡ page 152.
- Do not store detached doors inside of the vehicle, as they may cause personal injury in the event of an accident.

Water fording is not allowed with the doors off.

**No Water Fording With Doors Off Warning Label****CAUTION!**

- Door must be held in place during removal and installation procedure in order to keep from fully swinging open. Failure to do so can cause damage to vehicle.
- Once the check arm is disconnected from the vehicle, ensure the door does not swing or close. Allowing the door to close can cause the check arm to push into the door, resulting in damage to the vehicle.


Outside rearview mirrors are mounted on the doors. If you choose to remove the doors, see an authorized dealer for a replacement outside mirror kit. Federal law requires outside mirrors on vehicles for on-road use.

NOTE:

- Doors are heavy; use caution when removing them. Two people are required to remove and install each door.
- Blind Spot Monitoring System visual alerts are unavailable when the front doors are removed.

To remove the front doors, proceed as follows:


- Lower the glass window to prevent damage and use the door frame for support. Once the window is lowered, turn the vehicle OFF.
- Fold the outside mirror to the fully closed position.
- Remove the plastic wiring access cover located under the instrument panel by pulling the cover off towards the center of the vehicle to disengage the clips and then slide it along the door frame toward the seats.

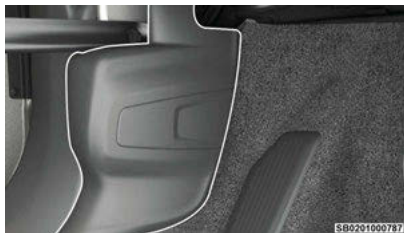

Wiring Access Cover


- Push out the red locking tab (1) to unlock the wiring harness. Lift the security tab (2), then unplug the wiring connector by pulling it straight out.

Unhook the cloth strap of the wiring harness from the bolt located just inside the vehicle (3). Store the door-side wiring harness inside the door's map pocket.

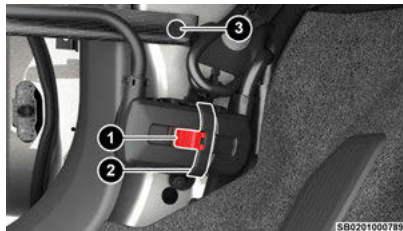

Disconnect Wiring Harness


- 1 — Pull Red Tab
 - 2 — Pull Back Wiring Harness
 - 3 — Disconnect Cloth Strap
- With the door in the fully open position, remove the check arm pin. To remove, push down with your thumb to disconnect the check arm pin clip (1) then flip pin clip upward (2). Then, using a twisting motion, pull up on the check arm pin clip until it is fully removed from the bracket.

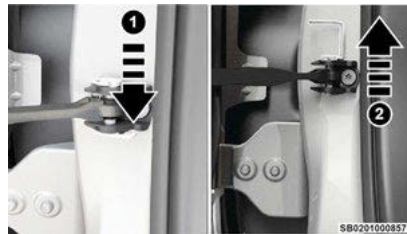

Raise Check Arm Pin Clip

- 1 — Pin Clip Disengagement Location
- 2 — Flip Pin Clip

- While keeping one hand on the door to keep from fully swinging open, gently pull the door until the check arm (1) is out of the bracket. Then, place the check arm pin back into the bracket. Push the center of check arm pin clip (2) until you feel and hear two clicks. Ensure the check arm pin is fully retained in the bracket (3).

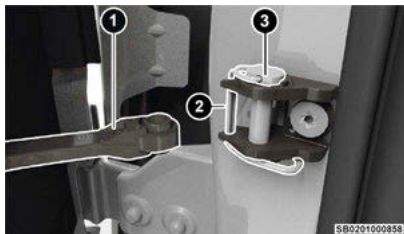

Door Check Arm

- 1 — Check Arm
- 2 — Push In Check Arm Pin Clip
- 3 — Stored Check Arm Pin

7. With the assistance of another person, open the door to 90°, lift the door (lifting points shown in following image), to clear the hinge pins from the hinges and remove the door.



Front Door Removal Lift Points


- 1 — First Person Lifting Points
- 2 — Second Person Lifting Points

To Install The Front Doors

1. To reinstall the door(s), first remove the check arm pin from the bracket.
2. With the help of another person, using the lifting points, and the door positioned at 90°, locate the longer upper and lower hinge pins on the door, lower them on the body hinges on the vehicle until fully seated.

NOTE:

The upper hinge pin is longer, which can be used to assist in guiding the door into place during installation.

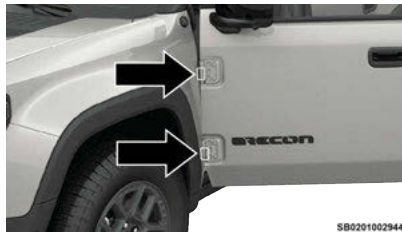

Body Hinge Locations

3. Align the check arm pin hole to hole in check bracket on body. Place check arm pin in bracket and check arm and flip down pin clip. Push in center of check arm pin clip until two clicks are felt or heard. Ensure the check arm pin is fully retained in the bracket.

Replacing The Wiring Connector Into The Wiring Harness

To reinstall the wiring connector on the vehicle's door into the harness just inside the vehicle, proceed as follows:

NOTE:

Make sure there is plenty of slack on the wiring connector during installation. Close the door slightly to provide more slack if needed.

1. Lift lid of wiring connector on body side and gently insert the wiring harness. Once seated, lock into position by flipping the security tab to the closed position.



Body Side Wiring Connector

2. Attach the cloth strap of the wiring harness onto the bolt just inside the vehicle.
3. Replace the wiring access door cover.

WARNING!

To avoid personal injury be sure to keep your arms, hands, fingers and all objects clear of the check arm area during the removal and installation procedures.

REAR DOOR REMOVAL

Scan this QR code to learn more about how to remove the rear doors.

**NOTE:**

- Before beginning the door removal process, ensure you have a clean, secure storage area prepared to safely store the doors after removal.
- Doors are heavy; use caution when removing them. Two people are required to remove and install each door.

WARNING!

- Do not drive your vehicle on public roads with the doors removed as you will lose the protection they can provide. This procedure is furnished for use during off-road operation only. Failure to follow this warning can result in death or serious personal injury.
- All occupants must wear seat belts during off-road operation with doors removed. For off-road driving tips, see ➞ page 152.

(Continued)

WARNING!

- Do not store detached doors inside of the vehicle, as they may cause personal injury in the event of an accident.

CAUTION!

- Door must be held in place during removal and installation procedure in order to keep from fully swinging open. Failure to do so can cause damage to vehicle.
- Once the check arm is disconnected from the vehicle, ensure the door does not swing or close. Allowing the door to close can cause the check arm to push into the door, resulting in damage to the vehicle.

To remove the rear doors, proceed as follows:

1. Lower the glass window to prevent damage and to use door frame as support. Place the vehicle in the OFF position after window is lowered.
2. Pry open and remove the plastic wiring access door from the bottom of the B-pillar.



Wiring Harness Cover

3. Push the locking tabs and disconnect the wiring harness from the vehicle.




Disconnect The Wiring Harness

4. Push the locking tab and disconnect the wiring harness from the vehicle.



Wiring Harness Disconnected


5. Unhook the cloth strap of the wiring harness from the bolt located just inside the vehicle. Store the door-side wiring harness inside the door's map pocket.
6. With the door in the fully open position, remove the check arm pin. To remove, push down with your thumb to disconnect the check arm pin clip (1) then flip pin clip upward (2). Then, using a twisting motion, pull up on the check arm pin clip until it is fully removed from the bracket.

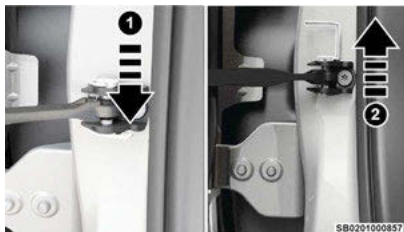

Raise Check Arm Pin Clip

- 1 — Pin Clip Disengagement Location
- 2 — Flip Pin Clip

7. While keeping one hand on the door to keep from fully swinging open, gently pull the door until the check arm (1) is out of the bracket. Then, place the check arm pin back into the bracket. Push the center of check arm pin clip (2) until you feel and hear two clicks. Ensure the check arm pin is fully retained in the bracket (3).

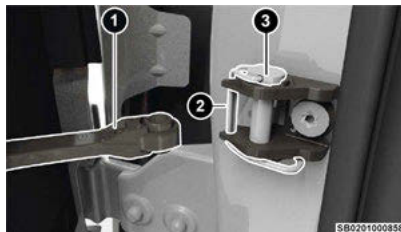

Door Check Arm

- 1 — Check Arm
- 2 — Push In Check Arm Pin Clip
- 3 — Stored Check Arm Pin

8. With the assistance of another person, open the door to 90°, lift the door (lifting points shown in image below), to clear the hinge pins from the hinges and remove the door.



Rear Door Removal Lift Points

- 1 — First Person Lifting Points
- 2 — Second Person Lifting Points

To Install The Rear Doors

To reinstall the door(s), perform the previous steps in the reverse order.

DOOR OFF MIRROR KIT — IF EQUIPPED

Scan this QR code to learn more about the Door Off Mirror Kit



If equipped with the Door Off Mirror Kit, exterior mirrors can be installed on to the upper body door hinges after the front doors have been removed.




Door Off Mirror

WARNING!

- All occupants must wear seat belts during off-road operation with doors removed. For off-road driving tips, see ➡ page 152.
- Do not store detached doors inside of the vehicle, as they may fly around and cause personal injury or death in the event of a sudden stop, rough terrain, or a collision.

To install the Door Off Mirrors, proceed as follows:


1. Remove both front doors ➡ page 23.
2. Using a trim stick (plastic removal device), carefully remove the two instrument panel covers from the instrument panel. Removing the lower cover (1) first, and the upper cover (2) second. Retain the covers for reinstallation.

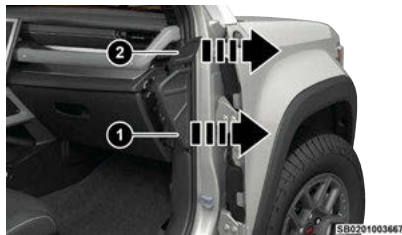

Remove Instrument Panel Covers

- 1 — Lower Cover
- 2 — Upper Cover

3. Gently pull the weather stripping aside by hand. Using a trim stick, carefully release and remove the A-pillar trim cover from the A-pillar by pulling outward at the lower edge (2) and then disengaging the upper clip (1). Retain the cover for reinstallation.

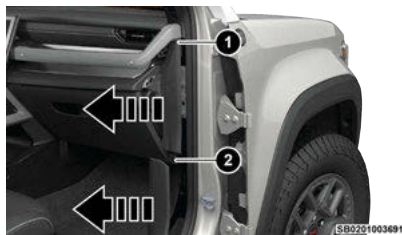

Remove A-Pillar Trim


- 1 — Upper Clip
- 2 — Lower Clip

4. Using a 1 1/16 in (27 mm) hole saw, carefully drill out the marked opening in the A-pillar trim cover.

After drilling, use a utility knife to remove the plastic ribs on the back side of the trim cover so the mirror bracket can be installed.

NOTE:

This modification is required to allow clearance for the mirror bracket. The trim cover can still be reinstalled after modification.

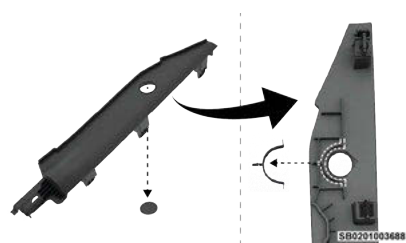

Prepare A-Pillar Trim Cover

WARNING!


Use care when drilling and cutting the trim cover to avoid personal injury or damage to surrounding components. Always wear safety glasses and cut-resistant gloves when performing this procedure.

5. Using a 13 mm socket, loosen (but do not fully remove) the cowl bolt located on the A-pillar at

the front door opening. This bolt will be used to help align and secure the mirror bracket during installation.


NOTE:

Do not fully remove the cowl bolt. Loosen it enough to allow bracket alignment only.

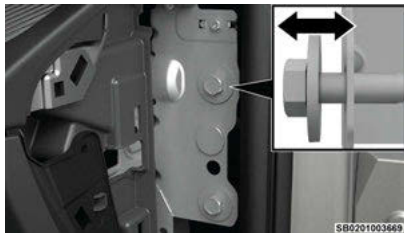

Loosen Cowl Bolt

6. Slide the provided nut plate over the loosened cowl bolt flange on the A-pillar. Make sure the threaded side of the nut plate is centered and aligned with the opening to accept the mirror bracket fastener.

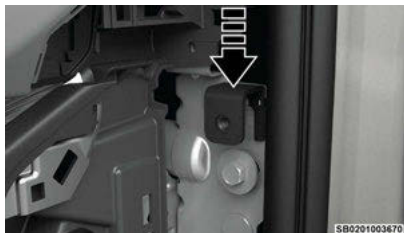

Install Nut Plate

7. Slightly tighten the cowl bolt using a 13 mm wrench or by hand. Do not fully tighten, the nut plate must remain slightly loose to allow mirror bracket alignment.



Position Clip Nut

8. Position the mirror assembly (1) onto the vehicle by sliding the lower hinge mount into the upper door hinge (2) and aligning the bracket holes with the retainer clip (3) on the A-pillar.

Ensure the bracket is fully seated against the A-pillar and is properly aligned before securing the fasteners in the following steps.




Positioning Mirror Assembly Onto Vehicle

9. Insert the hinge shoulder bolt (4) upward through the bottom of the upper door hinge, flat washer (3), and into the mirror bracket (2).

Then thread the bracket bolt (1) through the mirror bracket and onto the hinge shoulder bolt (4).

NOTE:


Do not fully tighten the fasteners at this stage. The bracket must remain slightly loose to allow for alignment.

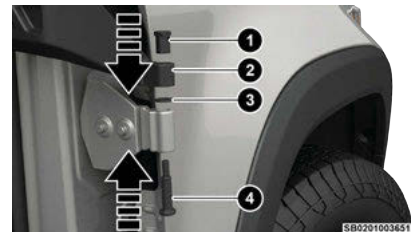

Installing Mirror Bracket Fasteners

- 1 — Bracket Bolt
- 2 — Mirror Bracket
- 3 — Flat Washer
- 4 — Hinge Shoulder Bolt

10. Insert the alignment bolt (1) through the mirror bracket (2) and into the nut plate behind the mirror bracket. Slightly tighten the bolt by hand or with a #40 Torx driver. Do not fully tighten. The mirror bracket must remain loose for final adjustment.

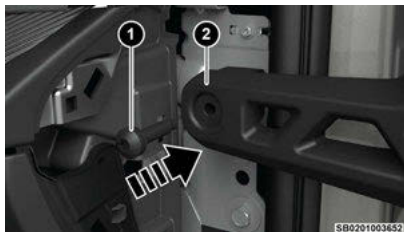


Using Alignment Bolt To Position Mirror Bracket

11. Once the mirror bracket is aligned, fully tighten the cowl bolt using a 13 mm wrench.
- Torque the fastener to **23 N·m (17 ft-lb)**.



Tighten Cowl Bolt

12. To reinstall the A-pillar trim cover, pivot the mirror bracket (2) away from nut plate. Gently pull the weather stripping aside with hands, press the lower tab (3) into place first, then snapping the upper clip (1) back onto the pillar over the nut plate.

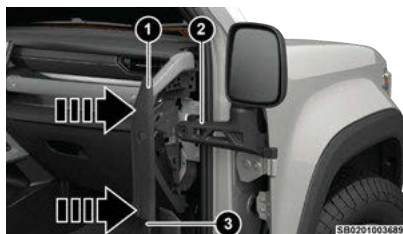

Reinstall A-Pillar Trim Cover


13. Reinstall the instrument panel trim covers onto the instrument panel. Make sure the covers snap fully into place.



Reinstall Instrument Panel Covers

14. Using a T-40 Torx driver, fully tighten the alignment bolt (1) through the mirror bracket (2) and into the nut plate.

Torque the bolt to **8 N·m (6 ft-lb)**.

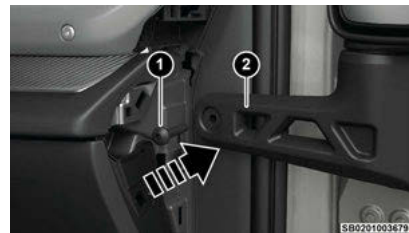

Tighten Alignment Bolt

15. Using a T-40 Torx driver, fully tighten the hinge shoulder bolt through the upper door hinge into the mirror bracket.

Torque the bolt to **10 N·m (7.5 ft-lb)**.



Tighten Hinge Shoulder Bolt

16. Repeat the steps on the other side of the vehicle.

When Mirrors Are Not Installed

When the mirror is removed, install the storage bolt into the nut plate to secure it and protect the threads for future installation.




Install Storage Bolt When Mirror Is Not In Use

WINDOWS

POWER WINDOW CONTROLS

The power window controls, located on the driver's door trim panel, operate the window movement for all four power windows.

There is a single switch on the front passenger door and rear passenger doors which operates the windows for only that door.

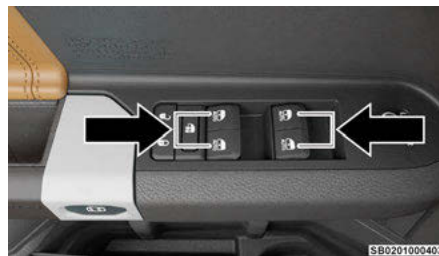

Driver's Door Power Window Switches

NOTE:

- The power window switches remain active for up to 10 minutes after the start button has been placed in the OFF position. Opening a vehicle front door will cancel this feature.
- The window controls will operate only when the vehicle's start button is placed in the ON/RUN position.

WARNING!

Never leave children unattended in a vehicle, and do not let children play with power windows. Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave the Keyless Enter 'n Go™ Propulsion System in the ON/RUN position. Occupants, particularly unattended children, can become entrapped by the windows while operating the power window switches. Such entrapment may result in serious injury or death.

2

Automatic Window Features

Both the driver and front passenger windows, and both rear windows, have Auto-Down and Auto-Up operations.

Auto-Down Feature

For windows equipped with the AUTO feature, push the window switch down to the second detent, release, and the window will go down automatically.

To stop the window from going all the way down during the Auto-Down operation, pull up or push down on the switch briefly.

Auto-Up Feature With Anti-Pinch Protection

For windows equipped with the AUTO feature, lift the window switch up to the second detent, and release; the window will go up automatically.

To stop the window from going all the way up during the Auto-Up operation, push down on the switch briefly.

To close the window part way, lift the window switch briefly and release it when you want the window to stop.

For vehicles equipped with anti-pinch protection, if the window runs into any obstacle during auto-closure, it will reverse direction and then go back down. Remove the obstacle and use the window switch again to close the window.

NOTE:

Impact to the door due to rough road conditions or door closing while auto-closure is in process may unexpectedly trigger the auto-reverse function. If this happens, pull the switch lightly and hold until the window is closed.

WARNING!

- Inadvertently leaving a window open may result in vehicle damage or personal injury.
- There is no anti-pinch protection when the window is almost closed. To avoid personal injury be sure to clear your arms, hands, fingers and all objects from the window path before closing.

Reset Auto-Up

Should the Auto-Up feature stop working, the window may need to be reset. To reset Auto-Up:

Front Doors

1. Pull the window switch up to close the window completely and continue to hold the switch up for an additional two seconds after the window is closed.

Rear Doors

1. Pull and hold the window switch up until the glass stops (soft stop), then release.

2. Pull and hold the switch up again until it reaches the header (hard stop).
3. Release the window switch, and within two seconds, pull the window switch up again and hold it for an additional two seconds.

Window Lockout Switch

The window lockout switch on the driver's door trim panel allows you to disable the window controls on the rear passenger doors. To disable the window controls, push and release the window lockout button (the indicator light on the button will turn on). To enable the window controls, push and release the window lockout button again (the indicator light on the button will turn off).



**Power Window Lockout and
Child-Protection Door Lock Switch**

REAR QUARTER WINDOW REMOVAL


To remove the rear quarter panel windows, proceed as follows:

1. Open the swing gate.
2. Open both side doors nearest the quarter windows.
3. Locate the rear quarter window latches (two on each window) on the interior of the windows.

NOTE:

The latch nearest the rear of the vehicle, should be disengaged from the cargo area, while the latch nearest the rear seat should be disengaged from the rear passenger area.

4. On one side, push the center grey button on the latch.

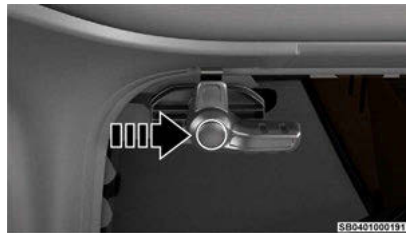

Step Four

5. Continue pushing button while rotating handle downward. Repeat for other side until both latches are disengaged.

**Step Five**

6. From outside of the vehicle, lift each window upward and away from the vehicle.

NOTE:

Do not pull down or apply any weight to the windows after the latches are released. Damage could result to the pins holding the windows in place.

**Step Six**

7. Store the rear quarter windows in the provided storage bag and keep in a safe location, or securely fasten the bag to the rear seat.

Quarter Window Storage Bag


To use the storage bags for the rear quarter windows, proceed as follows:

1. With the bag completely open and the fabric divider raised, place the first quarter window with the latches facing inward into the foam insert. Fold divider over the window once placed inside.

NOTE:

Please be aware that the foam insert is designed with specific front and rear sides. For proper storage, ensure the glass windows are placed in the correct orientation, failure to do so will prevent the bag from closing securely.

2. Place the second window into the foam insert with the latches facing inward. Fully close the bag.

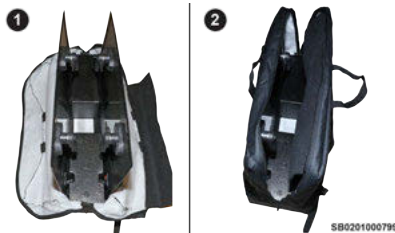**Rear Quarter Panel Windows Stored**

- 1 — Bag Open With Divider Raised
- 2 — Lower Divider Over Window (Latches Facing Inward)

3. Store the bag in a safe location outside the vehicle, or in the cargo area of the vehicle by securing the bag in the vehicle's cargo area.

**Step Three**

4. Using the security strap, fit around the rear passenger seats as shown in following image.

**Step Four**

WARNING!

In a collision, unsecured rear quarter windows in the vehicle could cause injury. They could move around in a sudden stop or rough terrain and strike someone in the vehicle. Do not store the rear quarter windows in the vehicle without securing them as instructed here.

To Install Rear Quarter Windows

To re-install the rear quarter window, proceed as follows:

1. Carefully align and guide window to rest on the pins located on the body.

**Step One**

2. From the interior side of the vehicle, locate the latches and pull inward and rotate latches until each side is latched in place.

**Step Two****REAR WINDOW REMOVAL**

To remove the rear window, proceed as follows:

1. Open the swing gate.
2. Locate the rear window wiring harness and disconnect. Secure harness in storage clip on window sill.

**Step 2**

- 1 — Disconnect Wiring Harness
- 2 — Store Wiring Harness

NOTE:

Disconnecting the wiring harness will disable the rear wiper and washer. The washer and wiper will resume normal operation when the rear glass is re-installed.

3. Locate the two rear window latches at the top of the glass.
4. On one side, push the center grey button on the latch.

**Step Four**

5. Continue pushing button while rotating handle downward. Repeat for other side until both latches are disengaged.



Step Five

6. From the outside of the vehicle, have a second person assist with lifting the rear window upward off pins and away from the vehicle.

NOTE:

Do not pull down or apply any weight to the windows after the latches are released. Damage could result to the pins holding the windows in place.



Step Six

- 1 — Lift Upward
- 2 — Lift Away From Vehicle

7. Store the rear window in the provided storage bag.



Rear Window Storage Bag

8. Store the bag in a safe location, or by securing in the cargo area of the vehicle. To store in the vehicle, first lower the passenger side rear seat, then place bag in vehicle as shown.



Rear Window Storage Location

9. Using the security strap, fit around and clip to passenger side seat striker.



Secure Bag To Seat Striker

- 1 — Security Strap
- 2 — Seat Striker


WARNING!

In a collision, an unsecured rear window in the vehicle could cause injury. It could move around in a sudden stop or rough terrain and strike someone in the vehicle. Do not store the rear window in the vehicle without securing it as instructed here.

To Install Rear Window

To re-install rear window, proceed as follows:

1. With the help of another person, carefully align and guide window to rest on the pins located on the door frame.

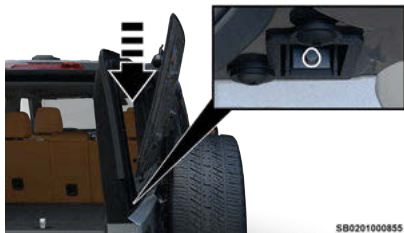**Step One**

- From the interior side of the vehicle, locate the latches and pull inward and rotate latches until each side is latched in place.

**Step Two**

- Re-install rear window wiring connector.

**Step Three**

- 1 — Unclip Wiring Harness
- 2 — Connect Wiring Harness

MIRRORS**INSIDE REARVIEW MIRROR****Manual Mirror — If Equipped**

The rearview mirror can be adjusted up, down, left, and right. The mirror should be adjusted to center on the view through the rear window.

Headlight glare from vehicles behind you can be reduced by moving the small control under the mirror to the night position (toward the rear of the vehicle). The mirror should be adjusted while set in the day position (toward the windshield).



B0215000161US


Adjusting Rearview Mirror**Digital Rearview Mirror — If Equipped**

The Digital Rearview Mirror provides a high definition, wide and unobstructed view of the road and traffic behind the vehicle, as well as a trailer when Tow Mode Camera is equipped, while driving forward (not recommended for use as a Back Up Camera).

Position the mirror in the regular Automatic Dimming Mirror mode, then activate the Digital Rearview Mirror mode.

To activate the Digital Rearview Mirror, pull the on/off control lever on the bottom of the mirror rearward toward the driver.

When Digital Rearview Mode is not in use, push the on/off control lever forward toward the windshield to return the mirror to the regular Automatic Dimming Mirror.

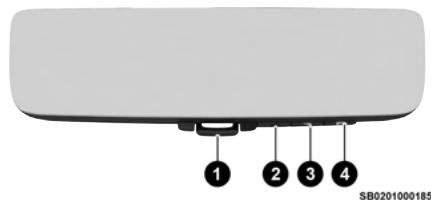

Digital Rearview Mirror

- 1 — On/Off Control/Toggle
- 2 — Menu Button
- 3 — Left Scroll Button
- 4 — Right Scroll Button

Use the left and right buttons to scroll through available camera view options.

Rearview Camera (Back Of Vehicle)

This is the default view of the Digital Rearview Camera. It displays a wide screen view of the back of the vehicle.

Tow Mode (Back Of Trailer) — If Equipped

The Tow Mode will display a wide screen view of the back of the trailer using an auxiliary camera.

Push the Menu button next to the on/off control to access the following mirror adjustment options:

- Tilt (up/down)
- Pan (left/right)
- Rotate
- Zoom
- Brightness

Push the Menu button to scroll through the menu options and use left and right scroll buttons to change settings.

The menu will lockout when vehicle is traveling above 8 mph (12 km/h). Once this happens, the menu options cannot be changed (view can still be changed).

NOTE:

- The Digital Rearview Mirror is not as effective during nighttime driving in low light applications due to low ambient light levels. In the event that it provides the user with less than expected vision, the mirror can be reverted to a normal reflective Automatic Dimming Mirror by pushing the control/toggle forward in the vehicle and putting the mirror into Automatic Dimming Mirror mode.
- When the rear window washer is activated by pushing the windshield wiper/washer lever forward, the rear Back Up and Digital Rearview Mirror (if equipped) cameras are also washed. For more information, see [➡ page 44](#).

Tow Mode — If Equipped

Your vehicle may be equipped with an additional auxiliary trailer camera to be mounted on the rear of a trailer. When the camera is connected, the display in the Digital Rearview Mirror automatically switches to the trailer camera.

To return to the Rearview Camera display toggle through the menu options using the control buttons on the mirror.

The following indications may be displayed on the Digital Rearview Mirror:

Digital Mode



This indication appears when the vehicle's OEM installed rear camera is actively displayed in the rearview mirror.

Digital Mode - No Camera



This indication appears when the vehicle's OEM installed rear camera has lost connection to the display.

Tow Mode



This indication appears when the auxiliary camera attached to the trailer is displayed in the rearview mirror.

Tow Mode - No Camera



While the system is in Tow Mode, this indication will appear when the auxiliary camera attached to the trailer has lost connection to the display. The system will default to the vehicle installed camera.

Fallsafe



This appears when Digital Mode is unavailable for any reason, and the vehicle installed rear camera video feed cannot be displayed. This instructs users to change to reflective mode.

Communication Lost

This indication appears when the digital rearview mirror has lost communication with the vehicle.

Menu

This appears above the first button indicating to the user which button opens the menu of the rearview mirror.

Menu: Camera Select

Menu icon for camera selection between vehicle installed camera and auxiliary trailer camera.

Menu: Trailer Camera Not Detected

This indication appears within the menu for Camera Select if the trailer camera is not detected.

Menu: Brightness

Menu icon for display brightness adjustment.

Menu: Tilt

Menu icon for vertical digital image adjustment.

Menu: Pan

Menu icon for horizontal digital image adjustment.

Menu: Rotate

Menu icon for rotation of digital image adjustment.

Stuck Button

This indication appears when any of the rearview mirror buttons are stuck or held longer than 30 seconds.

If a camera signal is lost, switch to Automatic Dimming Mirror mode.

WARNING!

- The Digital Rearview Mirror mode has a limited view. Portions of the road, vehicles, and other objects may not be seen, especially while backing up.
- In Digital Rearview Mirror mode, nighttime driving visibility may be reduced compared to daytime driving due to lower ambient light conditions.

ILLUMINATED VANITY MIRRORS

To access an illuminated vanity mirror, flip down one of the visors and lift the cover.

**Vanity Mirror****OUTSIDE MIRRORS**

The outside mirror(s) can be adjusted to the center of the adjacent lane of traffic to achieve the optimal view.

**Outside Rearview Mirror**

WARNING!

Vehicles and other objects seen in the passenger side convex mirror will look smaller and farther away than they really are. Relying too much on your passenger side mirror could cause you to collide with another vehicle or other object. Use your inside mirror when judging the size or distance of a vehicle seen in the passenger side mirror.

Outside Mirrors Folding Feature

All outside mirrors are hinged and may be moved either forward or rearward to resist damage. The hinges have three detent positions:

- Full forward position
- Full rearward position
- Normal position

Outside Mirrors With Turn Signal And Approach Lighting — If Equipped

Driver and passenger outside mirrors with turn signal and approach lighting contain LEDs, which are located in the lower outer corner of each mirror.

The outer LEDs are turn signal indicators, which flash with the corresponding turn signal lights in the front and rear of the vehicle. Turning on the Hazard Warning flashers will also activate these LEDs.

The approach lighting, which turns on in both mirrors when you use the key fob or open any door is located on the underside of the mirror.

The illuminated entry lighting fades to off after about 30 seconds or it will fade to off immediately once the vehicle is placed in the ON/RUN position.

NOTE:

The approach lighting will not function when the gear selector is moved out of the PARK position.

POWER MIRRORS

The power mirror control switch is located on the driver's side door trim panel.

To adjust a mirror, rotate the control switch to the desired mirror: (L) or (R). Then push the switch in the direction that you want the mirror to move.



Power Mirror Switch

- 1 — Neutral Position
- 2 — Left Mirror
- 3 — Control Switch
- 4 — Right Mirror

NOTE:

- Once adjustment is complete, rotate the knob to the neutral position to prevent accidental movements.
- Power mirror position can be saved as part of the Driver Memory Settings (if equipped).

HEATED MIRRORS — IF EQUIPPED



These mirrors are heated to melt frost or ice. This feature will be activated whenever you turn on the rear window defroster (if equipped) ➡ page 108.

USER MEMORY SETTINGS — IF EQUIPPED

DESCRIPTION

This feature allows the driver, and if equipped, also the front passenger to save up to two different memory profiles for easy recall through a memory switch. Each memory profile saves desired position settings for the following features:

Driver's Side

- Seat position
- Easy entry/exit seat (if equipped)
- Side mirrors
- A set of desired radio station presets

The memory settings switches are located on the front door panels, next to the door handle, and consists of three buttons.

- The (1) and (2) buttons which are used to recall either of two saved memory profiles
- The set (S) button, which is used to activate the memory save function



Driver Memory Settings Buttons

NOTE:

- Your vehicle is equipped with two key fobs, each can be linked to either driver's side memory position 1 or 2.
- Front passenger memory settings cannot be linked to a key fob.

HEAD RESTRAINTS

DESCRIPTION

Head restraints are designed to reduce the risk of injury by restricting head movement in the event of a rear impact. Head restraints should be adjusted so that the top of the head restraint is located above the top of your ear.

WARNING!

- All occupants, including the driver, should not operate a vehicle or sit in a vehicle's seat until the head restraints are placed in their proper positions in order to minimize the risk of neck injury in the event of a crash.
- Head restraints should never be adjusted while the vehicle is in motion. Driving a vehicle with the head restraints improperly adjusted or removed could cause serious injury or death in the event of a collision.

Front Head Restraints

Your vehicle is equipped with front two-way driver and passenger head restraints.

To raise the head restraint, push the adjustment button, located on the left side of the head restraint, and pull upward on the head restraint. To lower the head restraint, push the adjustment button, and push downward on the head restraint.



Head Restraint Adjustment Button

NOTE:

The head restraints should only be removed by qualified technicians, for service purposes only. If either of the head restraints require removal, see an authorized dealer.

Rear Head Restraints

The rear head restraints have two positions: up or down. When the center seat is being occupied, the head restraint should be in the raised position. When there is no occupant in the center seat, the head restraint can be lowered for maximum visibility for the driver.

To raise the head restraint, pull upward on the head restraint. To lower the head restraint, push the adjustment button, located at the base of the head restraint, and push downward on the head restraint.



Outboard Head Restraint Adjustment Button



Center Head Restraint Adjustment Button

NOTE:

The head restraints should only be removed by qualified technicians, for service purposes only. If either of the head restraints require removal, see an authorized dealer.

WARNING!

ALL the head restraints **MUST** be reinstalled in the vehicle to properly protect the occupants.


FRONT SEATS

POWER ADJUSTMENT FRONT SEATS — If EQUIPPED

WARNING!

- Adjusting a seat while driving may be dangerous. Moving a seat while driving could result in loss of control which could cause a collision and serious injury or death.
- Seats should be adjusted before fastening the seat belts and while the vehicle is parked. Serious injury or death could result from a poorly adjusted seat belt.

Some models may be equipped with a power driver's seat and/or power passenger seat. The power seat switch and power seat recliner switch are located on the outboard side of the seat near the floor. Use the power seat switch to adjust seat height, angle, or forward/rearward position. Use the power seat recline switch to adjust the angle of the seatback.

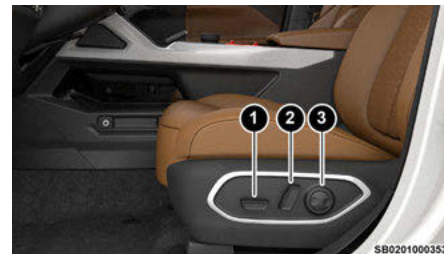

Power Seat Switches

- 1 — Power Seat Switch
- 2 — Power Recline Switch
- 3 — Power Lumbar Switch

NOTE:

Do not place objects beneath the adjustable seat or impede proper seat adjustment.

Forward Or Rearward Adjustment

The seat can be adjusted both forward and rearward. Push the seat switch forward or rearward, the seat will move in the direction of the switch. Release the switch when the desired position has been reached.

Height Adjustment — If Equipped

The height of the seats can be adjusted up or down. Pull upward or push downward on the seat switch, the seat will move in the direction of the switch. Release the switch when the desired position is reached.

Tilt Adjustment

The angle of the seat cushion can be adjusted up or down. Pull upward or push downward on the front of the seat switch and the front of the seat cushion will move in the direction of the switch.

Reclining The Seatback Forward Or Rearward

The seatback can be reclined both forward and rearward. Push the power recline switch forward or rearward. The seatback will move in the direction of the switch. Release the switch when the desired position has been reached.

WARNING!

Do not ride with the seatback reclined so that the shoulder belt is no longer resting against your chest. In a collision you could slide under the seat belt, which could result in serious injury or death.

Power Lumbar — If Equipped

Vehicles equipped with power driver or passenger seats may be equipped with power lumbar. The power lumbar switch is located on the outboard side of the power seat. Push the switch forward to increase the lumbar support. Push the switch rearward to decrease the lumbar support.



Power Lumbar Switch

Easy Entry/Exit Seat — If Equipped

This feature provides automatic driver seat positioning to enhance driver mobility when entering and exiting the vehicle.

The distance the driver seat moves depends on where you have the driver seat positioned when you place the vehicle in the OFF position.

- When you place the vehicle in the OFF position, the driver seat will move about 2.4 inches (6 cm) rearward if the driver seat position is greater than or equal to 2.7 inches (7 cm) forward of the rear stop. The seat will return to its previously set position when you place the vehicle in the ON/RUN position.
- The Easy Entry/Easy Exit feature is disabled when the driver seat position is less than 0.9 of an inch (2.3 cm) forward of the rear stop. At this position, there is no benefit to the driver by moving the seat for Easy Exit or Easy Entry.

When enabled in Uconnect Settings, Easy Entry and Easy Exit positions are stored in each memory setting profile ➞ page 39.

NOTE:

The Easy Entry/Exit feature is not enabled when the vehicle is delivered from the factory. The Easy Entry/Exit feature is enabled or disabled through the programmable features in the Uconnect system ➞ page 39.

MANUAL ADJUSTMENT FRONT SEATS — IF EQUIPPED

Manual Front Seat Forward/Rearward Adjustment

If equipped with a manual seat, the passenger seat can be adjusted forward or rearward by using a bar located by the front of the seat cushion, near the floor. While sitting in the seat, lift up on the bar located under the seat cushion and move the seat forward or rearward. Release the bar once you have reached the desired position. Then, using body pressure, move forward and rearward on the seat to be sure that the seat adjusters have latched.



Adjustment Bar Location

WARNING!

- Adjusting a seat while driving may be dangerous. Moving a seat while driving could result in loss of control which could cause a collision and serious injury or death.
- Seats should be adjusted before fastening the seat belts and while the vehicle is parked. Serious injury or death could result from a poorly adjusted seat belt.

Manual Front Seat Recline Adjustment — If Equipped

To recline the passenger seat, pull the recline lever and lean forward or backward, depending on the direction you would like the seatback to move. Release the lever when the desired position is reached and the seatback will lock into place.



Recline Lever

WARNING!

Do not ride with the seatback reclined so that the shoulder belt is no longer resting against your chest. In a collision you could slide under the seat belt, which could result in serious injury or death.

FRONT HEATED SEATS



The front heated seat controls are located within the Uconnect system or on the instrument panel. Press the button to switch between heat settings and to turn the feature off.

NOTE:

- Once a heat setting is selected, heat will be felt within two to five minutes.
- The vehicle must be running for the heated seats to operate.

WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical condition must exercise care when using the seat heater. It may cause burns even at low temperatures, especially if used for long periods of time.
- Do not place anything on the seat or seatback that insulates against heat, such as a blanket or cushion. This may cause the seat heater to overheat. Sitting in a seat that has been overheated could cause serious burns due to the increased surface temperature of the seat.

FRONT VENTILATED SEATS — If Equipped



The ventilated seat controls are located within the Uconnect system and on the instrument panel. Press the button to switch between ventilation settings and to turn the feature off.

NOTE:

The vehicle must be running for the ventilated seats to operate.

REAR SEATS

MANUAL ADJUSTMENT REAR SEATS

WARNING!

Do not place luggage or cargo higher than the top of the seatback. This could impair visibility or become a dangerous projectile in a sudden stop or collision.

60/40 Split Folding Rear Seats

To provide additional storage area, each rear seat can be folded flat to allow for extended cargo space.

NOTE:

- Be sure that the front seats are fully upright and positioned forward. This will allow the rear seat to fold down easily.
- The center head restraints must be in the lowest position to avoid contact with the center console when folding the seat.

WARNING!

- It is extremely dangerous to ride in a cargo area, inside or outside of a vehicle. In a collision, people riding in these areas are more likely to be seriously injured or killed.
- Do not allow people to ride in any area of your vehicle that is not equipped with seats and seat belts.
- Be sure everyone in your vehicle is in a seat and using a seat belt properly.

TO FOLD DOWN THE REAR SEAT

There are two release levers located on each upper outboard side of the rear seat. The larger of the two release levers folds down the seat and the head restraint simultaneously. The smaller lever folds down the head restraint independently for improved visibility.

To fold the seat, lift upward on the large release lever and slowly fold down the seatback. The head restraint will fold automatically with the seat when this lever is pulled.



Seatback Release Lever

NOTE:

You may experience deformation in the seat cushion from the seat belt buckles if the seats are left folded for an extended period of time. This is normal. By simply unfolding the seats to the open position, the seat cushion will return to its normal shape over time.

TO RAISE THE REAR SEAT

Raise the seatback and lock it into place. Then, raise the head restraint until it locks into place. If


interference from the cargo area prevents the seatback from fully locking, you will have difficulty returning the seat to its proper position.

WARNING!

Be certain that the seatback is securely locked into position. If the seatback is not securely locked into position the seat will not provide the proper stability for child seats and/or passengers. An improperly latched seat could cause serious injury.


REAR SEAT ARMREST

Pull the rear armrest tab to release it from the seat and pull forward.

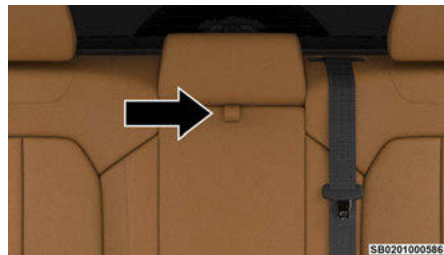

Armrest Tab Location

The center part of the rear seat can also be used as a rear armrest with cupholders.

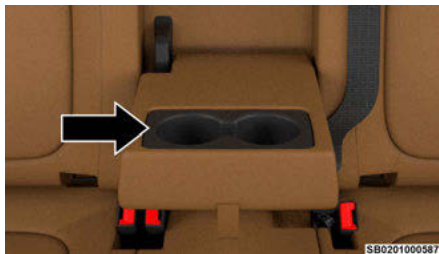

Rear Seat Armrest

REAR HEATED SEATS - IF EQUIPPED



The rear heated seat controls are located on the rear of the center console. Press the button to switch between heat settings and to turn the feature off.

If a high level setting is selected, the system will automatically switch to a lower level after approximately 60 minutes of continuous operation. The lower level setting will turn off automatically after approximately 45 minutes.

NOTE:

- Once a heat setting is selected, heat will be felt within two to five minutes.
- The vehicle must be running for the heated seats to operate.

WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical condition must exercise care when using the seat heater. It may cause burns even at low temperatures, especially if used for long periods of time.
- Do not place anything on the seat or seatback that insulates against heat, such as a blanket or cushion. This may cause the seat heater to overheat. Sitting in a seat that has been overheated could cause serious burns due to the increased surface temperature of the seat.

OCCUPANT RESTRAINT SYSTEMS

Some of the most important safety features in your vehicle are the restraint systems:

OCCUPANT RESTRAINT SYSTEMS FEATURES

- Seat Belt Systems
- Supplemental Restraint Systems (SRS) Air Bags
- Child Restraints

Some of the safety features described in this section may be standard equipment on some models, or may be optional equipment on others. If you are not sure, ask an authorized dealer.

IMPORTANT SAFETY PRECAUTIONS

Please pay close attention to the information in this section. It tells you how to use your restraint system properly, to keep you and your passengers as safe as possible.

Here are some simple steps you can take to minimize the risk of harm from a deploying air bag:

1. Children 12 years old and under should always ride buckled up in the rear seat of a vehicle with a rear seat.
2. A child who is not big enough to wear the vehicle seat belt properly must be secured in the appropriate child restraint or belt-positioning booster seat in a rear seating position
⇒ page 62.
3. If a child from 2 to 12 years old (not in a rear-facing child restraint) must ride in the front passenger seat, move the seat as far back as possible and use the proper child restraint
⇒ page 62.
4. Never allow children to slide the shoulder belt behind them or under their arm.
5. You should read the instructions provided with your child restraint to make sure that you are using it properly.
6. All occupants should always wear their lap and shoulder belts properly.
7. The driver and front passenger seats should be moved back as far as practical to allow the front air bags room to inflate.

8. Do not lean against the door or window. If your vehicle has side air bags, and deployment occurs, the side air bags will inflate forcefully into the space between occupants and the door and occupants could be injured.
9. If the air bag system in this vehicle needs to be modified to accommodate a disabled person, see your Owner Handbook for customer service contact information.

WARNING!

- Never place a rear-facing child restraint in front of an air bag. A deploying passenger front air bag can cause death or serious injury to a child 12 years or younger, including a child in a rear-facing child restraint.
- Never install a rear-facing child restraint in the front seat of a vehicle. Only use a rear-facing child restraint in the rear seat. If the vehicle does not have a rear seat, do not transport a rear-facing child restraint in that vehicle.

SEAT BELT SYSTEMS

Buckle up even though you are an excellent driver, even on short trips. Someone on the road may be a poor driver and could cause a collision that includes you. This can happen far away from home or on your own street.

Research has shown that seat belts save lives, and they can reduce the seriousness of injuries in a collision. Some of the worst injuries happen when people are thrown from the vehicle. Seat belts reduce

the possibility of ejection and the risk of injury caused by striking the inside of the vehicle. Everyone in a motor vehicle should be belted at all times.

Enhanced Seat Belt Use Reminder System (BeltAlert)

Driver And Passenger BeltAlert — If Equipped



BeltAlert is a feature intended to remind the driver and outboard front seat passenger (if equipped with outboard front passenger seat BeltAlert) to buckle their seat belts.

The BeltAlert feature is active whenever the start button is in the START or ON/RUN position.

Initial Indication

If the driver is unbuckled when the start button is first in the START or ON/RUN position, a chime will signal for a few seconds. If the driver or outboard front seat passenger (if equipped with outboard front passenger seat BeltAlert) is unbuckled when the start button is first in the START or ON/RUN position the Seat Belt Reminder Light will turn on and remain on until both outboard front seat belts are buckled. The outboard front passenger seat BeltAlert is not active when an outboard front passenger seat is unoccupied.

BeltAlert Warning Sequence

The BeltAlert warning sequence is activated when the vehicle is moving above a specified vehicle speed range and the driver or outboard front seat passenger is unbuckled (if equipped with outboard front passenger seat BeltAlert) (the outboard front passenger seat BeltAlert is not active when the outboard front passenger seat is unoccupied). The BeltAlert warning sequence starts by blinking the Seat Belt Reminder

Light and sounding an intermittent chime. Once the BeltAlert warning sequence has completed, the Seat Belt Reminder Light will remain on until the seat belts are buckled. The BeltAlert warning sequence may repeat based on vehicle speed until the driver and occupied outboard front seat passenger seat belts are buckled. The driver should instruct all occupants to buckle their seat belts.

Change Of Status

If the driver or outboard front seat passenger (if equipped with outboard front passenger seat BeltAlert) unbuckles their seat belt while the vehicle is traveling, the BeltAlert warning sequence will begin until the seat belts are buckled again.

The outboard front passenger seat BeltAlert is not active when the outboard front passenger seat is unoccupied. BeltAlert may be triggered when an animal or other items are placed on the outboard front passenger seat or when the seat is folded flat (if equipped). It is recommended that pets be restrained in the rear seat (if equipped) in pet harnesses or pet carriers that are secured by seat belts, and cargo is properly stowed.

BeltAlert can be activated or deactivated by an authorized dealer. FCA US LLC does not recommend deactivating BeltAlert.

NOTE:

If BeltAlert has been deactivated and the driver or outboard front seat passenger (if equipped with outboard front passenger seat BeltAlert) is unbuckled the Seat Belt Reminder Light will turn on and remain on until the driver and outboard front seat passenger seat belts are buckled.

Lap/Shoulder Belts

All seating positions in your vehicle are equipped with lap/shoulder belts.

The seat belt webbing retractor will lock only during very sudden stops or collisions. This feature allows the shoulder part of the seat belt to move freely with you under normal conditions. However, in a collision the seat belt will lock and reduce your risk of striking the inside of the vehicle or being thrown out of the vehicle.

WARNING!

- Relying on the air bags alone could lead to more severe injuries in a collision. The air bags work with your seat belt to restrain you properly. In some collisions, the air bags won't deploy at all. Always wear your seat belt even though you have air bags.
- In a collision, you and your passengers can suffer much greater injuries if you are not properly buckled up. You can strike the interior of your vehicle or other passengers, or you can be thrown out of the vehicle. Always be sure you and others in your vehicle are buckled up properly.
- It is dangerous to ride in a cargo area, inside or outside of a vehicle. In a collision, people riding in these areas are more likely to be seriously injured or killed.
- Do not allow people to ride in any area of your vehicle that is not equipped with seats and seat belts.

(Continued)

WARNING!

- Be sure everyone in your vehicle is in a seat and using a seat belt properly. Occupants, including the driver, should always wear their seat belts whether or not an air bag is also provided at their seating position to minimize the risk of severe injury or death in the event of a crash.
- Wearing your seat belt incorrectly could make your injuries in a collision much worse. You might suffer internal injuries, or you could even slide out of the seat belt. Follow these instructions to wear your seat belt safely and to keep your passengers safe, too.
- Two people should never be belted into a single seat belt. People belted together can crash into one another in a collision, hurting one another badly. Never use a lap/shoulder belt or a lap belt for more than one person, no matter what their size.

WARNING!

- A lap belt worn too high can increase the risk of injury in a collision. The seat belt forces won't be at the strong hip and pelvic bones, but across your abdomen. Always wear the lap part of your seat belt as low as possible and keep it snug.
- A twisted seat belt may not protect you properly. In a collision, it could even cut into you. Be sure the seat belt is flat against your body, without twists. If you can't straighten a seat belt in your vehicle,

(Continued)

WARNING!

- take it to an authorized dealer immediately and have it fixed.
- A seat belt that is buckled into the wrong buckle will not protect you properly. The lap portion could ride too high on your body, possibly causing internal injuries. Always buckle your seat belt into the buckle nearest you.
 - A seat belt that is too loose will not protect you properly. In a sudden stop, you could move too far forward, increasing the possibility of injury. Wear your seat belt snugly.
 - A seat belt that is worn under your arm is dangerous. Your body could strike the inside surfaces of the vehicle in a collision, increasing head and neck injury. A seat belt worn under the arm can cause internal injuries. Ribs aren't as strong as shoulder bones. Wear the seat belt over your shoulder so that your strongest bones will take the force in a collision.
 - A shoulder belt placed behind you will not protect you from injury during a collision. You are more likely to hit your head in a collision if you do not wear your shoulder belt. The lap and shoulder belt are meant to be used together.
 - A frayed or torn seat belt could rip apart in a collision and leave you with no protection. Inspect the seat belt system periodically, checking for cuts, frays, or loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the seat belt system. If your vehicle is involved in a collision, or if you have questions

(Continued)

WARNING!

regarding seat belt or retractor conditions, take your vehicle to an authorized FCA dealer or authorized FCA Certified Collision Care Program facility for inspection.

Lap/Shoulder Belt Operating Instructions

1. Enter the vehicle and close the door. Sit back and adjust the seat.
2. The seat belt latch plate is above the back of the front seat, and next to your arm in the rear seat (for vehicles equipped with a rear seat). Grab the latch plate and pull out the seat belt. Slide the latch plate up the webbing as far as necessary to allow the seat belt to go around your lap.

**Pulling Out The Latch Plate**

3. When the seat belt is long enough to fit, insert the latch plate into the buckle until you hear a “click.”

**Inserting Latch Plate Into Buckle**

4. Position the lap belt so that it is snug and lies low across your hips, below your abdomen. To remove slack in the lap belt portion, pull up on the shoulder belt. To loosen the lap belt if it is too tight, tilt the latch plate and pull on the lap belt. A snug seat belt reduces the risk of sliding under the seat belt in a collision.

**Positioning The Lap Belt**

5. Position the shoulder belt across the shoulder and chest with minimal, if any slack so that it is comfortable and not resting on your neck. The

retractor will withdraw any slack in the shoulder belt.

6. To release the seat belt, push the red button on the buckle. The seat belt will automatically retract to its stowed position. If necessary, slide the latch plate down the webbing to allow the seat belt to retract fully.

Lap/Shoulder Belt Untwisting Procedure

Use the following procedure to untwist a twisted lap/shoulder belt.

1. Position the latch plate as close as possible to the anchor point.
2. At about 6 to 12 inches (15 to 30 cm) above the latch plate, grab and twist the seat belt webbing 180 degrees to create a fold that begins immediately above the latch plate.
3. Slide the latch plate upward over the folded webbing. The folded webbing must enter the slot at the top of the latch plate.
4. Continue to slide the latch plate up until it clears the folded webbing and the seat belt is no longer twisted.

Adjustable Upper Shoulder Belt Anchorage

In the driver and outboard front passenger seats, the top of the shoulder belt can be adjusted upward or downward to position the seat belt away from your neck. Push or squeeze the anchorage button to release the anchorage, and move it up or down to the position that serves you best.



SB0601000073

Adjustable Upper Anchorage

As a guide, if you are shorter than average, you will prefer the shoulder belt anchorage in a lower position, and if you are taller than average, you will prefer the shoulder belt anchorage in a higher position. After you release the anchorage button, try to move it up or down to make sure that it is locked in position.

NOTE:

The adjustable upper shoulder belt anchorage is equipped with an Easy Up feature. This feature allows the shoulder belt anchorage to be adjusted in the upward position without pushing or squeezing the release button. To verify the shoulder belt anchorage is latched, pull downward on the shoulder belt anchorage until it is locked into position.

WARNING!

- Wearing your seat belt incorrectly could make your injuries in a collision much worse. You might suffer internal injuries, or you could even slide out of the

(Continued)

WARNING!

seat belt. Follow these instructions to wear your seat belt safely and to keep your passengers safe, too.

- Position the shoulder belt across the shoulder and chest with minimal, if any slack so that it is comfortable and not resting on your neck. The retractor will withdraw any slack in the shoulder belt.
- Misadjustment of the seat belt could reduce the effectiveness of the safety belt in a crash.
- Always make all seat belt height adjustments when the vehicle is stationary.

Second Row Center Seat Belt Operating Instructions

The second row center seat belt may feature a seat belt with a mini-latch plate and buckle. The mini-latch plate and buckle (if equipped) should remain connected at all times. If the mini-latch plate and buckle become disconnected, they must be properly reconnected prior to the rear center seat belt being used by an occupant.

1. Grab the mini-latch plate and pull the seat belt over the seat.



SB0401000541

Pulling Out The Latch Plate

2. When the seat belt is long enough to fit, insert the mini-latch plate (1) into the mini-buckle (2) until you hear a "click."



SB0201003403

Inserting Mini-Latch Plate Into Mini-Buckle

3. Sit back in seat. Slide the regular latch plate up the webbing as far as necessary to allow the seat belt to go around your lap.
4. When the seat belt is long enough to fit, insert the latch plate into the buckle until you hear a "click."

**Inserting Latch Plate Into Buckle**

5. Position the lap belt so that it is snug and lies low across your hips, below your abdomen. To remove slack in the lap belt portion, pull up on the shoulder belt. To loosen the lap belt if it is too tight, pull on the lap belt. A snug seat belt reduces the risk of sliding under the seat belt in a collision.

**Latch Plate Buckle Inserted**

6. Position the shoulder belt on your chest so that it is comfortable and not resting on your neck. The retractor will withdraw any slack in the seat belt.

7. To release the seat belt, push the red button on the buckle.
8. To disengage the mini-latch plate from the mini-buckle, insert a tool into the pinhole on the mini-buckle.

**Disengaging The Latch Plate From The Buckle****WARNING!**

- If the mini-latch plate and mini-buckle are not properly connected when the seat belt is used by an occupant, the seat belt will not be able to provide proper restraint and will increase the risk of injury in a collision.
- When reattaching the mini-latch plate and mini-buckle, ensure the seat belt webbing is not twisted. If the webbing is twisted, follow the preceding procedure to detach the mini-latch plate and mini-buckle, untwist the webbing, and reattach the mini-latch plate and mini-buckle.


Seat Belt Extender

If a seat belt is not long enough to fit properly, even when the webbing is fully extended and the adjustable upper shoulder belt anchorage (if equipped) is in its lowest position, an authorized dealer can provide you with a Seat Belt Extender. The Seat Belt Extender should be used only if the existing seat belt is not long enough. When the Seat Belt Extender is not required for a different occupant, it must be removed.

WARNING!

- ONLY use a Seat Belt Extender if it is physically required in order to properly fit the original seat belt system. DO NOT USE the Seat Belt Extender if, when worn, the distance between the front edge of the Seat Belt Extender buckle and the center of the occupant's body is LESS than 6 inches.
- Using a Seat Belt Extender when not needed can increase the risk of serious injury or death in a collision. Only use the Seat Belt Extender when the lap belt is not long enough and only use in the recommended seating positions. Remove and store the Seat Belt Extender when not needed.

Seat Belts And Pregnant Women

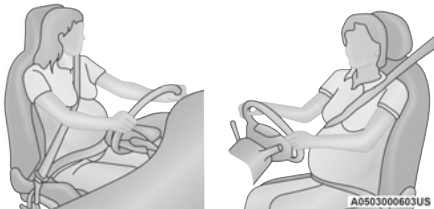

Seat Belts And Pregnant Women

Seat belts must be worn by all occupants including pregnant women: the risk of injury in the event of an accident is reduced for the mother and the unborn child if they are wearing a seat belt.

Position the lap belt snug and low below the abdomen and across the strong bones of the hips. Place the shoulder belt across the chest and away from the neck. Never place the shoulder belt behind the back or under the arm.

Seat Belt Pretensioner

The front and second row outboard seat belt systems are equipped with pretensioning devices that are designed to remove slack from the seat belt in the event of a collision. These devices may improve the performance of the seat belt by removing slack from the seat belt early in a collision. Pretensioners work for all size occupants, including those in child restraints.

NOTE:

These devices are not a substitute for proper seat belt placement by the occupant. The seat belt still must be worn snugly and positioned properly.


The pretensioners are triggered by the Occupant Restraint Controller (ORC). Like the air bags, the pretensioners are single use items. A deployed pretensioner or a deployed air bag must be replaced immediately.

Energy Management Feature

The front and second row outboard seat belt systems are equipped with an Energy Management feature that may help further reduce the risk of injury in the event of a collision. The seat belt system has a retractor assembly that is designed to release webbing in a controlled manner.

Switchable Automatic Locking Retractor (ALR)

The seat belts in the passenger seating positions are equipped with a Switchable Automatic Locking Retractor (ALR) which is used to secure a child restraint system. The figure below illustrates the locking feature for each seating position ➡ page 68.

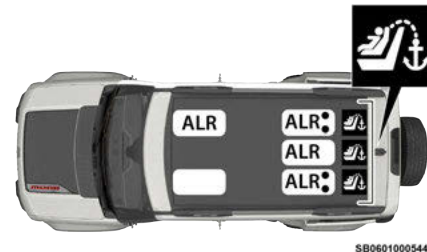

ALR — Switchable Automatic Locking Retractor Locations

If the passenger seating position is equipped with an ALR and is being used for normal usage, only pull the seat belt webbing out far enough to comfortably wrap around the occupant's mid-section so as to not activate the ALR. If the ALR is activated, you will hear a clicking sound as the seat belt retracts. Allow the webbing to retract completely in this case and then carefully pull out only the amount of webbing necessary to comfortably wrap around the occupant's mid-section. Slide the latch plate into the buckle until you hear a "click."

In Automatic Locking Mode, the shoulder belt is automatically pre-locked. The seat belt will still retract to remove any slack in the shoulder belt. Use the Automatic Locking Mode anytime a child restraint is installed in a seating position that has a seat belt with this feature. Children 12 years old and under should always be properly restrained in the rear seat of a vehicle with a rear seat.

WARNING!

- Never place a rear-facing child restraint in front of an air bag. A deploying passenger front air bag can cause death or serious injury to a child 12 years or younger, including a child in a rear-facing child restraint.
- Never install a rear-facing child restraint in the front seat of a vehicle. Only use a rear-facing child restraint in the rear seat. If the vehicle does not have a rear seat, do not transport a rear-facing child restraint in that vehicle.

How To Engage The Automatic Locking Mode

1. Buckle the combination lap and shoulder belt.
2. Grab the shoulder portion and pull downward until the entire seat belt is extracted.
3. Allow the seat belt to retract. As the seat belt retracts, you will hear a clicking sound. This indicates the seat belt is now in the Automatic Locking Mode.

How To Disengage The Automatic Locking Mode

Unbuckle the combination lap/shoulder belt and allow it to retract completely to disengage the Automatic Locking Mode and activate the vehicle sensitive (emergency) locking mode.

WARNING!

- The seat belt assembly must be replaced if the switchable Automatic Locking Retractor (ALR)

(Continued)

WARNING!

- feature or any other seat belt function is not working properly when checked according to the procedures in the Service Manual.
- Failure to replace the seat belt assembly could increase the risk of injury in collisions.
 - Do not use the Automatic Locking Mode to restrain occupants who are wearing the seat belt or children who are using booster seats. The locked mode is only used to install rear-facing or forward-facing child restraints that have a harness for restraining the child.

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

Some of the safety features described in this section may be standard equipment on some models, or may be optional equipment on others. If you are not sure, ask an authorized dealer.

The air bag system must be ready to protect you in a collision. The Occupant Restraint Controller (ORC) monitors the internal circuits and interconnecting wiring associated with the electrical Air Bag System Components. Your vehicle may be equipped with the following Air Bag System Components:

AIR BAG SYSTEM COMPONENTS

- Occupant Restraint Controller (ORC)
- Air Bag Warning Light 
- Steering Wheel and Column
- Instrument Panel

- Knee Impact Bolsters
- Driver and Front Passenger Air Bags
- Seat Belt Buckle Switch
- Supplemental Knee Air Bags
- Supplemental Side Air Bags
- Front and Side Impact Sensors
- Seat Belt Pretensioners
- Seat Track Position Sensors
- Occupant Classification System

AIR BAG WARNING LIGHT

The Occupant Restraint Controller (ORC) monitors the readiness of the electronic parts of the air bag system whenever the start button is in the START or ON/RUN

position. If the start button is in the OFF position, the air bag system is not on and the air bags will not inflate.

The ORC contains a backup power supply system that may deploy the air bag system even if the battery loses power or it becomes disconnected prior to deployment.

The ORC turns on the Air Bag Warning Light in the instrument panel for approximately two to eight seconds for a self-check when the start button is first in the ON/RUN position. After the self-check, the Air Bag Warning Light will turn off. If the ORC detects a malfunction in any part of the system, it turns on the Air Bag Warning Light, either momentarily or continuously. A single chime will sound to alert you if the light comes on again after initial startup.

The ORC also includes diagnostics that will illuminate the instrument panel Air Bag Warning Light if a malfunction is detected that could affect the air bag system. The diagnostics also record the nature of the malfunction. While the air bag system is designed to be maintenance free, if any of the following occurs, have an authorized dealer service the air bag system immediately.

- The Air Bag Warning Light does not come on during the two to eight seconds when the start button is first in the ON/RUN position.
- The Air Bag Warning Light remains on after the two to eight-second interval.
- The Air Bag Warning Light comes on intermittently or remains on while driving.

NOTE:

If the speedometer, tachometer, or any electric motor related gauges are not working, the Occupant Restraint Controller (ORC) may also be disabled. In this condition the air bags may not be ready to inflate for your protection. Have an authorized dealer service the air bag system immediately.

WARNING!

Ignoring the Air Bag Warning Light in your instrument panel could mean you won't have the air bag system to protect you in a collision. If the light does not come on as a bulb check when the start button is first turned on, stays on after you start the vehicle, or if it comes on as you drive, have an authorized dealer service the air bag system immediately.

REDUNDANT AIR BAG WARNING LIGHT



If a fault with the Air Bag Warning Light is detected, which could affect the Supplemental Restraint System (SRS), the Redundant Air Bag Warning Light will illuminate on the instrument panel. The Redundant Air Bag Warning Light will stay on until the fault is cleared. In addition, a single chime will sound to alert you that the Redundant Air Bag Warning Light has come on and a fault has been detected. If the Redundant Air Bag Warning Light comes on intermittently or remains on while driving have an authorized dealer service the vehicle immediately.

FRONT AIR BAGS

This vehicle has front air bags and lap/shoulder belts for both the driver and front passenger. The front air bags are a supplement to the seat belt restraint systems. The driver front air bag is mounted in the center of the steering wheel. The passenger front air bag is mounted in the instrument panel, above the glove compartment. The words "SRS AIRBAG" or "AIRBAG" are embossed on the air bag covers.



Front Air Bag/Knee Bolster Locations

- 1 — Driver Front Air Bag
- 2 — Passenger Front Air Bag
- 3 — Driver Knee Impact Bolster/Supplemental Driver Knee Air Bag

WARNING!

- Being too close to the steering wheel or instrument panel during front air bag deployment could cause serious injury, including death. Air bags need room to inflate. Sit back, comfortably extending your arms to reach the steering wheel or instrument panel.
- Never place a rear-facing child restraint in front of an air bag. A deploying passenger front air bag can cause death or serious injury to a child 12 years or younger, including a child in a rear-facing child restraint.
- Never install a rear-facing child restraint in the front seat of a vehicle. Only use a rear-facing child

(Continued)

WARNING!

restraint in the rear seat. If the vehicle does not have a rear seat, do not transport a rear-facing child restraint in that vehicle.

DRIVER AND PASSENGER FRONT AIR BAG FEATURES

The Advanced Front Air Bag system has multistage driver and front passenger air bags. This system provides output appropriate to the severity and type of collision as determined by the Occupant Restraint Controller (ORC), which may receive information from the front impact sensors (if equipped) or other system components.

The first stage inflator is triggered immediately during an impact that requires air bag deployment. A low energy output is used in less severe collisions. A higher energy output is used for more severe collisions.

This vehicle may be equipped with a driver and/or front passenger seat belt buckle switch that detects whether the driver or front passenger seat belt is buckled. The seat belt buckle switch may adjust the inflation rate of the Advanced Front Air Bags.

This vehicle may be equipped with driver and/or front passenger seat track position sensors that may adjust the inflation rate of the Advanced Front Air Bags based upon seat position.

This vehicle is equipped with a right front passenger Occupant Classification System ("OCS") that is designed to provide Passenger Advanced Front Air Bag

output appropriate to the occupant's seated weight input, as determined by the OCS.

WARNING!

- No objects should be placed over or near the air bag on the instrument panel or steering wheel because any such objects could cause harm if the vehicle is in a collision severe enough to cause the air bag to inflate.
- Do not put anything on or around the air bag covers or attempt to open them manually. You may damage the air bags and you could be injured because the air bags may no longer be functional. The protective covers for the air bag cushions are designed to open only when the air bags are inflating.
- Relying on the air bags alone could lead to more severe injuries in a collision. The air bags work with your seat belt to restrain you properly. In some collisions, air bags won't deploy at all. Always wear your seat belts even though you have air bags.

FRONT AIR BAG OPERATION

Front Air Bags are designed to provide additional protection by supplementing the seat belts. Front air bags are not expected to reduce the risk of injury in rear, side, or rollover collisions. The front air bags will not deploy in all frontal collisions, including some that may produce substantial vehicle damage — for example, some pole collisions, truck underrides, and angle offset collisions.

On the other hand, depending on the type and location of impact, front air bags may deploy in crashes with little vehicle front-end damage but that produce a severe initial deceleration.

Because air bag sensors measure vehicle deceleration over time, vehicle speed and damage by themselves are not good indicators of whether or not an air bag should have deployed.

Seat belts are necessary for your protection in all collisions, and also are needed to help keep you in position, away from an inflating air bag.

When the Occupant Restraint Controller (ORC) detects a collision requiring the front air bags, it signals the inflator units. A large quantity of non-toxic gas is generated to inflate the front air bags.

The steering wheel hub trim cover and the upper passenger side of the instrument panel separate and fold out of the way as the air bags inflate to their full size. The front air bags fully inflate in less time than it takes to blink your eyes. The front air bags then quickly deflate while helping to restrain the driver and front passenger.

KNEE IMPACT BOLSTERS

The knee impact bolsters help protect the knees of the driver and front passenger, and position the front occupants for improved interaction with the front air bags.

WARNING!

- Do not drill, cut, or tamper with the knee impact bolsters in any way.
- Do not mount any accessories to the knee impact bolsters such as alarm lights, stereos, citizen band radios, etc.

OCCUPANT CLASSIFICATION SYSTEM (OCS)**— FRONT PASSENGER SEAT**

The Occupant Classification System (OCS) is part of a Federally regulated safety system for this vehicle. It is designed to provide Passenger Advanced Front Air Bag output appropriate to the occupant's seated weight, as determined by the OCS.

The Occupant Classification System (OCS) consists of the following:

- Occupant Restraint Controller (ORC)
- Occupant Classification Module (OCM) and Sensor located in the front passenger seat
- Air Bag Warning Light 

Occupant Classification Module (OCM) And Sensor

The Occupant Classification Module (OCM) is located underneath the front passenger seat. The Sensor is located beneath the passenger seat cushion foam. Any weight on the seat will be sensed by the Sensor. The OCM uses input from the Sensor to determine the front passenger's most probable classification. The OCM communicates this information to the ORC. The ORC may reduce the inflation rate of the Passenger

Advanced Front Air Bag deployment based on occupant classification. In order for the OCS to operate as designed, it is important for the front passenger to be seated properly and properly wearing the seat belt.

The OCS will NOT prevent deployment of the Passenger Advanced Front Air Bag. The OCS may reduce the inflation rate of the Passenger Advanced Front Air Bag if the OCS estimates that:

- The front passenger seat is unoccupied or has very light objects on it; or
- The front passenger seat is occupied by a small passenger, including a child; or
- The front passenger seat is occupied by a rear-facing child restraint; or
- The front passenger is not properly seated or his or her weight is taken off of the seat for a period of time.

Front Passenger Seat Occupant Status	Front Passenger Air Bag Output
Rear-facing child restraint	Reduced-power deployment
Child, including a child in a forward-facing child restraint or booster seat*	Reduced-power deployment OR Full-power deployment
Properly seated adult	Full-power deployment OR reduced-power deployment

Front Passenger Seat Occupant Status	Front Passenger Air Bag Output
Unoccupied seat	Reduced-power deployment

* It is possible for a child to be classified as an adult, allowing a full-power Passenger Advanced Front Air Bag deployment. Never allow children to ride in the front passenger seat and never install a child restraint system, including a rear-facing child restraint, in the front passenger seat.

WARNING!


- Never place a rear-facing child restraint in front of an air bag. A deploying passenger front air bag can cause death or serious injury to a child 12 years or younger, including a child in a rear-facing child restraint.
- Never install a rear-facing child restraint in the front seat of a vehicle. Only use a rear-facing child restraint in the rear seat. If the vehicle does not have a rear seat, do not transport a rear-facing child restraint in that vehicle.
- Children 12 years or younger should always ride buckled up in the rear seat of a vehicle with a rear seat.

The OCS determines the front passenger's most probable classification. The OCS estimates the seated weight on the front passenger seat and where that weight is located. The OCS communicates the classification status to the ORC. The ORC uses the

classification to determine whether the Passenger Advanced Front Air Bag inflation rate should be adjusted.

In order for the OCS to operate as designed, it is important for the front passenger to be seated properly and properly wearing the seat belt. Properly seated passengers are:

- Sitting upright
- Facing forward
- Sitting in the center of the seat with their feet comfortably on or near the floor
- Sitting with their back against the seatback and the seatback in an upright position

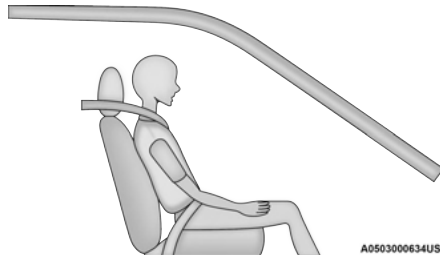

Seated Properly

Lighter Weight Passengers (Including Small Adults)

When a lighter weight passenger, including a small adult, occupies the front passenger seat, the OCS may reduce the inflation rate of the Passenger Advanced Front Air Bag. This does not mean that the OCS is working improperly.

Do not decrease OR increase the front passenger's seated weight on the front passenger seat


The front passenger's seated weight must be properly positioned on the front passenger seat. Failure to do so may result in serious injury or death. The OCS determines the most probable classification of the occupant that it detects. The OCS will detect the front passenger's decreased or increased seated weight, which may result in an adjusted inflation rate of the Passenger Advanced Front Air Bag in a collision. This does not mean that the OCS is working improperly. Decreasing the front passenger's seated weight on the front passenger seat may result in a reduced-power deployment of the Passenger Advanced Front Air Bag. Increasing the front passenger's seated weight on the front passenger seat may result in a full-power deployment of the Passenger Advanced Front Air Bag.

Examples of improper front passenger seating include:


- The front passenger's weight is transferred to another part of the vehicle (like the door, arm rest or instrument panel).
- The front passenger leans forward, sideways, or turns to face the rear of the vehicle.
- The front passenger's seatback is not in the full upright position.
- The front passenger carries or holds an object while seated (e.g., backpack, box, etc.).
- Objects are lodged under the front passenger seat.
- Objects are lodged between the front passenger seat and center console.

- Accessories that may change the seated weight on the front passenger seat are attached to the front passenger seat.
- Anything that may decrease or increase the front passenger's seated weight.


The OCS determines the front passenger's most probable classification. If an occupant in the front passenger seat is seated improperly, the occupant may provide an output signal to the OCS that is different from the occupant's properly seated weight input, for example:

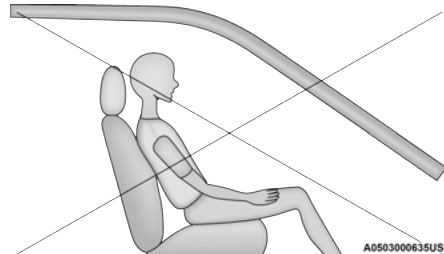


Not Seated Properly

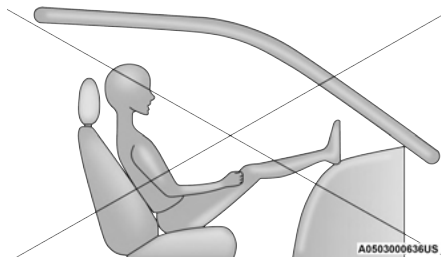

Not Seated Properly

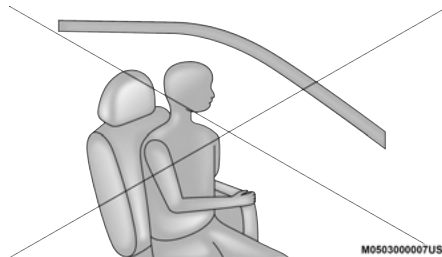

Not Seated Properly

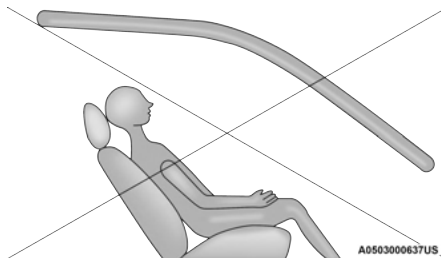

Not Seated Properly

WARNING!

- If a child restraint system, child, small teenager or adult in the front passenger seat is seated improperly, the occupant may provide an output signal to the OCS that is different from the occupant's properly seated weight input. This may result in serious injury or death in a collision.
- Always wear your seat belt and sit properly, with the seatback in an upright position, your back against the seatback, sitting upright, facing forward, in the center of the seat, with your feet comfortably on or near the floor.
- Do not carry or hold any objects (e.g., backpacks, boxes, etc.) while seated in the front passenger seat. Holding an object may provide an output signal to the OCS that is different than the occupant's properly seated weight input, which may result in serious injury or death in a collision.

*(Continued)***WARNING!**

- Placing an object on the floor under the front passenger seat may prevent the OCS from working properly, which may result in serious injury or death in a collision. Do not place any objects on the floor under the front passenger seat.

 The Air Bag Warning Light in the instrument panel will turn on whenever the OCS is unable to classify the front passenger seat status. A malfunction in the OCS may affect the operation of the air bag system.

 If the Air Bag Warning Light does not come on, or stays on after you start the vehicle, or it comes on as you drive, take the vehicle to an authorized dealer for service immediately.

The passenger seat assembly contains critical OCS components that may affect the Passenger Advanced Front Air Bag inflation. In order for the OCS to properly classify the seated weight of a front seat passenger, the OCS components must function as designed. Do not make any modifications to the front passenger seat components, assembly, or to the seat cover. If the seat, trim cover, or cushion needs service for any reason, take the vehicle to an authorized dealer. Only FCA US LLC approved seat accessories may be used.

The following requirements must be strictly followed:

- Do not modify the front passenger seat assembly or components in any way.
- Do not use prior or future model year seat covers or cushions not designated by FCA US LLC for the specific model being repaired. Always use the

correct seat cover and cushion specified for the vehicle.

- Do not replace the seat cover or cushion with an aftermarket seat cover or cushion.
- Do not add a secondary seat cover or mat.
- At no time should any Supplemental Restraint System (SRS) component or SRS related component or fastener be modified or replaced with any part except those which are approved by FCA US LLC.

WARNING!

- Unapproved modifications or service procedures to the passenger seat assembly, its related components, seat cover or cushion may inadvertently change the air bag deployment in case of a frontal collision. This could result in death or serious injury to the front passenger if the vehicle is involved in a collision. A modified vehicle may not comply with required Federal Motor Vehicle Safety Standards (FMVSS) and/or Canadian Motor Vehicle Safety Standards (CMVSS).
- If it is necessary to modify the air bag system for persons with disabilities, contact an authorized dealer.

SUPPLEMENTAL DRIVER KNEE AIR BAG

This vehicle is equipped with a Supplemental Driver Knee Air Bag mounted in the instrument panel below the steering column. The Supplemental Driver Knee Air Bag provides enhanced protection during a frontal

impact by working together with the seat belts, pretensioners, and front air bags.

SUPPLEMENTAL SIDE AIR BAGS

Supplemental Seat-Mounted Side Air Bags (SABs)

This vehicle is equipped with Supplemental Seat-Mounted Side Air Bags (SABs).

Supplemental Seat-Mounted Side Air Bags (SABs) are located in the outboard side of the front and rear (in vehicles equipped with outboard rear seat SABs) seats.

The SABs may help to reduce the risk of occupant injury during certain side impacts, in addition to the injury reduction potential provided by the seat belts and body structure.



Front Supplemental Seat-Mounted Side Air Bag Label

When the SAB deploys, it opens the seam on the outboard side of the seatback's trim cover (front seats) and the seam on the outboard side of the seat cushion's trim cover (outboard rear seats — if equipped

with rear SABs). The inflating SAB deploys through the seat seam into the space between the occupant and the door. The SAB moves at a very high speed and with such a high force that it could injure occupants if they are not seated properly, or if items are positioned in the area where the SAB inflates. Children are at an even greater risk of injury from a deploying air bag.

WARNING!

Do not use accessory seat covers or place objects between you and the Side Air Bags; the performance could be adversely affected and/or objects could be pushed into you, causing serious injury.

Supplemental Side Air Bag Inflatable Curtains (SABICs)

This vehicle is equipped with Supplemental Side Air Bag Inflatable Curtains (SABICs).

Supplemental Side Air Bag Inflatable Curtains (SABICs) are located above the side windows. The trim covering the SABICs is labeled "SRS AIRBAG" or "AIRBAG."



Supplemental Side Air Bag Inflatable Curtain (SABIC) Label Location

SABICs may help reduce the risk of head and other injuries to front and rear seat outboard occupants in certain side impacts, in addition to the injury reduction potential provided by the seat belts and body structure.

The SABIC deploys downward, covering the side windows. An inflating SABIC pushes the outside edge of the headliner out of the way and covers the window. The SABICs inflate with enough force to injure occupants if they are not belted and seated properly, or if items are positioned in the area where the SABICs inflate. Children are at an even greater risk of injury from a deploying air bag.

The SABICs may help reduce the risk of partial or complete ejection of vehicle occupants through side windows in certain side impact events.

WARNING!

- Do not mount equipment, or stack luggage or other cargo up high enough to block the deployment of the SABICs. The trim covering above the side windows where the SABIC and its deployment path are located should remain free from any obstructions.
- In order for the SABICs to work as intended, do not install any accessory items in your vehicle which could alter the roof. Do not add an aftermarket sunroof to your vehicle. Do not add roof racks that require permanent attachments (bolts or screws) for installation on the vehicle roof. Do not drill into the roof of the vehicle for any reason.

Side Impacts

The Side Air Bags are designed to activate in certain side impacts. The Occupant Restraint Controller (ORC) determines whether the deployment of the Side Air Bags in a particular impact event is appropriate, based on the severity and type of collision. The side impact sensors aid the ORC in determining the appropriate response to impact events. The system is calibrated to deploy the Side Air Bags on the impact side of the vehicle during impacts that require Side Air Bag occupant protection. In side impacts, the Side Air Bags deploy independently; a left side impact deploys the left Side Air Bags only and a right-side impact deploys the right Side Air Bags only. Vehicle damage by itself is not a good indicator of whether or not Side Air Bags should have deployed.

The Side Air Bags will not deploy in all side collisions, including some collisions at certain angles, or some side collisions that do not impact the area of the passenger compartment. The Side Air Bags may deploy during angled or offset frontal collisions where the front air bags deploy.

Side Air Bags are a supplement to the seat belt restraint system. Side Air Bags deploy in less time than it takes to blink your eyes.

WARNING!

- Occupants, including children, who are up against or very close to Side Air Bags can be seriously injured or killed. Occupants, including children, should never lean on or sleep against the door, side windows, or area where the side air bags

WARNING!

inflate, even if they are in an infant or child restraint.

- Seat belts (and child restraints where appropriate) are necessary for your protection in all collisions. They also help keep you in position, away from an inflating Side Air Bag. To get the best protection from the Side Air Bags, occupants must wear their seat belts properly and sit upright with their backs against the seats. Children must be properly restrained in a child restraint or booster seat that is appropriate for the size of the child.

WARNING!

- Side Air Bags need room to inflate. Do not lean against the door or window. Sit upright in the center of the seat.
- Being too close to the Side Air Bags during deployment could cause you to be severely injured or killed.
- Relying on the Side Air Bags alone could lead to more severe injuries in a collision. The Side Air Bags work with your seat belt to restrain you properly. In some collisions, Side Air Bags won't deploy at all. Always wear your seat belt even though you have Side Air Bags.

NOTE:

Air bag covers may not be obvious in the interior trim, but they will open during air bag deployment.

(Continued)

AIR BAG SYSTEM COMPONENTS

NOTE:

The Occupant Restraint Controller (ORC) monitors the internal circuits and interconnecting wiring associated with electrical Air Bag System Components listed below:

- Occupant Restraint Controller (ORC)
- Air Bag Warning Light 
- Steering Wheel and Column
- Instrument Panel
- Knee Impact Bolsters
- Driver and Front Passenger Air Bags
- Seat Belt Buckle Switch
- Supplemental Side Air Bags
- Supplemental Knee Air Bags
- Front and Side Impact Sensors
- Seat Belt Pretensioners
- Seat Track Position Sensors
- Occupant Classification System

IF A DEPLOYMENT OCCURS

The front air bags are designed to deflate immediately after deployment.

NOTE:

Front and/or side air bags will not deploy in all collisions. This does not mean something is wrong with the air bag system.

If you do have a collision which deploys the air bags, any or all of the following may occur:

- The air bag material may sometimes cause abrasions and/or skin reddening to the occupants as the air bags deploy and unfold. The abrasions are similar to friction rope burns or those you might get sliding along a carpet or gymnasium floor. They are not caused by contact with chemicals. They are not permanent and normally heal quickly. However, if you haven't healed significantly within a few days, or if you have any blistering, see your doctor immediately.
- As the air bags deflate, you may see some smoke-like particles. The particles are a normal by-product of the process that generates the non-toxic gas used for air bag inflation. These airborne particles may irritate the skin, eyes, nose, or throat. If you have skin or eye irritation, rinse the area with cool water. For nose or throat irritation, move to fresh air. If the irritation continues, see your doctor. If these particles settle on your clothing, follow the garment manufacturer's instructions for cleaning.

Do not drive your vehicle after the air bags have deployed. If you are involved in another collision, the air bags will not be in place to protect you.

WARNING!

Deployed air bags and seat belt pretensioners cannot protect you in another collision. Have the air bags, seat belt pretensioners, and the seat belt retractor assemblies replaced by an authorized dealer immediately. Also, have the Occupant Restraint Controller System serviced as well.

NOTE:

- Air bag covers may not be obvious in the interior trim, but they will open during air bag deployment.
- After any collision, the vehicle should be taken to an authorized dealer immediately.

ENHANCED ACCIDENT RESPONSE SYSTEM

In the event of an impact, if the communication network remains intact, and the power remains intact, depending on the nature of the event, the Occupant Restraint Controller (ORC) will determine whether to have the Enhanced Accident Response System perform the following functions:

- Cut off battery power to the electric motor.
- Flash hazard lights as long as the battery has power.
- Turn on the interior lights, which remain on as long as the battery has power or for 15 minutes from the intervention of the Enhanced Accident Response System.
- Unlock the power door locks.

Your vehicle may also be designed to perform any of these other functions in response to the Enhanced Accident Response System:

- Turn off the HVAC Blower Motor, Close the HVAC Circulation Door
- Cut off battery power to the:
 - Electric Motor
 - Electric Power Steering
 - Brake Booster

- Electric Park Brake
- Gear Selector
- Horn
- Front Wiper

NOTE:

After an accident, remember to cycle to the START or ON/OFF position to avoid draining the battery. Carefully check the vehicle before resetting the system. If there is no damage to the vehicle's electrical devices (e.g. headlights) after an accident, reset the system by following the procedure described below. If you have any doubt, contact an authorized dealer.

ENHANCED ACCIDENT RESPONSE SYSTEM RESET PROCEDURE (EV)

After an event occurs requiring activation of the Enhanced Accident Response System, when the system is active, a "Service Electrical System" message will be displayed on the instrument cluster. The vehicle is not drivable in this state and must be towed to an authorized dealer immediately to be inspected and have the Enhanced Accident Response System reset.

MAINTAINING YOUR AIR BAG SYSTEM

WARNING!

- Modifications to any part of the air bag system could cause it to fail when you need it. You could be injured if the air bag system is not there to protect you. Do not modify the components or

(Continued)

WARNING!

wiring, including adding any kind of badges or stickers to the steering wheel hub trim cover or the upper passenger side of the instrument panel. Do not modify the front fascia/bumper, vehicle body structure, or add aftermarket side steps or running boards.

- It is dangerous to try to repair any part of the air bag system yourself. Be sure to tell anyone who works on your vehicle that it has an air bag system.
- Do not attempt to modify any part of your air bag system. The air bag may inflate accidentally or may not function properly if modifications are made. Take your vehicle to an authorized dealer for any air bag system service. If your seat, including your trim cover and cushion, needs to be serviced in any way (including removal or loosening/tightening of seat attachment bolts), take the vehicle to an authorized dealer. Only manufacturer approved seat accessories may be used. If it is necessary to modify the air bag system for persons with disabilities, contact an authorized dealer.

EVENT DATA RECORDER (EDR)

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short

period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling. The velocity of the vehicle is determined by individual wheel speeds.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. For events in which an air bag or seatbelt pretensioner deploys, the EDR data is recorded and locked, and cannot be overwritten by subsequent events. For all other events in which an EDR is recorded, the EDR data is unlocked and subsequent events may overwrite the EDR data. If all the available EDR locations are filled with locked events, the airbag warning lamp will be illuminated in the instrument cluster. Other conditions may also lead the air bag warning lamp to be illuminated. Please refer to chapter "Supplemental Restraint System (SRS) – Airbags" in this section for further information."

NOTE:

EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. If the EDR cannot be imaged using the OBDII connection port in the vehicle, the Bosch Crash Data Retrieval (CDR) Tool can be directly connected to the Occupant Restraint Control module. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

CHILD RESTRAINTS

Everyone in your vehicle needs to be buckled up at all times, including babies and children. Every state in the United States, and every Canadian province, requires that small children ride in proper restraint systems. This is the law, and you can be prosecuted for ignoring it.

Children 12 years or younger should ride properly buckled up in a rear seat, if available. According to crash statistics, children are safer when properly restrained in the rear seats rather than in the front.

WARNING!

In a collision, an unrestrained child can become a projectile inside the vehicle. The force required to hold even an infant on your lap could become so great that you could not hold the child, no matter how strong you are. The child and others could be badly injured or killed. Any child riding in your vehicle should be in a proper restraint for the child's size.

There are different sizes and types of restraints for children from newborn size to the child almost large enough for an adult safety belt. Always check the child seat Owner's Manual to make sure you have the correct

seat for your child. Carefully read and follow all the instructions and warnings in the child restraint Owner's Manual and on all the labels attached to the child restraint.

Before buying any restraint system, make sure that it has a label certifying that it meets all applicable Safety Standards. You should also make sure that you can install it in the vehicle where you will use it.

NOTE:

- For additional information, refer to <http://www.nhtsa.gov/parents-and-caregivers> or call: 1-888-327-4236
- Canadian residents should refer to Transport Canada's website for additional information: <https://www.tc.gc.ca/en/services/road/child-car-seat-safety.html>

SUMMARY OF RECOMMENDATIONS FOR RESTRAINING CHILDREN IN VEHICLES

	Child Size, Height, Weight Or Age	Recommended Type Of Child Restraint
Infants and Toddlers	Children who are two years old or younger and who have not reached the height or weight limits of their child restraint	Either an Infant Carrier or a Convertible Child Restraint, facing rearward in a rear seat of the vehicle
Small Children	Children who are at least two years old or who have outgrown the height or weight limit of their rear-facing child restraint	Forward-Facing Child Restraint with a five-point Harness, facing forward in a rear seat of the vehicle

	Child Size, Height, Weight Or Age	Recommended Type Of Child Restraint
Larger Children	Children who have outgrown their forward-facing child restraint, but are too small to properly fit the vehicle's seat belt	Belt Positioning Booster Seat and the vehicle seat belt, seated in a rear seat of the vehicle
Children Too Large for Child Restraints	Children 12 years old or younger, who have outgrown the height or weight limit of their booster seat	Vehicle Seat Belt, seated in a rear seat of the vehicle

INFANT AND CHILD RESTRAINTS

Safety experts recommend that children ride rear-facing in the vehicle until they are two years old or until they reach either the height or weight limit of their rear-facing child restraint. Two types of child restraints can be used rear-facing: infant carriers and convertible child seats.

The infant carrier is only used rear-facing in the vehicle. It is recommended for children from birth until they reach the weight or height limit of the infant carrier. Convertible child seats can be used either rear-facing or forward-facing in the vehicle. Convertible child seats often have a higher weight limit in the rear-facing direction than infant carriers do, so they can be used rear-facing by children who have outgrown their infant carrier but are still less than at least two years old. Children should remain rear-facing until they reach the highest weight or height allowed by their convertible child seat.

WARNING!

- Never place a rear-facing child restraint in front of an air bag. A deploying passenger front air bag can cause death or serious injury to a child 12 years or younger, including a child in a rear-facing child restraint.
- Never install a rear-facing child restraint in the front seat of a vehicle. Only use a rear-facing child restraint in the rear seat. If the vehicle does not have a rear seat, do not transport a rear-facing child restraint in that vehicle.

OLDER CHILDREN AND CHILD RESTRAINTS

Children who are two years old or who have outgrown their rear-facing convertible child seat can ride forward-facing in the vehicle. Forward-facing child seats and convertible child seats used in the forward-facing direction are for children who are over two years old or who have outgrown the rear-facing weight or height limit of their rear-facing convertible child seat. Children should remain in a forward-facing child seat with a

harness for as long as possible, up to the highest weight or height allowed by the child seat.

All children whose weight or height is above the forward-facing limit for the child seat should use a belt-positioning booster seat until the vehicle's seat belts fit properly. If the child cannot sit with knees bent over the vehicle's seat cushion while the child's back is against the seatback, they should use a belt-positioning booster seat. The child and belt-positioning booster seat are held in the vehicle by the seat belt.

WARNING!

- Improper installation can lead to failure of an infant or child restraint. It could come loose in a collision. The child could be badly injured or killed. Follow the child restraint manufacturer's directions exactly when installing an infant or child restraint.
- After a child restraint is installed in the vehicle, do not move the vehicle seat forward or rearward because it can loosen the child restraint

(Continued)

WARNING!

attachments. Remove the child restraint before adjusting the vehicle seat position. When the vehicle seat has been adjusted, reinstall the child restraint.

- When your child restraint is not in use, secure it in the vehicle with the seat belt or LATCH anchorages, or remove it from the vehicle. Do not leave it loose in the vehicle. In a sudden stop or accident, it could strike the occupants or seatbacks and cause serious personal injury.

CHILDREN TOO LARGE FOR BOOSTER SEATS

Children who are large enough to wear the shoulder belt comfortably, and whose legs are long enough to bend over the front of the seat when their back is

against the seatback, should use the seat belt in a rear seat. Use this simple 5-step test to decide whether the child can use the vehicle's seat belt alone:

1. Can the child sit all the way back against the back of the vehicle seat?
2. Do the child's knees bend comfortably over the front of the vehicle seat while the child is still sitting all the way back?
3. Does the shoulder belt cross the child's shoulder between the neck and arm?
4. Is the lap part of the belt as low as possible, touching the child's thighs and not the stomach?
5. Can the child stay seated like this for the whole trip?

If the answer to any of these questions was "no," then the child still needs to use a booster seat in this vehicle. If the child is using the lap/shoulder belt, check seat belt fit periodically and make sure the seat belt buckle is latched. A child's squirming or slouching can move the belt out of position. If the shoulder belt contacts the face or neck, move the child closer to the center of the vehicle, or use a booster seat to position the seat belt on the child correctly.

WARNING!

Never allow a child to put the shoulder belt under an arm or behind their back. In a crash, the shoulder belt will not protect a child properly, which may result in serious injury or death. A child must always wear both the lap and shoulder portions of the seat belt correctly.

RECOMMENDATIONS FOR ATTACHING CHILD RESTRAINTS

Restraint Type	Combined Weight of the Child + Child Restraint	Use Any Attachment Method Shown With An "X" Below			
		LATCH – Lower Anchors Only	Seat Belt Only	LATCH – Lower Anchors + Top Tether Anchor	Seat Belt + Top Tether Anchor
Rear-Facing Child Restraint	Up to 65 lb (29.5 kg)	X	X		
Rear-Facing Child Restraint	More than 65 lb (29.5 kg)		X		
Forward-Facing Child Restraint	Up to 65 lb (29.5 kg)			X	X

Restraint Type	Combined Weight of the Child + Child Restraint	Use Any Attachment Method Shown With An "X" Below			
		LATCH – Lower Anchors Only	Seat Belt Only	LATCH – Lower Anchors + Top Tether Anchor	Seat Belt + Top Tether Anchor
Forward-Facing Child Restraint	More than 65 lb (29.5 kg)				X

LOWER ANCHORS AND TETHERS FOR CHILDREN (LATCH) RESTRAINT SYSTEM




022668173

LATCH Label

Your vehicle is equipped with the child restraint anchorage system called LATCH, which stands for Lower Anchors and Tethers for Children. The LATCH system has three vehicle anchor points for installing LATCH-equipped child seats. There are two lower anchorages located at the back of the seat cushion where it meets the seatback and one top tether anchorage located behind the seating position. These anchorages are used to install LATCH-equipped child seats without using the vehicle's seat belts. Some seating positions may have a top tether anchorage but no lower anchorages. In these seating positions, the seat belt must be used with the top tether anchorage to install the child restraint. Please see the following table for more information.

LATCH POSITIONS FOR INSTALLING CHILD RESTRAINTS IN THIS VEHICLE

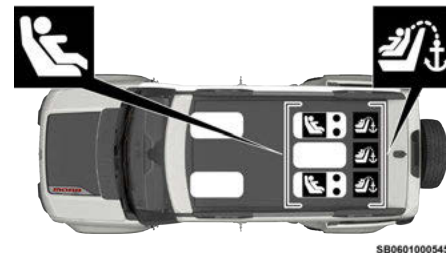

LATCH Positions

 Lower Anchorage Symbol (2 Anchorages Per Seating Position)

 Top Tether Anchorage Symbol

Frequently Asked Questions About Installing Child Restraints With LATCH		
What is the weight limit (child's weight + weight of the child restraint) for using the LATCH anchorage system to attach the child restraint?	65 lb (29.5 kg)	Use the LATCH anchorage system until the combined weight of the child and the child restraint is 65 lb (29.5 kg). Use the seat belt and tether anchor instead of the LATCH system once the combined weight is more than 65 lb (29.5 kg).
Can the LATCH anchorages and the seat belt be used together to attach a rear-facing or forward-facing child restraint?	No	Do not use the seat belt when you use the LATCH anchorage system to attach a rear-facing or forward-facing child restraint. Booster seats may be attached to the LATCH anchorages if allowed by the booster seat manufacturer. See your booster seat owner's manual for more information.
Can a child seat be installed in the center position using the inner LATCH lower anchorages from the outboard seating positions?	Yes	You can install child restraints with flexible lower anchors in the center position. The inner anchorages are 18.5 inches (484 mm) apart. Do not install child restraints with rigid lower anchors in the center position.
Can two child restraints be attached using a common lower LATCH anchorage?	No	Never "share" a LATCH anchorage with two or more child restraints. If the center position does not have dedicated LATCH lower anchorages, use the seat belt to install a child seat in the center position next to a child seat using the LATCH anchorages in an outboard position.
Can the rear-facing child restraint touch the back of the front passenger seat?	Yes	The child seat may touch the back of the front passenger seat if the child restraint manufacturer also allows contact. See your child restraint owner's manual for more information.

Frequently Asked Questions About Installing Child Restraints With LATCH

Can the rear head restraints be removed?

No

The center head restraint can be removed if it interferes with the installation of the child restraint.
For further information, see ➞ page 40.

WARNING!

Always make sure the head restraint is in its upright position when the seat is to be used by an occupant who is not in a child restraint. Sitting in a seat with the head restraint in its lowered position could result in serious injury or death in a collision.

LOCATING THE LATCH ANCHORAGES



The lower anchorages are round bars that are found at the rear of the seat cushion where it meets the seatback, below the anchorage symbols on the seatback. They are just visible when you lean into the rear seat to install the child restraint. You will easily feel them if you run your finger along the gap between the seatback and seat cushion.




Rear LATCH Positions

LOCATING THE UPPER TETHER ANCHORAGES



There are tether strap anchorages behind each rear seating position located on the back of the seat.

Second Row Upper Tether Anchorage Locations

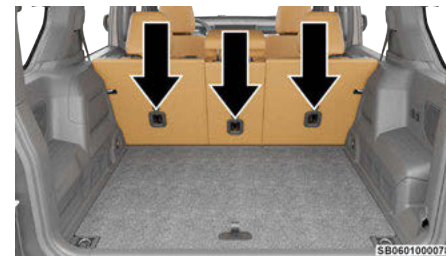

Top Tether Anchorages

LATCH-compatible child restraint systems will be equipped with a rigid bar or a flexible strap on each side. Each will have a hook or connector to attach to the lower anchorage and a way to tighten the connection to the anchorage. Forward-facing child restraints and some rear-facing child restraints will also be equipped with a tether strap. The tether strap will have a hook at the end to attach to the top tether anchorage and a way to tighten the strap after it is attached to the anchorage.

CENTER SEAT LATCH

Do not install child restraints with rigid lower attachments in the center seating position. Only install this type of child restraint in the outboard seating positions. Child restraints with flexible, webbing mounted lower attachments can be installed in any rear seating position.

WARNING!

Never use the same lower anchorage to attach more than one child restraint. If you are installing LATCH-compatible child restraints next to each other, you must use the seat belt for the center position. You can then use either the LATCH anchors or the vehicle's seat belt for installing child seats in the outboard positions.

Please see ➞ page 68 for typical installation instructions.

Always follow the directions of the child restraint manufacturer when installing your child restraint. Not all child restraint systems will be installed as described here.

TO INSTALL A LATCH-COMPATIBLE CHILD RESTRAINT

If the selected seating position has a Switchable Automatic Locking Retractor (ALR) seat belt, stow the seat belt, following the instructions below. See ➞ page 65 to check what type of seat belt each seating position has.

1. Loosen the adjusters on the lower straps and on the tether strap of the child seat so that you can more easily attach the hooks or connectors to the vehicle anchorages.
2. Place the child seat between the lower anchorages for that seating position. If the second row seat can be reclined, you may recline the seat and/or raise the head restraint (if adjustable) to get a better fit. If the rear seat can be moved forward and rearward in the vehicle, you may wish to move it to its rear-most position to make room for the child seat. You may also move the front seat forward to allow more room for the child seat.
3. Attach the lower hooks or connectors of the child restraint to the lower anchorages in the selected seating position.
4. If the child restraint has a tether strap, connect it to the top tether anchorage. See ➞ page 71 for directions to attach a tether anchor.
5. Tighten all of the straps as you push the child restraint rearward and downward into the seat. Remove slack in the straps according to the child restraint manufacturer's instructions.
6. Test that the child restraint is installed tightly by pulling back and forth on the child seat at the belt path. It should not move more than 1 inch (25.4 mm) in any direction.

HOW TO STOW AN UNUSED SWITCHABLE-ALR (ALR) SEAT BELT:

When using the LATCH attaching system to install a child restraint, stow all ALR seat belts that are not

being used by other occupants or being used to secure child restraints. An unused belt could injure a child if they play with it and accidentally lock the seat belt retractor. Before installing a child restraint using the LATCH system, buckle the seat belt behind the child restraint and out of the child's reach. If the buckled seat belt interferes with the child restraint installation, instead of buckling it behind the child restraint, route the seat belt through the child restraint belt path and then buckle it. Do not lock the seat belt. Remind all children in the vehicle that the seat belts are not toys and that they should not play with them.

WARNING!

- Improper installation of a child restraint to the LATCH anchorages can lead to failure of the restraint. The child could be badly injured or killed. Follow the child restraint manufacturer's directions exactly when installing an infant or child restraint.
- Child restraint anchorages are designed to withstand only those loads imposed by correctly-fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

INSTALLING CHILD RESTRAINTS USING THE VEHICLE SEAT BELT

Child restraint systems are designed to be secured in vehicle seats by lap belts or the lap belt portion of a lap/shoulder belt.

Frequently Asked Questions About Installing Child Restraints With Seat Belts

What is the weight limit (child's weight + weight of the child restraint) for using the Tether Anchor with the seat belt to attach a forward-facing child restraint?	Weight limit of the Child Restraint	Always use the tether anchor when using the seat belt to install a forward-facing child restraint, up to the recommended weight limit of the child restraint.
Can the rear-facing child restraint touch the back of the front passenger seat?	Yes	Contact between the front passenger seat and the child restraint is allowed, if the child restraint manufacturer also allows contact.
Can the rear head restraints be removed?	No	The center head restraint can be removed if it interferes with the installation of the child restraint. For further information, see ➞ page 40.
Can the buckle stalk be twisted to tighten the seat belt against the belt path of the child restraint?	No	Do not twist the buckle stalk in a seating position with an ALR retractor.

INSTALLING A CHILD RESTRAINT WITH A SWITCHABLE AUTOMATIC LOCKING RETRACTOR (ALR):

Child restraint systems are designed to be secured in vehicle seats by lap belts or the lap belt portion of a lap/shoulder belt.

WARNING!

- Improper installation or failure to properly secure a child restraint can lead to failure of the restraint. The child could be badly injured or killed.

(Continued)

WARNING!

- Follow the child restraint manufacturer's directions exactly when installing an infant or child restraint.

- Place the child seat in the center of the seating position. If the second row seat can be reclined, you may recline the seat and/or raise the head restraint (if adjustable) to get a better fit. If the rear seat can be moved forward and rearward in the vehicle, you may wish to move it to its rear-most position to make room for the child seat. You may also move the front seat forward to allow more room for the child seat.

- Pull enough of the seat belt webbing from the retractor to pass it through the belt path of the child restraint. Do not twist the belt webbing in the belt path.
- Slide the latch plate into the buckle until you hear a "click."
- Pull on the webbing to make the lap portion tight against the child seat.
- To lock the seat belt, pull down on the shoulder part of the belt until you have pulled all the seat belt webbing out of the retractor. Then, allow the webbing to retract back into the retractor. As the webbing retracts, you will hear a clicking sound. This means the seat belt is now in the Automatic Locking mode.

6. Try to pull the webbing out of the retractor. If it is locked, you should not be able to pull out any webbing. If the retractor is not locked, repeat step 5.
7. Finally, pull up on any excess webbing to tighten the lap portion around the child restraint while you push the child restraint rearward and downward into the vehicle seat.
8. If the child restraint has a top tether strap and the seating position has a top tether anchorage, connect the tether strap to the anchorage and tighten the tether strap. See ➡ page 71 for directions to attach a tether anchor.
9. Test that the child restraint is installed tightly by pulling back and forth on the child seat at the belt path. It should not move more than 1 inch (25.4 mm) in any direction.

Any seat belt system will loosen with time, so check the belt occasionally, and pull it tight if necessary.

INSTALLING CHILD RESTRAINTS USING THE TOP TETHER ANCHORAGE

WARNING!

Do not attach a tether strap for a rear-facing car seat to any location in front of the car seat, including the seat frame or a tether anchorage. Only attach the tether strap of a rear-facing car seat to the tether anchorage that is approved for that seating position, located behind the top of the vehicle seat. See the section "Lower Anchors and Tethers for

(Continued)

WARNING!

Children (LATCH) Restraint System" for the location of approved tether anchorages in your vehicle.



1. Look behind the seating position where you plan to install the child restraint to find the tether anchorage. You may need to move the seat forward to provide better access to the tether anchorage. If there is no top tether anchorage for that seating position, move the child restraint to another position in the vehicle if one is available.
2. Route the tether strap to provide the most direct path for the strap between the anchor and the child seat. If your vehicle is equipped with adjustable rear head restraints, raise the head restraint, and where possible, route the tether strap under the head restraint and between the two posts. If not possible, lower the head restraint and pass the tether strap around the outboard side of the head restraint.
3. Attach the tether strap hook of the child restraint to the top tether anchorage as shown in the diagram.



Rear Seat Tether Strap Mounting

4. Remove slack in the tether strap according to the child restraint manufacturer's instructions.

WARNING!

- An incorrectly anchored tether strap could lead to increased head motion and possible injury to the child. Use only the anchorage position directly behind the child seat to secure a child restraint top tether strap.
- If your vehicle is equipped with a split rear seat, make sure the tether strap does not slip into the opening between the seatbacks as you remove slack in the strap.

STEERING WHEEL AND CONTROLS

TILT/TELESCOPING STEERING COLUMN

This feature allows you to tilt the steering column upward or downward. It also allows you to lengthen or

shorten the steering column. The tilt/telescoping lever is located on the steering column.



Tilt/Telescoping Steering Column Lever

To unlock the steering column, push the control handle downward (toward the floor). To tilt the steering column, move the steering wheel upward or downward as desired. To lengthen or shorten the steering column, pull the steering wheel outward or push it inward as desired. To lock the steering column in position, push the control handle upward until fully engaged.

WARNING!

Do not adjust the steering column while driving. Adjusting the steering column while driving or driving with the steering column unlocked, could cause the driver to lose control of the vehicle. Failure to follow this warning may result in serious injury or death.

HEATED STEERING WHEEL



The steering wheel contains a heating element that helps warm your hands in cold weather. The heated steering wheel has three temperature settings. Once the heated steering wheel has been turned on, it will stay on until the operator turns it off. The heated steering wheel may not turn on when it is already warm.

The heated steering wheel control button is located on the left side of the Front Comfort and Convenience Display below the radio or within the Uconnect system. You can gain access to the control button on the top left side of the screen by tapping the temperature controls, which will provide a quick drop-down menu containing the controls, or through the Controls menu of the touchscreen.

- Press the heated steering wheel button once to turn the HI setting on.
- Press the heated steering wheel button a second time to turn the MED setting on.
- Press the heated steering wheel button a third time to turn the LO setting on.
- Press the heated steering wheel button a fourth time to turn the heating elements off.

NOTE:

Vehicle must be in the ON position for the heated steering wheel to operate.

WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion, or other physical conditions must exercise care when using the steering wheel heater. It may cause burns even at low temperatures, especially if used for long periods.
- Do not place anything on the steering wheel that insulates against heat, such as a blanket or steering wheel covers of any type and material. This may cause the steering wheel heater to overheat.

POWER STEERING

The electric power steering system will provide increased vehicle response and ease of maneuverability. The electric power steering system adapts to different driving conditions.

WARNING!

Continued operation with reduced assist could pose a safety risk to yourself and others. Service should be obtained as soon as possible.

NOTE:

Alternate electric power steering efforts can be selected through the Uconnect System ➞ page 115.



If the Electric Power Steering warning icon is displayed and the "SERVICE POWER STEERING" or the "POWER STEERING ASSIST OFF - SERVICE SYSTEM" message

is displayed within the instrument cluster display, this indicates the vehicle needs to be taken to an authorized dealer for service ➡ page 99.

NOTE:

- Even if the power steering assistance is no longer operational, it is still possible to steer the vehicle. Under these conditions there will be a substantial increase in steering effort, especially at low speeds and during parking maneuvers.
- If the condition persists, see an authorized dealer for service.

If the Steering icon is displayed and the "POWER STEERING SYSTEM OVER TEMP" message is displayed on the instrument cluster screen, they indicate that extreme steering maneuvers may have occurred which caused an over temperature condition in the electric power steering system. Once driving conditions are safe, pull over and let the vehicle idle for a few moments until the icon and message turn off.

START BUTTON

KEYLESS ENTER 'N Go™ PROPULSION SYSTEM ON

This feature allows the driver to operate the vehicle with the push of the Start button as long as the key fob is in the passenger compartment.

Press the Start button to place the vehicle in the ON/RUN position. Press and hold the brake pedal while pushing the Start button for Ready to Drive mode.



Start Button

The Start button can be placed in the following modes:

OFF

- The electric motor is off
- Some electrical devices (e.g. power locks, alarm, power seats, etc.) are still available

ON/RUN

- Some additional electrical devices are available (e.g. power windows, climate controls, radio, etc.)

READY TO DRIVE

- The electric motor will start (when foot is on the brake pedal)
- All electrical devices are available

NOTE:

- If the start button position does not change with a push of the Start button, and the instrument cluster displays a message such as "Key Fob Not Detected", the key fob may have a low or depleted battery.

In this situation, a backup method can be used to operate the start button. Put the nose side of the key fob (side opposite of the emergency key) against the Start button and push to operate the start button.

- Replacement of the key fob battery is recommended.



Depleted Key Fob Battery Procedure

WARNING!

- When exiting the vehicle, always remove the key fob from the vehicle and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle.
- Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector.
- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave the Keyless Enter 'n Go™ Propulsion

(Continued)

WARNING!

System in the ON/RUN position. A child could operate power windows, other controls, or move the vehicle.

- Do not leave children or animals inside parked vehicles in hot weather. Interior heat buildup may cause serious injury or death.

CAUTION!


An unlocked vehicle is an invitation for thieves. Always remove key fob from the vehicle and lock all doors when leaving the vehicle unattended.

NOTE:

- The key fob may not be detected by the vehicle Keyless Enter 'n Go™ system if it is located next to a mobile phone, laptop or other electronic device; these devices may block the key fob's wireless signal and prevent the Keyless Enter 'n Go™ system from starting the vehicle.
- For more information on the vehicle starting procedure, see ➞ page 122.
- When opening the driver's door and the vehicle is in the ON/RUN position (not in "Ready to Drive" mode), a chime will sound to remind you to place the vehicle in the OFF position. In addition to the chime, the message "Vehicle ON" will display in the cluster.

WIPERS AND WASHERS**DESCRIPTION**

The windshield wiper/washer lever is located on the multifunction lever on the left side of the steering column. The front wipers are operated by rotating a switch, located on the end of the lever.

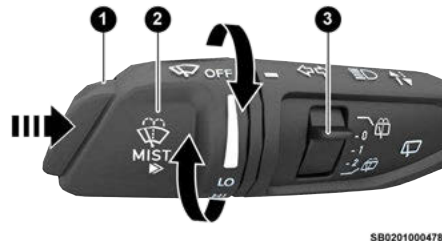**Windshield Wiper Operation**

- 1 — Push End Inward For Washer, Tap For Mist
- 2 — Rotate For Front Wiper Operation
- 3 — Rotate For Rear Wiper Controls

WINDSHIELD WIPER OPERATION**NOTE:**

Prior to activating the wiper system, manually clear excessive and unusually heavy snow/ice from windshield and cowl area.

Rotate the end of the multifunction lever to the first detent, past the intermittent settings, for low-speed

wiper operation, or to the second detent past the intermittent settings for high-speed wiper operation.

CAUTION!

Always remove any buildup of snow that prevents the windshield wiper blades from returning to the parked position. If the windshield wiper switch is turned off, and the blades cannot return to the parked position, damage to the wiper motor may occur.

Intermittent Wiper System

Use the intermittent wiper when weather conditions make a single wiping cycle with a variable pause between cycles desirable. Rotate the switch at the end of the wiper lever to the first detent position, and then turn the switch at the end of the lever to select the desired delay interval. There are four delay settings, which allow you to regulate the wipe interval from a minimum of one second between cycles to a maximum of approximately 18 seconds between cycles. The delay intervals will double in duration when the vehicle speed is 10 mph (16 km/h) or less.

NOTE:

If the vehicle is moving less than 10 mph (16 km/h), delay times will be doubled.

Windshield Washer Operation

To use the washer, push on the end of the lever (toward the steering wheel) and hold. If the lever is pushed while on the intermittent setting, the wipers will turn on and operate for several wipe cycles after the lever is released, and then resume the intermittent interval previously selected. If the lever is pushed while the

wipers are in the off position, the wipers will operate several cycles, then turn off.

NOTE:

- As a protective measure, the pump will stop if the switch is held for more than 20 seconds. Once the switch is released the pump will resume normal operation.
- If the front window washer feature is activated, all of the front cameras (if equipped) on the vehicle will be washed as well.

WARNING!

Sudden loss of visibility through the windshield could lead to a collision. You might not see other vehicles or other obstacles. To avoid sudden icing of the windshield during freezing weather, warm the windshield with the defroster before and during windshield washer use.

Mist

Use the Mist feature when weather conditions make occasional usage of the wipers necessary. Tap the end of the lever to operate the MIST function of the wiper system and release for a single wiping cycle.

NOTE:

- The Mist feature does not activate the washer pump; therefore, no washer fluid will be sprayed on the windshield. The washer function must be used in order to spray the windshield with washer fluid.

REAR WINDOW WIPER/WASHER

A rotary switch on the center portion of the windshield wiper/washer lever controls the operation of the rear wiper/washer function.



Rotate the switch downward to the first detent position for intermittent operation and to the second detent for continuous rear wiper operation.



Rotate the rear washer control to either the intermittent or constant position to activate the rear washer. The washer pump and wiper will continue to operate as long as the lever is held.

NOTE:

- As a protective measure, the washer will stop if the switch is held for more than 20 seconds. Once the switch is released the washer will resume normal operation.
- The rear washer and rear wiper will not function if the rear glass is removed from the vehicle. Once the rear glass is reinstalled the rear washer will resume normal operation.

If the rear wiper is operating when the start button is placed in the OFF position, the wiper will automatically return to the parked position. When the vehicle is restarted, the wiper will resume function at whichever position the switch is set at.

RAIN SENSING WIPERS — IF EQUIPPED

This feature senses rain or snowfall on the windshield and automatically activates the wipers. Rotate the end

of the windshield wiper lever to one of the four detent positions to activate this feature.

The sensitivity of the system is adjustable from the windshield wiper lever. Wiper sensitivity position 1 is the least sensitive, and wiper sensitivity position 4 is the most sensitive.

NOTE:

- The Rain Sensing feature will not operate when the wiper switch is in the low or high position.
- The Rain Sensing feature may not function properly when ice or dried saltwater is present on the windshield.
- Use of products containing wax or silicone may reduce rain sensor performance.
- The Rain Sensing feature can be turned on and off through the Uconnect system ➡ page 115.

The Rain Sensing system has protective features for the wiper blades and arms. It will not operate under the following conditions:

- **Low Temperature Wipe Inhibit** — The Rain Sensing feature will not operate when the start button is first placed in the ON position, when the vehicle is stationary and the outside temperature is below 32°F (0°C), unless the wiper control on the windshield wiper lever is moved, the vehicle speed becomes greater than 3 mph (5 km/h) or the outside temperature rises above freezing.
- **Neutral Wipe Inhibit** — The Rain Sensing feature will not operate when the start button is ON, when the gear selector is in the NEUTRAL position and the vehicle speed is less than 3 mph (5 km/h), unless the wiper control on the windshield wiper lever is

moved, the vehicle speed is greater than 3 mph (5 km/h) or the gear selector is moved out of the NEUTRAL position.

- **Remote Start Mode Inhibit** — On vehicles equipped with the Remote Start system, Rain Sensing wipers are not operational when the vehicle is in the Remote Start mode. Once the operator is in the vehicle and has placed the start button in the ON/RUN position, rain sensing wiper operation can resume, if it has been selected, and no other inhibit conditions (mentioned previously) exist.

EXTERIOR LIGHTS

HEADLIGHT SWITCH

The headlight switch is located on the left side of the instrument panel, next to the steering wheel. The headlight switch controls the operation of the headlights, parking lights, instrument panel lights, and fog lights (if equipped).



SB0201000773

Headlight Switch

- 1 — Headlight On/Off Button
- 2 — AUTO Headlight Control
- 3 — Parking Lights
- 4 — Front Fog Light Control
- 5 — Instrument Panel Dimmer Control

NOTE:

Vehicles sold in Canada have headlights that will be deactivated when the headlight switch is placed in the parking lights position. However, the Daytime Running Lights (DRLs) will be activated along with the front and rear marker lights. The DRLs may be deactivated when the parking brake is engaged.

To turn on the headlights, press the Headlight On/Off button. When the headlight switch is on, the parking lights, taillights, license plate light and instrument panel lights are also turned on. To turn off the headlights, press the Headlight On/Off button a second time.

NOTE:

- Your vehicle is equipped with plastic headlight and fog light (if equipped) lenses that are lighter and less susceptible to stone breakage than glass lights. Plastic is not as scratch resistant as glass and therefore different lens cleaning procedures must be followed.
- To minimize the possibility of scratching the lenses and reducing light output, avoid wiping with a dry cloth. To remove road dirt, wash with a mild soap solution followed by rinsing.

CAUTION!

Do not use abrasive cleaning components, solvents, steel wool or other abrasive materials to clean the lenses.

MULTIFUNCTION LEVER

The multifunction lever is located on the left side of the steering column.



SB0201000397

Multifunction Lever

DAYTIME RUNNING LIGHTS (DRLs)

The Daytime Running Lights (DRLs) come on whenever the electric motor is running, and the low beams are not on. The lights will remain on until the start button is placed in the OFF or ON/RUN position, or the parking brake is engaged. The headlight switch must be used for normal nighttime driving.

NOTE:

- For vehicles sold in Canada, the Daytime Running Lights will automatically deactivate when the front fog lights are turned on.
- If allowed by law in the country in which the vehicle was purchased, the Daytime Running Lights can be turned on and off using the Uconnect system ➡ page 115.
- On some vehicles, the Daytime Running Lights may deactivate, or reduce intensity, on one side of the vehicle (when a turn signal is activated on that side),

or on both sides of the vehicle (when the hazard warning lights are activated).

HIGH/LOW BEAM SWITCH

Push the multifunction lever toward the instrument panel to switch the headlights to high beams. The multifunction lever will return to neutral upon activating the high beams. Pulling or pushing the multifunction lever will shut the high beams off.

AUTOMATIC HIGH BEAMS — IF EQUIPPED

The Automatic High Beam Headlight system provides increased forward lighting at night by automating high beam control through the use of a digital camera mounted on to the windshield. When the high beams are switched on, this camera detects environmental lighting conditions and automatically switches from high beams to low beams until the approaching vehicle is out of view.

NOTE:

- The Automatic High Beam Headlamp Control can be turned on or off by selecting or deselecting “Auto Dim High Beam” within Uconnect Settings, as well as by pressing the AUTO button.
- Press the AUTO button after Automatic High Beams is enabled within Uconnect Settings for the feature to activate.
- Automatic High Beams will only activate when the vehicle speed is above 24 mph (40 km/h).
- Broken, muddy, or obstructed headlights and taillights of vehicles in the field of view will cause headlights to remain on longer (closer to the vehicle). Also, dirt, film, and other obstructions on

the windshield or camera lens will cause the system to function improperly.

- If the windshield or Automatic High Beam Headlamp Control camera is replaced, the camera must be re-aimed to ensure proper performance. See a local authorized dealer.

FLASH-TO-PASS

You can signal another vehicle with your headlights by lightly pulling the multifunction lever toward you. This will cause the high beam headlights to turn on, and remain on, until the lever is released.

AUTOMATIC HEADLIGHTS

This system automatically turns the headlights on or off according to ambient light levels. The vehicle defaults to AUTO whenever the vehicle is turned on and will be illuminated. When the system is on, the headlight time delay feature is also on. This means the headlights will stay on for up to 90 seconds after placing the start button in the OFF position. The headlight time delay can be programmed up to 90 seconds within Uconnect Settings.

To turn the automatic system off, press any other button on the headlight switch bank.

NOTE:

The vehicle must be on before the headlights will come on in the automatic mode.

PARKING LIGHTS AND PANEL LIGHTS

To turn on the parking lights and instrument panel lights, press the headlight control button. To turn off

the parking lights, press the headlight control button a second time.

NOTE:

Vehicles sold in Canada are equipped with a headlight switch with an AUTO and ON detent but without an OFF detent. Headlights will be deactivated when the headlight switch is placed in the parking lights position. However, the Daytime Running Lights (DRLs) will be activated along with the front and rear marker lights. The DRLs may be deactivated when the parking brake is engaged.

HEADLIGHTS ON AUTOMATICALLY WITH WIPERS

If your vehicle is equipped with Automatic Headlights, it also has this customer-programmable feature. When your headlights are in the automatic mode and the electric motor is running, they will automatically turn on when the wiper system is on. This feature is programmable through the Uconnect system.

NOTE:

When your headlights come on during the daytime, the vehicle will monitor outside brightness and decide if the instrument panel needs to be dimmed or not.

HEADLIGHT DELAY

To aid in your exit, your vehicle is equipped with a headlight delay that will leave the headlights on for approximately 90 seconds. This delay is initiated when the start button is placed in the OFF position while the headlight switch is on, and then the headlight switch is cycled off. Headlight delay can be canceled by either

turning the headlight switch on then off, or by placing the vehicle in the ON position.

NOTE:

The headlight delay time is programmable through Unconnect Settings.

LIGHTS-ON REMINDER

If the headlights, parking lights, or cargo lights are left on after the start button is placed in the OFF position, a chime will sound when the driver's door is opened.

FOG LIGHTS

To activate the front fog lights, turn on the parking lights or the low beam headlights, and push the fog light button on the headlight switch.



Fog Light Button

The fog lights will operate only when the parking lights are on, or when the vehicle headlights are on low beam. An indicator light located in the instrument cluster display will illuminate when the fog lights are on. The fog lights will turn off when the button is pushed a

second time, when the headlight switch is switched to the off position, or the high beam is selected.

TURN SIGNALS

Move the multifunction lever up or down to activate the turn signals. The arrows on each side of the instrument cluster flash to show proper operation.

NOTE:

If either light remains on and does not flash, or there is a very fast flash rate, check for a defective outside light bulb.

LANE CHANGE ASSIST — If EQUIPPED

Tap the multifunction lever up or down once, without moving beyond the detent, and the turn signal (right or left) will flash three times then automatically turn off.

NOTE:

For information on Turn Signal Activated Blind Spot Assist, see ➡ page 174.

AUTOMATIC HEADLIGHT LEVELING — If EQUIPPED

This feature prevents the headlights from interfering with the vision of oncoming drivers. Headlight leveling automatically adjusts the height of the headlight beam in reaction to changes in vehicle pitch.

BATTERY SAVER

To protect the life of your vehicle's battery, load shedding is provided for both the interior and exterior lights.

If the vehicle is placed in the OFF position and any door is left ajar for 10 minutes or if the overhead console Dome ON switch is pressed, and the interior lights are on for 10 minutes, the interior lights will automatically turn off.

NOTE:

Battery saver mode is canceled if the vehicle is in the ON position.

If the headlights remain on while the vehicle is placed in the OFF position, the exterior lights will automatically turn off after eight minutes. If the headlights are turned on and left on for eight minutes while the vehicle is in the OFF position, the exterior lights will automatically turn off.

INTERIOR LIGHTS

COURTESY LIGHTS

Courtesy and dome lights are turned on when the front doors are opened or the Dome ON button is pushed on the overhead console. If your vehicle is equipped with Remote Keyless Entry and the unlock button is pushed on the key fob, the courtesy and dome lights will turn on. When a door is open and the interior lights are on, pressing the Dome Defeat button on the overhead console will cause all of the interior lights to turn off. This allows the doors to stay open for extended periods of time without discharging the vehicle's battery.

Front Map/Reading Lights

The overhead console lights can also be operated individually as reading lights by pushing the corresponding buttons.



Courtesy Lights

- 1 — Driver Reading Light On/Off Button
- 2 — Dome Defeat Button
- 3 — Ambient Light
- 4 — Dome ON Button
- 5 — Passenger Reading Light On/Off Button

Rear Courtesy/Reading Lights

Located above the rear passenger seating in the second row, along the trim, are courtesy/reading lights. The courtesy lights turn on when a door or the swing gate is opened. The lights will also turn on when the unlock button on the key fob is pushed.

The courtesy lights also function as reading lights. Push the lens button to turn these lights on while inside the vehicle. Push the lens button a second time to turn each light off.

DIMMER CONTROLS

The dimmer controls are inboard and adjacent to the headlight switch located on the left side of the instrument panel.

With the parking lights or headlights on, rotating the right dimmer control upward will increase the brightness of the instrument cluster lights. Rotating the left dimmer control will adjust the interior light levels of the ambient lighting on the instrument panel and doors. The ambient lighting may be color customizable through your Uconnect Settings ➞ page 79.



Dimmer Controls

NOTE:

- Ambient lighting in the second row seating area may not be equipped in the vehicle.
- The dimming of the touchscreen is programmable through the Uconnect system ➞ page 115.

MULTICOLOR AMBIENT LIGHTING — If EQUIPPED

The color of certain ambient lighting inside of the vehicle can be selected within the Apps menu on the radio screen, or within Uconnect Settings. Brightness is adjusted using the ambient light dimmer control on the headlight switch.

64 colors can be selected for the instrument panel decorative ambient lights.

NOTE:

All other ambient lighting inside of the vehicle will remain white, and the ambient light dimmer control switch will adjust all ambient lighting at the same time.

ROOF SYSTEMS

POWER SLIDING TOP — If EQUIPPED

The power power sliding top switch is located on the overhead console between the courtesy/reading lights.



Power Sliding Top Control Switch

NOTE:

- The power top is non-removable. If desired, the rear quarter windows can be removed and stored in the provided storage bag.

- The power top will not open in temperatures below 4°F (-20°C). However, if it is opened at a higher temperature, it can be closed at temperatures above -40°F (-40°C).
- The power top will not operate at vehicle speeds above 60 mph (96 km/h).

NOTE:

A slight pause in audio may be heard when opening and closing the Power Sliding Top as a result of the Uconnect system switching between power top Closed and power top Open audio modes.

WARNING!

- Never leave children unattended in a vehicle, or with access to an unlocked vehicle. Never leave the key fob in or near the vehicle, or in a location accessible to children. Do not leave the Keyless Enter 'n Go™ Propulsion System in the ACC or ON/RUN position. Occupants, particularly unattended children, can become entrapped by the power top while operating the power top switch. Such entrapment may result in serious injury or death.
- In a collision, there is a greater risk of being thrown from a vehicle with an open power top. You could also be seriously injured or killed. Always fasten your seat belt properly and make sure all passengers are also properly secured.
- Do not allow small children to operate the power top. Never allow your fingers, other body parts, or any object, to project through the power top opening. Injury may result.

Pinch Protect Feature

This feature will detect an obstruction in the opening of the power top during Express Close operation. If an obstruction in the path of the power top is detected, the power top will automatically retract. Remove the obstruction if this occurs. Next, push the close switch and release to Express Close.

WARNING!

There is no anti-pinch protection when the power top is almost closed. To avoid personal injury be sure to clear your arms, hands, fingers and all objects from the top's path before closing.

NOTE:

- The Power Sliding Top may reverse motion if closing during a severe headwind. If this occurs, push and hold the Power Sliding Top switch again to close the top completely.
- If three consecutive power top close attempts result in Pinch Protect reversals, Pinch Protect will disable and the power top must be closed in Manual Mode.

Opening And Closing The Power Top**Express Open/Close**

To open the power top, push the open switch and release it within one-half second. The power top will open to the comfort stop position and stop automatically. Push and release open again to continue to the full open position.

To close the power top, push the close switch and release it within one-half second. The power top will close automatically from any position.

During Express Open or Express Close operation, any other actuation of the power top switch will stop the power top.

Manual Open/Close

To open the power top manually, push and hold the open switch to the full open position, then release.

To close the power top manually, push and hold the close switch to the fully closed position, then release.

Any release of the switch during open or close operation will stop the power top movement. The top will remain in a partially opened position until the switch is operated and held again.

Power Top Maintenance

For important information on cleaning and caring for your vehicle see ➞ page 253.

Power Button Off Operation

The power top switch can remain active in Accessory Delay for up to approximately 10 minutes after the vehicle's start button is placed to the OFF position. Opening either front door will cancel this feature.

NOTE:

Start button Off time is programmable through the Uconnect system ➞ page 115.

Relearn Procedure

For vehicles equipped with a power top, there is a relearn procedure that allows you to calibrate the power

top when the “Express Mode” stops working. To reset the power top, follow these steps:

1. Place the start button in the RUN position, and start the vehicle.
- NOTE:**
The electric motor must be running to perform the relearn procedure.
2. Ensure the power top is in the fully closed position.
 3. Push and hold the Close switch for 25 seconds. This will put the power top into calibration mode.
 4. Continue holding down the close button while the top goes fully open, back to fully close and then to a partial open position.
 5. Once the power top has stopped in the partially open position, release the close button. The power top is now reset and ready to use.

NOTE:

- If the close button is released anytime during the relearning process, the relearn may not be complete, and the procedure must be repeated.
- The power top must be relearned or calibrated with an ambient outside temperature between 41 °F and 118 °F (5 °C to 48 °C). Calibration attempts performed outside of this temperature range will fail. The temperature displayed on the instrument cluster must be used for reference.

POWER SUNROOF — IF EQUIPPED

Dual Pane Power Sunroof — If Equipped

The power sunroof switches are located on the overhead console between the courtesy/reading lights.



Power Sunroof Switches

- 1 — Opening/Closing Sunroof
- 2 — Venting Sunroof
- 3 — Opening/Closing Sunshade

WARNING!

- Never leave children unattended in a vehicle, or with access to an unlocked vehicle. Never leave the key fob in or near the vehicle, or in a location accessible to children. Do not leave the Keyless Enter 'n Go™ Propulsion System in the ON/RUN position. Occupants, particularly unattended children, can become entrapped by the power sunroof while operating the power

(Continued)

WARNING!

sunroof switch. Such entrapment may result in serious injury or death.

- In a collision, there is a greater risk of being thrown from a vehicle with an open sunroof. You could also be seriously injured or killed. Always fasten your seat belt properly and make sure all passengers are also properly secured.
- Do not allow small children to operate the sunroof. Never allow your fingers, other body parts, or any object, to project through the sunroof opening. Injury may result.

Opening And Closing The Sunroof

The sunroof has two programmed automatic stops for the sunroof open position: a comfort stop position and a full open position. The comfort stop position will minimize wind buffeting in the interior.

Express Open/Close

To open the sunroof, push OPEN on the sunroof switch and release it within one-half second. The sunroof will open to the comfort stop position and stop automatically. Push and release OPEN again to continue to the full open position.

To close the sunroof, push CLOSE on the sunroof switch and release it within one-half second. The sunroof will close automatically from any position.

During Express Open or Express Close operation, any other actuation of the sunroof switch will stop the sunroof.

Manual Open/Close

To open the sunroof, push and hold OPEN on the sunroof switch. The sunroof will open to the comfort stop position, then automatically stop. Release the switch then push and hold again to continue to the full open position.

To close the sunroof, push and hold CLOSE on the sunroof switch.

Any release of the switch during open or close operation will stop the sunroof movement in a partially open position.

Express Venting The Sunroof

To vent the sunroof, push TILT on the vent switch and release within one half second. The sunroof will open to the vent position regardless of its initial position. During Express Vent operation, any other actuation of the switch will stop the sunroof.

NOTE:

If the sunshade is in the closed position when Express/Manual Open or Vent operation is initiated, the sunshade will automatically open to the half open position prior to the sunroof opening.

Opening And Closing The Power Sunshade

The sunshade has two programmed open positions: half open and full open positions. When operating the sunshade from the closed position, the sunshade will always stop at the half open position regardless of express or manual open operation. The switch must be pushed again to continue on to full open position.

If the sunroof is open or vented, the sunshade cannot be closed beyond the half open position. Pushing the sunshade close switch when the sunroof is open/vented and the sunshade is at half open position will first automatically close the sunroof prior to the sunshade closing.

Express Open/Close

To open the sunshade, push OPEN on the sunshade switch and release it within one-half second, the sunshade will open to the half open position and stop automatically. Push and release OPEN again to continue to open the sunshade to the full open position.

To close the sunshade, push CLOSE on the sunshade switch and release it within one-half second.

During Express Open or Express Close operation, any other actuation of the sunroof switches will stop the sunshade in a partially open position.

Manual Open/Close

To open the sunshade, push and hold OPEN on the sunshade switch, the sunshade will open to the half open position and stop automatically. Push and hold OPEN again to continue to open the sunshade to the full open position.

To close the sunshade, push and hold CLOSE on the sunshade switch.

Releasing the switch while the sunshade is in motion will stop the sunshade in a partially open position.

Pinch Protect Feature

This feature will detect an obstruction in the opening of the sunroof during Express Close operation. If an

obstruction in the path of the sunroof is detected, the sunroof will automatically retract. Remove the obstruction if this occurs.

NOTE:

If three consecutive sunroof close attempts result in Pinch Protect reversals, Pinch Protect and Express Mode operation will disable. The sunroof must be closed using Manual Mode to re-enable these features.

Power Button Off Operation

The power sunroof switch will remain active for up to approximately 10 minutes after the start button is placed in the OFF position. Opening either front door will cancel this feature.

NOTE:

Start button Off timing is programmable through the Uconnect system ➡ page 115.

Sunroof Maintenance

Use only a non-abrasive cleaner and a soft cloth to clean the glass panel. Periodically check for and clear out any debris that may have collected in the tracks.

ROOF LUGGAGE RACK — IF EQUIPPED

The load carried on the roof, when equipped with a luggage rack, must not exceed 100 lb (45 kg), this includes the weight of the crossbars, and it should be uniformly distributed over the cargo area.

Crossbars should always be used whenever cargo is placed on the roof rack. Check the straps frequently to be sure that the load remains securely attached.

NOTE:

Crossbars can be purchased at an authorized dealer through Mopar® parts.

External racks do not increase the total load carrying capacity of the vehicle. Be sure that the total occupant and luggage load inside the vehicle, plus the load on the luggage rack, does not exceed the maximum vehicle load capacity.

WARNING!

Cargo must be securely tied down before driving your vehicle. Anything improperly secured to the roof rack, crossbars, or the roof itself can fly off the vehicle, particularly at high speeds, resulting in collisions, personal injury or property damage. Follow the roof rack cautions when carrying anything on your roof or roof rack.

CAUTION!

- To avoid damage to the roof rack and vehicle, do not exceed the maximum roof rack load capacity. Always distribute heavy loads as evenly as possible and appropriately secure the load and any protective layer placed between the load and the roof surface.
- Long loads, which extend over the windshield, should be secured to both the front and rear of the vehicle.
- Place a blanket or other protection between the surface of the roof and the load.

(Continued)

CAUTION!

- Travel at reduced speeds and turn corners carefully when carrying large or heavy loads on the roof rack. Wind forces, due to natural causes or nearby truck traffic, can add sudden upward lift. It is recommended to not carry large flat loads, such as wood panels or surfboards, which may result in damage to the cargo or your vehicle.
- Load should always be secured to crossbars first, with tie down loops used as additional securing points if needed. Tie loops are intended as supplementary tie down points only. Do not use ratcheting mechanisms with the tie loops. Check the straps frequently to be sure that the load remains securely attached.

UNIVERSAL GARAGE DOOR OPENER (HOMELINK®) — IF EQUIPPED

DESCRIPTION



HomeLink® Buttons On Sun Visor

Scan this QR code to learn more about HomeLink® (Garage Door Opener).



- HomeLink® replaces up to three hand-held transmitters that operate devices such as garage door openers, motorized gates, lighting, or home security systems. The HomeLink® unit is powered by your vehicle's 12 Volt battery.
- The HomeLink® buttons that are located in the overhead console or sunvisor designate the three different HomeLink® channels.

- To operate HomeLink®, push and release any of the programmed HomeLink® buttons. These buttons will activate the devices they are programmed to with each press of the corresponding HomeLink® button.
- The HomeLink® indicator light is located above the center button.

NOTE:

HomeLink® is disabled when the Vehicle Security system is active ➡ page 265.

BEFORE YOU BEGIN PROGRAMMING HOMELINK®

For efficient programming and accurate transmission of the Radio Frequency (RF) signal, it is recommended that a new battery be placed in the hand-held transmitter of the device that is being programmed to the HomeLink® system. Make sure your hand-held transmitter is programmed to activate the device you are trying to program your HomeLink® button to.

Ensure that your vehicle is parked outside of the garage, facing the garage door opener receiver, before you begin programming. The ignition should be in the ON/RUN position.

It is recommended that you erase all the channels of your HomeLink® before you use it for the first time. See "Erasing All The HomeLink® Channels" for more information ➡ page 84.

ERASING ALL THE HOMELINK® CHANNELS

To erase the channels, follow this procedure:

1. Place the ignition switch in the ON/RUN position.

2. Press and hold the outer two HomeLink® buttons (1 and 3) simultaneously for approximately 10 seconds until the indicator lights above the HomeLink® buttons flashes green rapidly, then release both buttons.

NOTE:

Erasing all channels should only be performed when programming HomeLink® for the first time. Do not erase channels when programming additional buttons.

IDENTIFYING WHETHER YOU HAVE A ROLLING CODE OR NON-ROLLING CODE DEVICE

Before programming a device to one of your HomeLink® buttons, you must determine whether the device has a rolling code or non-rolling code.

Rolling Code Devices

To determine if your device has a rolling code, a good indicator is its manufacturing date. Typically, devices manufactured after 1995 have rolling codes. A device with a rolling code will also have a "Learn", "Program", "Smart", or "Train" button located on the back of the garage door opener motor. The button may not be immediately visible when looking at the device. The name and color of the button may vary slightly by manufacturer.

NOTE:

The "Learn", "Program", "Smart", or "Train" button is not the button you normally use to operate the device.

Non-rolling Code Devices

Most devices manufactured before 1995 will not have a rolling code. These devices will also not have a "Learn",

"Program", "Smart", or "Train" button. These devices generally have switches on the garage door opener motor and hand-held transmitter that have to be set in the same sequence.

PROGRAMMING HOMELINK® TO A GARAGE DOOR OPENER

WARNING!

- Your motorized door or gate will open and close while you are programming the universal transmitter. Do not program the transmitter if people or pets are in the path of the door or gate.
- Do not run your vehicle in a closed garage or confined area while programming the transmitter. Exhaust gas from your vehicle contains carbon monoxide which is odorless and colorless. Carbon monoxide is poisonous when inhaled and can cause you and others to be severely injured or killed.

To program any of the HomeLink® buttons to activate your garage door opener motor, proceed as follows:

NOTE:

All HomeLink® buttons are programmed using this procedure. You do not need to erase all channels when programming additional buttons.

1. Place the ignition switch in the ON/RUN position.
2. Place the garage door opener transmitter 1 to 3 inches (3 to 8 cm) away from the HomeLink® button you wish to program, while keeping the HomeLink® indicator light in view. Press and

release the HomeLink® button you wish to program.

3. Press and hold the button on the hand-held transmitter when the HomeLink® LED begins flashing orange slowly.
4. Once the LED changes from slow flashing orange to rapid flashing green, release the button for 3 seconds. Repeat this sequence slowly up to three times to complete the programming.
 - If the LED indicator is solid green, the programming is complete and the device should operate when the HomeLink® button is pressed and released.
 - If the LED indicator flashes green rapidly and the device operates when the HomeLink® button is pressed and released, the programming is complete.
 - If the LED flashes green rapidly but the device does not operate, continue to the next steps to complete the rolling code synchronization.

NOTE:

Make sure the garage door opener motor is plugged in before moving on to the rolling code final steps.

Rolling Code Garage Door Opener Final Steps

NOTE:

Make sure the garage door opener motor is plugged in before moving on to the rolling code final steps.

1. At the garage door opener motor (in the garage), locate the "Learn", "Program", "Smart", or "Train" button. This can usually be found where the hanging antenna wire is attached to the garage

door opener motor. Firmly push and release the "Learn", "Program", "Smart", or "Train" button.

2. Return to the vehicle and push the programmed HomeLink® button three times (holding the button for three seconds each time). If the garage door opener motor operates, programming is complete.
3. Return to the vehicle. Press and hold the HomeLink® button for 3 seconds, the release for 3 seconds. Repeat this sequence slowly up to three times to complete the programming.

PROGRAMMING HOME LINK® TO A MISCELLANEOUS DEVICE

The procedure on how to program HomeLink® to a miscellaneous device follows the same procedure as programming to a garage door opener ➞ page 84. Be sure to determine if the device has a rolling code, or non-rolling code before beginning the programming process.

NOTE:

Canadian Radio Frequency (RF) laws require transmitter signals to time-out (or quit) after several seconds of transmission, which may not be long enough for HomeLink® to pick up the signal during programming. Similar to this Canadian law, some U.S. gate operators are designed to time-out in the same manner. The procedure may need to be performed multiple times to successfully pair the device to your HomeLink® buttons.

REPROGRAMMING A SINGLE HOME LINK® BUTTON

To reprogram a single HomeLink® button that has been previously trained, without erasing all the channels, proceed as follows. Be sure to determine whether the new device you want to program the HomeLink® button to has a rolling code, or non-rolling code.

1. Place the ignition in the ON/RUN position, without starting the vehicle.
2. Push and hold the desired HomeLink® button until the HomeLink® indicator light begins to flash orange slowly after 20 seconds. **Do not release the button.**
3. **Without releasing the button**, proceed with Step 2 in "Programming HomeLink® To A Garage Door Opener" and follow all remaining steps.

CANADIAN/GATE OPERATOR PROGRAMMING

For programming transmitters in Canada/United States that require the transmitter signals to "time-out" after several seconds of transmission:

Canadian Radio Frequency (RF) laws require transmitter signals to time-out (or quit) after several seconds of transmission, which may not be long enough for HomeLink® to pick up the signal during programming. Similar to this Canadian law, some U.S. gate operators are designed to time-out in the same manner.

It may be helpful to unplug the device during the cycling process to prevent possible overheating of the garage door or gate motor.

NOTE:

For vehicles equipped with Keyless Enter 'n Go™, place the ignition in the ACC or ON/RUN position. Make sure while programming HomeLink® with the engine on that your vehicle is outside of your garage, or that the garage door remains open at all times.

1. Place the ignition in the ACC or ON/RUN position.
2. Place the hand-held transmitter 1 to 3 inches (3 to 8 cm) away from the HomeLink® button you wish to program while keeping the HomeLink® indicator light in view.
3. Press and release the HomeLink® button you want to program. When the LED is flashing orange slowly, press and release (cycle) your hand-held transmitter every two seconds until the HomeLink® has successfully accepted the frequency signal and flashes green rapidly, then release the button on the hand-held transmitter.

NOTE:

The garage door may open and close while you are programming.

4. Watch for the HomeLink® indicator to change flash rates. When it changes, it is programmed. It may take up to 30 seconds or longer in rare cases.
5. Push and hold the programmed HomeLink® button and observe the indicator light.

NOTE:

- If the indicator light is solid green, the programming is complete and the garage door/device should activate when the HomeLink® button is pushed.
- To program the two remaining HomeLink® buttons, repeat each step for each remaining button. DO NOT erase the channels.

If you unplugged the garage door opener/device for programming, plug it back in at this time.

Reprogramming A Single HomeLink® Button (Canadian/Gate Operator)

To reprogram a channel that has been previously trained, follow these steps:

1. Place the ignition in the ACC or ON/RUN position.
2. Press and hold the desired HomeLink® button until the indicator light begins to flash orange slowly after 20 seconds. Do not release the button.
3. Without releasing the button, proceed with "Canadian/Gate Operator Programming" Step 2 and follow all remaining steps.

SECURITY

It is advised to erase all channels before you sell or turn in your vehicle.

To do this, push and hold the two outside buttons for 10 seconds until the indicator flashes. Note that all channels will be erased. Individual channels cannot be erased.

The HomeLink® universal transmitter is disabled when the Vehicle Security system is active.

TROUBLESHOOTING TIPS

If you are having trouble programming HomeLink®, here are some of the most common solutions:

- Replace the battery in the garage door opener hand-held transmitter.
- Push the "Learn", "Program", "Smart", or "Train" button on the garage door opener to complete the training for a rolling code.
- Did you unplug the device for programming and remember to plug it back in?

If you have any problems, or require assistance, please call toll-free 1-800-355-3515 or visit HomeLink.com for information or assistance.

WARNING!

- Vehicle exhaust contains carbon monoxide, a dangerous gas. Do not run your vehicle in the garage while programming the transmitter. Exhaust gas can cause serious injury or death.
- Your motorized door or gate will open and close while you are programming the universal transmitter. Do not program the transmitter if people, pets or other objects are in the path of the door or gate. Only use this transmitter with a garage door opener that has a "stop and reverse" feature as required by Federal safety standards. This includes most garage door opener models manufactured after 1982. Do not use a garage door opener without these safety features.

INTERIOR STORAGE AND FEATURES

STORAGE

Glove Compartment

The glove compartment is located on the passenger side of the instrument panel.



Glove Compartment Release Handle

To open the glove compartment, pull the release handle.

The glove compartment also has a lock cylinder that can be locked/unlocked with the emergency key (located inside the key fob) ➡ page 14.

Front Center Console

The front center console contains a lower storage area and access to a 12V power outlet.

To open the lower storage compartment, push the release button and lift up.



Lower Storage Compartment Release Button

Sunglasses Bin Door

At the front of the console a compartment is provided for the storage of a pair of sunglasses. The storage compartment access is a "push/push" design. Push the chrome pad on the door to open. Push the chrome pad on the door to close.



Sunglasses Bin Door

Rear Storage Compartment

The rear cargo area storage compartment is located underneath the load floor.

To access the storage compartment, lift up on the cargo strap/handle at the rear of the cargo area.



Rear Storage Cover



Rear Storage Compartment

USB CONTROL

This feature allows an external USB device to be plugged into one of the USB ports.

Plugging in a smartphone device to a USB port may activate Android Auto™ or Apple CarPlay® features, if equipped. For further information, refer to Android Auto™ or Apple CarPlay® in the Uconnect Radio Instruction Manual.

The Smart Charging USB ports provide power to your device up to an hour after the vehicle is turned off.

NOTE:


Once a device is connected to the USB port, it will begin charging and is ready for use with the system.

Located under the Uconnect system, two Type C USB ports are present.



Media USB Hub

Third and fourth USB ports are located behind the center console, next to the power inverter. Both ports are charge only.

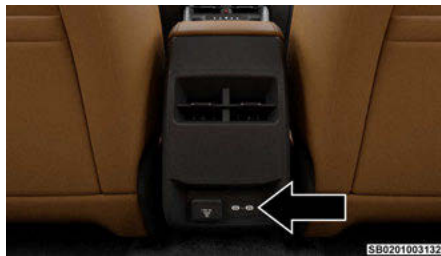

USBs On The Back Of The Center Console

When a new device or smartphone is plugged into the USB ports, the following message may display depending on the device being utilized:

- “A new device is now connected. Previous connection was lost.”
- “(Phone Name) now connected. Previous connection was lost.”
- “Another device is in use through the same USB port. Please disconnect the first device to use the second device.”

NOTE:

The USB Media Hub has a safety feature that will turn off the USBs in case of electric surges. When this happens, the USB ports will not be functional. To reset the Media Hub, reset the radio by pressing and holding the Power button for 15-20 seconds.

CAUTION!

Only use UL Certified USB charging cables, damaged or defective USB cables can cause electrical damage to the USB port.

WARNING!

Do not plug in or remove the external device while driving. Failure to follow this warning could result in a collision.

POWER OUTLETS

There are two 12 Volt (13 Amp) auxiliary power outlets that can provide power for accessories designed for use with the standard power outlet adapters.

The front power outlet is located in the center console and is powered from the battery. Power Outlets labeled with a battery symbol are connected directly to the battery and powered at all times. The Rear Power outlet is located in the rear cargo area.

NOTE:

All accessories connected to the battery powered outlets should be removed or turned off when the vehicle is not in use to protect the battery against discharge.



Front Power Outlet



Rear Power Outlet

CAUTION!

- Do not exceed the maximum power of 160 W (13 Amp) at 12 Volt. If the 160 W (13 Amp) power rating is exceeded, the fuse protecting the system will need to be replaced.

*(Continued)***CAUTION!**

- Power outlets are designed for accessory plugs only. Do not insert any other object in the power outlets as this will damage the outlet and blow the fuse. Improper use of the power outlet can cause damage not covered by your New Vehicle Limited Warranty.

WARNING!

To avoid serious injury or death:

- Do not insert any objects into the receptacles.
- Do not touch with wet hands.
- Close the lid when not in use.
- If this outlet is mishandled, it may cause an electric shock and failure.

CAUTION!

- Many accessories that can be plugged in draw power from the vehicle's battery, even when not in use (i.e., cellular phones, etc.). Eventually, if plugged in long enough, the vehicle's battery will discharge sufficiently to degrade battery life and/or prevent the vehicle from starting.
- Accessories that draw higher power (i.e., coolers, vacuum cleaners, lights, etc.), will degrade the battery even more quickly. Only use these intermittently and with greater caution.
- After the use of high power draw accessories, or long periods of the vehicle not being started

*(Continued)***CAUTION!**

(with accessories still plugged in), the vehicle must be driven a sufficient length of time to allow the alternator to recharge the vehicle's battery.

- Power outlets are designed for accessory plugs only. Do not hang any type of accessory or accessory bracket from the plug. Improper use of the power outlet can cause damage.

2

POWER INVERTER — IF EQUIPPED

There is a 115 Volt, 150 W inverter outlet located on the back of the center console to convert DC current to AC current.

This outlet can power cellular phones, electronics and other low power devices requiring power up to 150 W. Certain video game consoles exceed this power limit, as will most power tools.



Power Inverter

The power inverter is designed with built-in overload protection. If the power rating of 150 W is exceeded,

the power inverter automatically shuts down. Once the electrical device has been removed from the outlet, the inverter should automatically reset. If the power rating exceeds approximately 170 W, the power inverter may have to be reset manually.

WARNING!

To avoid serious injury or death:

- Do not insert any objects into the receptacles.
- Do not touch with wet hands.
- Close the lid when not in use.
- If this outlet is mishandled, it may cause an electric shock and failure.

WIRELESS CHARGING PAD — IF EQUIPPED



Wireless Charging Pad

Your vehicle may be equipped with a 15W 3A Qi® wireless charging pad located below the center stack, within the storage compartment. This charging pad is designed to wirelessly charge your Qi® enabled mobile

phone. Qi® is a standard that allows wireless charging of your mobile phone.

Your mobile phone must be designed for Qi® wireless charging. If the phone is not equipped with Qi® wireless charging functionality, an aftermarket sleeve or a specialized back plate can be purchased from your mobile phone provider or a local electronics retailer. Please see your phone's Owner's Manual for further information.

Place the device inside the prepared area delimited in the mat as shown in the image. Incorrect positioning will prevent the phone from charging.

LED Indicator Status:

- No Light: Charging pad is idle or searching for a device, or device may not be compatible with the Qi® standard.
- Blue Light: Device is detected and is charging.
- Red Light/Flashing: Internal error or foreign object is detected.
- Green Light: Device has completed battery charging (if device is equipped to transmit this information).

Important Notes Regarding This Vehicle's Wireless Charging Pad:

- The presence of the Near-Field Communication (NFC) function active on a smartphone could signal malfunction anomalies.
- The start button must be in the ON/RUN position and all doors are closed in order for the phone to charge.

- To avoid interference with the key fob search, the wireless charging pad will stop charging when any door or swing gate is opened, even if the electric motor is running.
- Be sure to place the mobile device correctly (display facing upward, and phone not covering the LED) on the wireless charging pad.
- If the phone moves on the pad causing the red light to illuminate, the phone will have to be picked up and placed back on the charging pad to resume charging.
- Wireless charging is not as fast as when the phone is connected to a wired charger.
- Some phone's protective case may impact charging. If a phone is not charging due to thick or not certified phone case, it is recommended to remove the phone case before placing on the wireless charging pad.
- iPhones® equipped with Magsafe® may affect the charging function, and may cause higher phone temperature.
- Phones must always be placed on the wireless charging pad within the outline shown on the pad so that its charging parts connect with the charging coils of the system. Movement of the phone during charging may prevent or slow the rate of charge.
- Having multiple applications open on the phone while charging may cause the phone to overheat and will reduce the charging rate, and may even shut down an application that is actively running (i.e. Android Auto™ or Apple CarPlay®).

- The charging rate may slow down or stop to prevent the phone from overheating. If this happens, it does not mean there is a fault with the wireless charging pad. This may just be a protective measure requested by the phone to prevent damage.
- The use of multiple wireless functions at the same time (wireless charging, Apple CarPlay®, Android Auto™) could cause the device to overheat, resulting in limitation of the functions or it turning off. In this case, it is recommended to connect the system using the USB port.
- Do not place the key fob or any other type of metal/magnetized object in the phone case or near the wireless charging pad.
- To protect your phone from overheating, the wireless charging pad is equipped with an integrated cooling fan.
- A thick phone case or a phone case with metal/magnetic material may prevent the charger from working or make phone overheated or stop charging.

CAUTION!

The key fob should not be placed on the charging pad or within 6 inches (15 cm) of it. Doing so can cause excessive heat buildup and damage to the fob. Placing the fob in close proximity of the charging pad blocks the fob from being detected by the vehicle and prevents the vehicle from starting.

*(Continued)***CAUTION!**

To prevent malfunction or burns:

- Do not insert any metallic or magnetic materials (such as Coins, Keys, Metal Cards, Paper Clips) or Key Card between the charging pad and the phone while charging.
- Do not attach metallic or magnetic materials (such as aluminum sticker) to the device side charging area.

REAR SWING GATE**DESCRIPTION**

The rear swing gate can be unlocked by using one of the following methods:

- Remote Keyless Entry key fob (if equipped)
- Power door unlock switch on the front doors (if equipped)

To open the swing gate, pull on the handle.

**Swing Gate Handle****CAUTION!**

Do not push on rear wiper blade when closing the rear flip-up window, as damage to the blade will result.

NOTE:

The swing gate hinges and gas strut may require cleaning if a squeak can be heard when opening the swing gate. Progressive accumulation of dirt or debris on the gas strut may cause failure of the gas strut, requiring replacement. For further information on vehicle cleaning procedures, see ➞ page 255.

CARGO AREA FEATURES**Cargo Storage**

The load floor is designed for a maximum load of 300 lb (136 kg), and should be uniformly distributed over the load floor.

Additional storage can be found under the storage lid. To access the lower storage, lift the handle and raise the storage lid.



Lift Load Floor Handle

Cargo Tie-Down Hooks

The cargo tie-downs, located on the cargo area sides, should be used to safely secure loads when the vehicle is moving. The cargo tie downs are designed for a maximum load of 300 lb (136 kg) per tie-down.



Tie-Down Hooks

WARNING!

- Cargo tie-downs are not safe anchors for a child seat tether strap. In a sudden stop or accident, a tie-down could pull loose and allow the child seat to come loose. A child could be badly injured. Use only the anchors provided for child seat tethers.
- To help protect against personal injury, passengers should not be seated in the rear cargo area. The rear cargo space is intended for load carrying purposes only, not for passengers, who should sit in seats and use seat belts.

The weight and position of cargo and passengers can change the vehicle center of gravity and vehicle handling. To avoid loss of control resulting in personal injury, follow these guidelines for loading your vehicle:

- Do not carry loads that exceed the load limits described on the label attached to the left door or left door center pillar.

(Continued)

WARNING!

- Always place cargo evenly on the cargo floor. Put heavier objects as low and as far forward as possible.
- Place as much cargo as possible in front of the rear axle. Too much weight or improperly placed weight over or behind the rear axle can cause the vehicle to sway.
- Do not pile luggage or cargo higher than the top of the seatback. This could impair visibility or become a dangerous projectile in a sudden stop or accident.

HOOD

OPENING THE HOOD

WARNING!

EV Models Only

- Always place the start button in the OFF position before opening the hood.
- Some areas remain very hot for a while after driving or charging and may cause serious burns if touched.
- Keep hands, tools, clothing, and jewelry away from the radiator cooling fan when the hood is raised. The cooling fan may start operating at any time, including during charging. Hands or clothing caught in a rotating fan may cause serious injury.

To Open the Hood:

The Hood Release button is located on the instrument panel to the left of the steering wheel. Press the button once to open the hood.



SB0201000771

Hood Release Button


NOTE:

- Vehicle must be at a stop.
- While lifting the hood, use both hands.
- Before lifting the hood, check that the wiper arms are not in motion and not in the lifted position.

In The Event Of A Power Failure

The hood may also be manually released in the event of a depleted battery. The mechanical release lever is located under the drivers side of the instrument panel.

1. Gently pull the panel located below the hood release to allow the emergency release door to open.

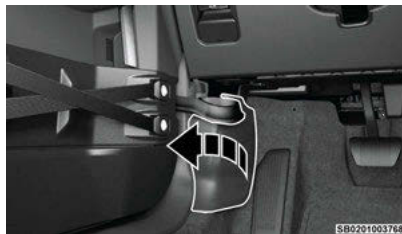

Remove Panel

2. Unlock the emergency release door by turning the lock mechanism a quarter turn using a small tool, such as a coin.



Hood Door Latch

3. Pull the emergency release strap twice to release the hood.



Hood Release Pull Strap

Be sure to replace the strap and close lid by securing the lock mechanism once the mechanical release is no longer needed. Reinstall the panel.

CLOSING THE HOOD

Close the hood by following these steps:



SB0201002818

Hand Placement Zone

1. In one continuous motion, gently lower the hood until it is resting on the latch mechanism.

- Place two hands on center of hood, above the latch mechanism. Press down firmly until hood is latched.
- Confirm hood is latched in place.

CAUTION!

- Do not drop or forcefully close hood. Doing so can cause damage to the hood.
- Only use force on the areas highlighted in the image above. Pressing down on areas outside of this area can cause damage.

WARNING!

Be sure the hood is fully latched before driving your vehicle. If the hood is not fully latched, it could open when the vehicle is in motion and block your vision. Failure to follow this warning could result in serious injury or death.

FRUNK SAFETY — IF EQUIPPED**Frunk Load Specifications**

Do not exceed a load more than 60 lbs (27 kg) in the frunk.

CAUTION!

Do not place liquids or anything that can melt in the frunk storage compartment.

Hood Emergency Release

In the event of an individual being locked inside the frunk, the hood can be opened by pressing the Emergency Release button inside the frunk.

The hood can be fully released when the vehicle is stationary. If the vehicle is in motion, the hood will release to a secondary latch position only.

**Frunk Emergency Release****WARNING!**

Do not allow children to have access to the frunk, either by climbing into the frunk from outside. Always close the hood when your vehicle is unattended. Once in the frunk, young children may not be able to escape. If trapped in the frunk, children can die from suffocation or heat stroke.

DASHBOARD INSTRUMENTS AND CONTROLS

INSTRUMENT CLUSTER

12-INCH INSTRUMENT CLUSTER



Instrument Cluster Descriptions

Scan this QR code to learn more about the instrument cluster.



1. Charge/Power Gauge
 - Green indicates the amount of energy used to charge the battery while slowing the vehicle.
 - Blue indicates the amount of power from the high voltage battery currently being used to propel the vehicle.
2. Main Menu Area
 - Displays Main Menu items and information.
3. Speedometer
 - Indicates vehicle speed.
4. Max Regeneration
 - Indicates the current regenerative braking strength. Regenerative braking replenishes the vehicle's high voltage battery during deceleration.
5. Battery Gauge
 - Indicates battery percentage. The icon and bargraph change color according to the charging status and level. The arrow next to the battery icon indicates what side of the vehicle the charge port is on.

NOTE:

Some telltales illuminate for a bulb check when the vehicle is first turned ON.


INSTRUMENT CLUSTER DISPLAY

Depending on your vehicle's trim level, features and options may vary.

Your vehicle is equipped with an instrument cluster display, which offers useful information to the driver. With the vehicle in the OFF position, opening/closing of a door will activate the display for viewing, and display the total miles, or kilometers, in the odometer. Your instrument cluster display is designed to display important information about your vehicle's systems and features. Using a driver interactive display located on the instrument panel, your instrument cluster display can show you how systems are working and give you warnings when they are not. The steering wheel mounted controls allow you to scroll through the main menus and submenus. You can access the specific information you want and make selections and adjustments.

Location And Controls

The instrument cluster display features an interactive display which is located in the instrument cluster. The system allows the driver to select information by pushing the buttons mounted on the steering wheel.

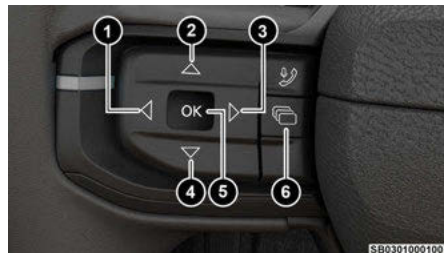

Instrument Cluster Display Controls

- 1 — Left Arrow Button
- 2 — Up Arrow Button
- 3 — Right Arrow Button
- 4 — Down Arrow Button
- 5 — OK Button
- 6 — Layout Button

Left And Right Arrow Buttons:

The **left** ◀ or **right** ▶ arrow buttons cycle through the Main Menu items.

Changes the Main Screen area and Menu Title area.

Up And Down Arrow Buttons:

The **up** ▲ or **down** ▼ arrow buttons cycle through the submenus of the Main Menu items.

NOTE:

- Holding the **up** ▲ or **down** ▼ or **left** ◀ or **right** ▶ arrow button will continuously loop through the currently selected menu or options presented on the screen.

- Upon returning to a Main Menu, the last submenu screen viewed within that Main Menu will be displayed.

OK Button:

For Digital Speedometer:

- Pushing the **OK** button changes units (mph or km/h).

For Screen Setup:

- **OK** button allows user to enter menu and submenus.
- Within each submenu layer, the **up** $\triangle$ and **down** ∇ arrow buttons will allow the user to select the item of interest.
- Pushing the **OK** button makes the selection and a confirmation screen will appear (returning the user to the first page of the submenu).
- Pushing the **left** $\triangleleft$ arrow button will exit each submenu layer and return to the Main Menu.

Layout Button:

Press the Layout button on the steering wheel to access cluster layout options. Selected layout will continue to be displayed at next vehicle start.

- Classic: default layout with analog circular gauges.
- Modern: digital look with reduced information and no analog circular gauges.
- Center: centered speedometer and no main menu bar.
- Navigation: navigation map and control in cluster, no main menu bar.

Instrument Cluster Display Selectable Menu Items

Push and release the **left** $\triangleleft$ or **right** $\triangleright$ arrow button until the desired Selectable Menu item is displayed in the instrument cluster display.

Follow the Menu or submenu prompts as desired.

DRIVER INFO

The Driver Info menu consists of the following submenus: Driver Assist, Trip, and Speedometer.

Driver Assist - If Equipped

The Driver Assist menu displays the current status of Adaptive Cruise Control (ACC), Active Lane Management (ALM), and Active Driving Assist (ADA), if equipped.

Trip A and Trip B

The Trip menu displays the elapsed time, distance, and average economy with an instantaneous consumption graph with average indication. The cluster will show "- -" in place of value for trip consumption or trip distance if the cluster does not receive a signal. Hold the OK button to reset all information in Trip A or Trip B.

Speedometer

Push and release the OK button to toggle units (km/h or mph) of the speedometer.

AUDIO

This menu provides current audio information or phone information when applicable.

MESSAGES

This feature shows the number of stored warning messages, if any. Push the up or down arrow button to scroll through the stored messages. Number of messages is indicated by the dots on the screen. When there are no messages or only one message, no submenu dots or arrows will appear.

SETTINGS MENU

Push and release the **left** $\triangleleft$ or **right** $\triangleright$ arrow button until the Settings Menu displays. Use the **up** $\triangle$ or **down** ∇ arrow buttons to scroll through the submenus. Use the **OK** button to select.

Speed Warning - If Equipped

When set, provides a visual and audible warning when vehicle exceeds customer set speed. Set speed will appear within telltale. When the set speed is exceeded, a single chime will sound with a message "Speed Warning Exceeded".

To set speed warning, press the OK button to enter the Speed Warning submenu. Press the down arrow to scroll to Speed Warning On. Edit Speed will be available once turned on. Use the up or down arrow buttons to set limit. Press the OK button to set the speed. If you exit the menu without selecting OK, the Speed Warning will return to its previous status.

Screen Setup

The Screen Setup feature allows you to change what information is displayed in the instrument cluster as well as the location of that information.

- Upper Left: Compass, Outside Temp, Time (Default), or None

- Upper Right: Compass, Outside Temp (Default), Time, or None
- Restore Defaults

NOTE:

Based upon equipment options and current vehicle status, some features may not be available.

OFF ROAD

The Off Road menu displays Steering Angle and Pitch and Roll information.

Pitch & Roll

Displays Pitch and Roll information graphically and numerically. See Off Road Pages app ➡ page 118

Steering Angle

Displays the graphical and numerical value of calculated average front wheel angle from the steering wheel orientation. Also displays status of the rear axle lock if equipped.

NOTE:

When vehicle speed becomes too high to display the pitch and roll, "--" will display in place of the numbers, and the graphic will be greyed out. A message indicating the necessary speed for the feature to become available will also display.

VEHICLE INFO

Push and release the **right** ▷ or **left** ◁ arrow button until the Vehicle Info menu is displayed. Push and release the **up** △ or **down** ▽ arrow button to scroll through the sub-menus. Follow the directional prompts to access or reset any of the sub-menu items.


- **Energy Economy:** provides a real-time indicator of instant consumption compared to average consumption. Hold the OK button to reset average energy economy. For invalid or no signals, the values may display two dashes "--".
- **Tire Pressure Monitor:** displays units psi, kPa, or bar based on selection. Pressure for individual tires indicated. For invalid or no signals, the tire pressure value will show "--" and "Tire Pressure Unavailable".
- **12V Battery Voltage:** provides gauges and output of the 12V battery and access to Storage Mode.
 - Storage Mode (If Equipped): Storage Mode disables features to preserve battery life when the vehicle will be stored or not used for an extended period of time. To enable, navigate to the 12V battery gauge, then press and hold the OK button to request Storage mode. Follow displayed messages and instructions. To exit Storage Mode, start the vehicle.
 - The Key Fob will continue to function while in Storage Mode.
 - Connected Services are unavailable in Storage Mode.

WARNING!

- The Rear Seat Reminder Alert is not available when the vehicle is in Storage Mode.
- Make sure to check the rear seats for children and animals before engaging Storage Mode.

**Storage Mode Activation Location****High Voltage Battery State Of Health**

- **Battery Info:** displays high voltage battery related information. Pressing and holding the Layout button (if equipped) on the steering wheel controls acts as a shortcut to the Battery Info menu when in Classic Layout.
 - State of Health: displays the current health of the high voltage battery.
 - Last Update: displays the distance driven since the last State of Health check.
 - Energy Reserve: displays the actual remaining reserve energy in kWh.

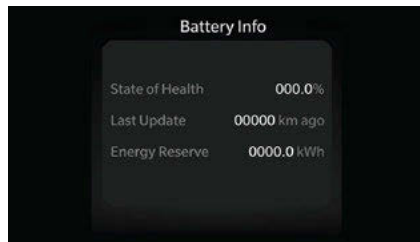

Battery Info Display

- **Charging Rate:** displays vehicle charging rate related information.
 - **Current:** shows the current charging value of the vehicle in kWh.
 - **Max:** shows the maximum charging value of the vehicle in kWh.



Charging Rating Display

Procedure To Update State Of Health

The high voltage battery State of Health check updates automatically during normal vehicle usage. However, an update may be manually completed using the following procedure:

Charging

1. With the vehicle off, use a Level 1 or Level 2 charger to charge the battery to above 80%.
2. When charging is complete, let the vehicle sit for at least two hours.

Then, perform the following Discharge procedure.

Discharging

1. Discharge the battery to 20% charge level or lower (to drain the battery, one can drive the vehicle and/or run the HVAC).
2. Turn off the vehicle and wait at least two hours.

Start the vehicle and determine if Last Update value has reset to 0 km. If so, then the state of health was successfully updated. If not, repeat the above Charging and Discharging steps at least two additional times.

NOTE:

The update may take longer in some cases.

WARNING LIGHTS AND MESSAGES

The warning/indicator lights will illuminate in the instrument panel together with a dedicated message and/or acoustic signal when applicable. These indications are indicative and precautionary and as such must not be considered as exhaustive. Always

refer to the information in this chapter in the event of a failure indication. All active telltales will display first if applicable.

NOTE:

The system check menu may appear different based upon equipment options and current vehicle status. Some telltales are optional or model specific and may not appear.

WARNING MESSAGES

Stop Safely Vehicle Will Shut Off Soon



Stop Safely Vehicle Will Shut Off Soon Warning Message

This warning will be displayed on the instrument panel display when the vehicle has determined an operational issue will occur shortly, which will cause the vehicle's propulsion system to turn off. If this message appears while driving, stop the vehicle in a safe location as soon as possible. Have the vehicle transported to an authorized dealer.

- This is a high priority message
- This message will be displayed continuously
- Cannot be cleared with button press
- A single chime will sound continuously

Fire Danger! Pull Over Now! Exit Vehicle!



Fire Danger! Pull Over Now! Exit Vehicle! Warning Message

A warning will appear on the instrument panel display if the system detects the high voltage battery has overheated. This can result in a vehicle fire, and the release of toxic and/or flammable gases. To reduce the risk of a larger fire, the vehicle's high voltage propulsion system will turn off within thirty seconds of displaying this warning. At that time, the vehicle may not accelerate. You can still steer and brake the vehicle. This high priority message:

- displays continuously.
- cannot be cleared with a button press.
- has a rapid and continuous chime.

Stop and park the vehicle in an open area. Have all passengers exit the vehicle as soon as possible and move to a safe distance away from the vehicle. After all passengers safely exit the vehicle, call emergency responders immediately. Even if you do not see flames, a fire may start at any moment. Do not attempt to reenter or start the vehicle.

CAUTION!


An overheated High Voltage Battery may result in electrical systems damage. Do not attempt to restart the vehicle. The vehicle must be towed to an authorized dealer.

Turtle Mode


This mode is triggered when there is a low estimated range to empty that will disable some functionalities and limit vehicle speed/torque in order to save battery and allow the driver to reach a charging station. There are four levels with pop-up warning messages.



The Speed Override Warning Light will appear only in Levels 3 and 4 when the driver exceeds the Turtle Mode imposed limited speed.

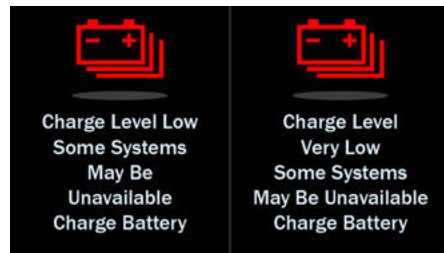

Turtle Mode Message Levels 1 and 2

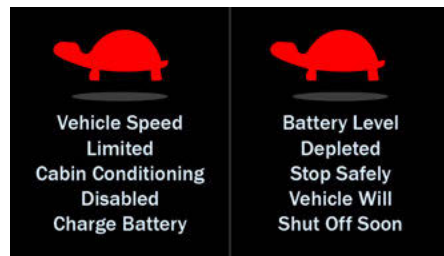


Turtle Mode Message Levels 3 and 4

Drive-By-Brake Warning Message

In case of certain issues with the electric drive system, the vehicle may use a Drive-by-Brake mode that allows

continued operation. The following message will appear on the instrument cluster:

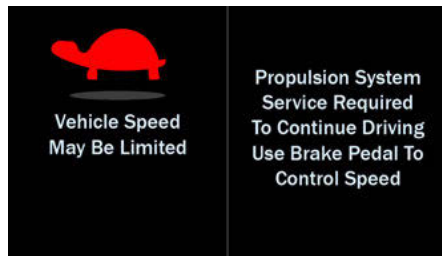

Drive By Brake Warning Message

Other messages may appear depending on the situation.

In this Drive-by-Brake mode, vehicle speed is controlled using only the brake pedal. Releasing the brake pedal allows the electric drive to begin slowly accelerating the vehicle up to a maximum speed. Stepping on the brake pedal stops that acceleration and slows the vehicle. You can drive safely in this manner until the vehicle is brought to the dealer for service.

RED WARNING LIGHTS

Air Bag Warning Light



This warning light will illuminate to indicate a fault with the air bag, and will turn on for two to eight seconds as a bulb check when the start button is placed in the ON/RUN position. This light will illuminate with a single chime when a fault with the air bag has been detected, it will

stay on until the fault is cleared. If the light is either not on during startup, stays on, or turns on while driving, have the system inspected at an authorized dealer as soon as possible.

Brake Warning Light



This warning light monitors various brake functions, including brake fluid level and parking brake application. If the brake light turns on it may indicate that the parking brake is applied, that the brake fluid level is low, or that there is a problem with the Anti-Lock Brake System reservoir.

If the light remains on when the parking brake has been disengaged, and the fluid level is at the full mark on the master cylinder reservoir, it indicates a possible brake hydraulic system malfunction or that a problem with the Brake Booster has been detected by the Anti-Lock Brake System (ABS) / Electronic Stability Control (ESC) system. In this case, the light will remain on until the condition has been corrected. If the problem is related to the brake booster, the ABS pump will run when applying the brake, and a brake pedal pulsation may be felt during each stop.

The dual brake system provides a reserve braking capacity in the event of a failure to a portion of the hydraulic system. A leak in either half of the dual brake system is indicated by the Brake Warning Light, which will turn on when the brake fluid level in the master cylinder has dropped below a specified level.

The light will remain on until the cause is corrected.

NOTE:

The light may flash momentarily during sharp cornering maneuvers, which change fluid level conditions. The vehicle should have service performed, and the brake fluid level checked.

If brake failure is indicated, immediate repair is necessary.

WARNING!

Driving a vehicle with the red brake light on is dangerous. Part of the brake system may have failed. It will take longer to stop the vehicle. You could have a collision. Have the vehicle checked immediately.

Vehicles equipped with the Anti-Lock Brake System (ABS) are also equipped with Electronic Brake Force Distribution (EBD). In the event of an EBD failure, the Brake Warning Light will turn on along with the ABS Light. Immediate repair to the ABS system is required.

Operation of the Brake Warning Light can be checked by changing the start button from the OFF position to the ON/RUN position. The light should illuminate for approximately two seconds. The light should then turn off unless the parking brake is applied or a brake fault is detected. If the light does not illuminate, have the light inspected by an authorized dealer.

The light also will turn on when the parking brake is applied with the start button in the ON/RUN position.

NOTE:

This light shows only that the parking brake is applied. It does not show the degree of brake application.

Brakes Overheated Warning Light



This indicator light illuminates along with a message to indicate the brake rotor temperature has exceeded its set threshold, second stage. Stop safely and place the vehicle in PARK.

Battery Charge Warning Light



This warning light will illuminate when the battery is not charging properly. If it stays on while the electric motor is running, there may be a malfunction with the charging system. Contact an authorized dealer as soon as possible.

This indicates a possible problem with the electrical system or a related component.

Battery Charge Low Warning Light



This warning light will illuminate and a message will display when the high-voltage battery charge level is low. Some systems may be disabled to save battery. This mode is triggered when the vehicle has a low estimated range and a warning message will appear on the screen. Navigate to the nearest approved charging station.

Door Open Warning Light



This indicator will illuminate when a door is ajar/open and not fully closed.

NOTE:

If the vehicle is moving, there will also be a single chime.

Drowsy Driver Detection Warning Light — If Equipped



The Drowsy Driver Detection (DDD) system monitors certain vehicle movements and driver interactions to identify patterns suggesting drowsiness. If detected, the system sends the driver an auditory and visual signal to take precaution. A pop-up will display continuously until the driver presses the **OK** button to clear.

Drowsy Driver Alert can be turned on or off through Uconnect Settings ➡ page 188.

Electric Power Steering (EPS) Fault Warning Light



This warning light will turn on when there's a fault with the EPS system ➡ page 72.

WARNING!

Continued operation with reduced assist could pose a safety risk to yourself and others. Service should be obtained as soon as possible.

Service Electric Vehicle System Warning Light — If Equipped



This warning light will illuminate when service to the electrical system is needed. It will be accompanied by a message in the cluster. If the telltale stays on or continues to come on, contact an authorized dealer as soon as possible.

Hood Open Warning Light



This warning light will illuminate when the hood is left open and not fully closed.

NOTE:

If the vehicle is moving, there will also be a single chime.

Turtle Mode Warning Light



This warning light will illuminate to indicate that Turtle Mode has been activated and that some vehicle systems may be disabled to save battery. The purpose of this feature is help the driver reach the nearest charging station.

This mode is triggered when the vehicle has a low estimated range and a warning message will appear on the screen. Navigate to the nearest approved charging station.

High Voltage Coolant Low Warning Light



This warning light will illuminate to indicate that high voltage battery coolant is low. Contact an authorized dealer if illumination persists.

Plug Status Fault Warning Light



This warning light will illuminate when a plug status fault is detected (when vehicle not in motion). It will be accompanied by a cluster message indicating the type of fault.

You may receive one of the following messages if a fault is detected:

- “Service Charging System” – If you see this message, it is recommended to unplug and plug in again, or try a different charging station. If an issue continues, contact an authorized dealer to service your high voltage charging system.
- “Issue Detected Check External Charging Station” – If you see this message, the charging station may be powered off, having internal fault or being scheduled to charge later. It is recommended to try a different charging station. If an issue continues, then contact an authorized dealer.

NOTE:

- Older or non-compliant J1772 EVSE models may not support charging of this vehicle. If this vehicle does not charge, it may be connected to a non-compliant Level 2 EVSE, and will flash indicators. Please identify this failure to the site operator and/or EVSE provider.
- Before this vehicle can be driven, the EVSE Charging Cord must be disconnected from the vehicle.

Seat Belt Reminder Warning Light



This warning light indicates when the driver or passenger seat belt is unbuckled. When the start button is first placed in the ON/RUN position and if the driver's seat belt is unbuckled, a chime will sound and the light will turn on. When driving, if the driver or front passenger seat belt remains unbuckled, the Seat Belt Reminder Light will flash or remain on continuously and a chime will sound.

Speed Override Warning Light



This warning light will illuminate to warn the driver that the vehicle speed is being limited. The purpose of this feature is to help save battery allowing the driver to reach the nearest charging station. The indicator will appear each time the limit is exceeded. A speed override popup message will appear when the speed is first exceeded.

This mode is triggered when the vehicle has extremely low or no remaining estimated range. Navigate to the nearest approved charging station.

Swing Gate Open Warning Light



This warning light will illuminate when the swing gate is open.

NOTE:

If the vehicle is moving, there will also be a single chime.

Power Battery Fault Warning Light



This light alerts the driver that there is a failure in the Power Battery System. Contact an authorized dealer if illumination persists.

Vehicle Security Warning Light — If Equipped



This light will flash at a fast rate for approximately 15 seconds when the vehicle security system is arming, and then will flash slowly until the vehicle is disarmed.

3

YELLOW WARNING LIGHTS

Anti-Lock Brake System (ABS) Warning Light



This warning light monitors the ABS. The light will turn on when the start button is placed in the ON/RUN position and may stay on for as long as four seconds.

If the ABS light remains on or turns on while driving, then the Anti-Lock portion of the brake system is not functioning and service is required as soon as possible. However, the conventional brake system will continue to operate normally, assuming the Brake Warning Light is not also on.

If the ABS light does not turn on when the start button is placed in the ON/RUN position, have the brake system inspected by an authorized dealer.

Active Lane Management Warning Light — If Equipped



The Active Lane Management Warning Light will be solid yellow when the vehicle is approaching a lane marker. The warning light will flash when the vehicle is crossing the lane marker → page 167.

Acoustic Vehicle Alerting System (AVAS) Fault Warning Light — If Equipped



This light alerts the driver that the AVAS system is not functioning properly. If the light stays on contact and authorized dealer for service.

Brakes Overheated Warning Light



This indicator light illuminates when the brake rotor temperature has exceeded its set threshold, first stage. Avoid extended brake use.

Creep Fail Indicator Light



This indicator light will illuminate when there is a fault within the Creep system or if the Creep system is unable to be turned off.

Regenerative Braking Unavailable Warning Light



This light appears along with a message when regenerative braking is unavailable because of a system failure. This indicates a fault. See an authorized dealer for service.

Drowsy Driver Detected System Fault Warning Light — If Equipped



This warning light will illuminate when the Drowsy Driver Detected (DDD) system is not operating correctly and requires service. Please see an authorized dealer.

Electric Park Brake Warning Light



This warning light will illuminate to indicate the Electric Park Brake is not functioning properly and service is required. Contact an authorized dealer.

Electronic Stability Control (ESC) Active Warning Light



This warning light will indicate when the ESC system is Active. The ESC Indicator Light in the instrument cluster will come on when the start button is placed in the ON/RUN position, and when ESC is activated. It should go out with the electric motor running. If the ESC Indicator Light comes on continuously with the motor running, a malfunction has been detected in the ESC system. If this warning light remains on after several key cycles, and the vehicle has been driven several miles (kilometers) at speeds greater than 30 mph (48 km/h), see an authorized dealer as soon as possible to have the problem diagnosed and corrected.

- The ESC OFF Indicator Light and the ESC Indicator Light come on momentarily each time the start button is placed in the ON/RUN position.

- The ESC system will make buzzing or clicking sounds when it is active. This is normal; the sounds will stop when ESC becomes inactive.
- This light will come on when the vehicle is in an ESC event.

Electronic Stability Control (ESC) OFF Warning Light



This warning light indicates the ESC is off.

Each time the start button is turned to ON/RUN, the ESC system will be on, even if it was turned off previously.

Service Active Lane Management Warning Light — If Equipped



This warning light will illuminate when the Active Lane Management system is not operating and requires service. Please see an authorized dealer.

Low Washer Fluid Warning Light



This warning light will illuminate when the windshield washer fluid is low.

Rear Axle Lock Fail Warning Light



This light indicates a fault has been detected in the rear axle lock system.

Service Adaptive Cruise Control (ACC) Warning Light



This light will turn on when the ACC is not operating and needs service
⇒ page 189.

This light will turn on when the ACC system is not operating and needs service.

Service Forward Collision Warning (FCW) Or Pedestrian Emergency Braking (PEB) Warning Light



This warning light will illuminate to indicate a fault in the FCW or PEB System.
Contact an authorized dealer for service
⇒ page 157.

Tire Pressure Monitoring System (TPMS) Warning Light



The warning light switches on and a message is displayed to indicate that the tire pressure is lower than the recommended value and/or that slow pressure loss is occurring. In these cases, optimal tire duration and energy consumption may not be guaranteed.

Should one or more tires be in the condition mentioned previously, the display will show the indications corresponding to each tire.

CAUTION!

Do not continue driving with one or more flat tires as handling may be compromised. Stop the vehicle, avoiding sharp braking and steering. If a tire puncture occurs, repair immediately using the dedicated tire repair kit and contact an authorized dealer as soon as possible.

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.

As an added safety feature, your vehicle has been equipped with a TPMS that illuminates a low tire pressure telltale when one or more of your tires is significantly underinflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly underinflated tire causes the tire to overheat and can lead to tire failure. Underinflation also reduces energy efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if underinflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly ⇒ page 199.

CAUTION!

The TPMS has been optimized for the original equipment tires and wheels. TPMS pressures and warning have been established for the tire size equipped on your vehicle. Undesirable system operation or sensor damage may result when using replacement equipment that is not of the same size, type, and/or style. Aftermarket wheels can cause sensor damage. Using aftermarket tire sealants may cause the Tire Pressure Monitoring System (TPMS) sensor to become inoperable. After using an aftermarket tire sealant it is recommended that you take your vehicle to an authorized dealer to have your sensor function checked.

Trailer Fault Warning Light — If Equipped

This light illuminates when there is a failure with the tow hook. Contact an authorized dealer for service.

Traction Battery Cut-Off Warning Light — If Equipped

This telltale will turn on to indicate the Traction Battery system is not functioning properly. Contact an authorized dealer if illumination persists.

Traffic Sign Recognition (TSR) Fault Warning Light — If Equipped

This light will illuminate to indicate a TSR fault. Contact an authorized dealer if the light remains on after restarting the vehicle.

YELLOW INDICATOR LIGHTS**Auto HOLD! Fault Indicator Light — If Equipped**

The Auto HOLD! Fault Indicator light will illuminate if a fault is detected, it will be indicated by a yellow 'HOLD!' indicator light that will stay on as long as the fault condition exists.

Forward Collision Warning (FCW) Or Pedestrian Emergency Braking (PEB) Off Indicator Light

This indicator light illuminates to indicate that FCW or PEB is off ➡ page 157.

Rear Axle Lock Indicator Light

This light indicates when the rear axle lock has been activated.

Trailer Detection Indicator Light - If Equipped

This indicator light will illuminate if Blind Spot Alert with Trailer Detection is turned on. Length detection information will appear above the telltale.

GREEN INDICATOR LIGHTS**Active Lane Management Indicator Light — If Equipped**

The Active Lane Management indicator light illuminates solid green when both lane markings have been detected and the system is "armed" and ready to provide visual and torque warnings if an unintentional lane departure occurs ➡ page 167.

Adaptive Cruise Control (ACC) Set With Target Indicator Light — If Equipped

This will display when the ACC is set and the vehicle in front is detected ➡ page 189.

Adaptive Cruise Control (ACC) Set With No Target Detected Indicator Light — If Equipped

This will display when the ACC is set and the vehicle in front is not detected ➡ page 189.

Auto HOLD Indicator Light — If Equipped

Auto HOLD keeps your vehicle at a complete stop without you having to keep your foot on the brake pedal. Once engaged a green "HOLD" indicator will appear in the Instrument Cluster Display.

Rough Road Cruise Control Indicator Light — If Equipped

This indicator light will illuminate when Rough Road Cruise Control is activated ➡ page 196.

Front Fog Indicator Light

This indicator light will illuminate when the front fog lights are on.

Parking/Headlights On Indicator Light



This indicator light will illuminate when the parking lights or headlights are turned on ➡ page 101.

Plug Status Indicator Light



This indicator light will illuminate green when the vehicle is plugged in and the Electric Vehicle Supply Equipment (EVSE) charging plug is securely attached to the charging port. This indicates that the plug is detected, but doesn't mean it is charging. It will be accompanied with a cluster message indicating the charge status:

- "Plugged In And Charging"
- "Plugged In And Waiting to Charge On A Set Schedule"
- "Plugged in and Charging Complete"

NOTE:

The vehicle cannot be driven until it is unplugged.

Ready To Drive Indicator Light



This indicator light will illuminate to indicate that the vehicle has enough power to be driven, regardless of the speed of the vehicle.

Turn Signal Indicator Lights



When the left or right turn signal is activated, the turn signal indicator will flash independently and the corresponding exterior turn signal lamps will flash. Turn

signals can be activated when the multifunction lever is moved down (left) or up (right).

NOTE:

- A continuous chime will sound if the vehicle is driven more than 1 mile (1.6 km) with either turn signal on.
- Check for an inoperative outside light bulb if either indicator flashes at a rapid rate.

WHITE INDICATOR LIGHTS

Adaptive Cruise Control (ACC) Ready Indicator Light — If Equipped



This light will turn on when ACC has been turned on, but is not set ➡ page 189.

Creep Off Indicator Light



This indicator light will illuminate when Creep is turned off.

Drive Mode - Auto Indicator Light



This indicator light will illuminate when Auto mode is active.

Drive Mode - Snow Indicator Light



This light will turn on when Snow mode is active.

Drive Mode - Sport Indicator Light



This light will turn on when Sport mode is active.

Active Lane Management Indicator Light — If Equipped



When the Active Lane Management system is ON, but not armed, the Active Lane Management indicator light illuminates solid white. This occurs when only left, right, or neither lane line has been detected. If a single lane line is detected, the system is ready to provide only visual warnings if an unintentional lane departure occurs on the detected lane line ➡ page 167.

Rear Seat Unoccupied Indicator Light — If Equipped



This light indicates when the rear passenger seats are unoccupied, and will illuminate in the upper right portion of the instrument cluster display, momentarily replacing the configurable corner information.

Regenerative Braking Unavailable Indicator Light



This indicator light is white when regenerative braking is unavailable because the battery is currently at 100% state of charge. This is normal and does not indicate a fault.

Rough Road Cruise Control Indicator Light — If Equipped



This light will turn white when Rough Road Cruise Control is cancelled ➡ page 196.

BLUE INDICATOR LIGHTS

High Beam Indicator Light



This indicator light will illuminate to indicate that the high beam headlights are on.

With the low beams activated, push the multifunction lever forward (toward the front of the vehicle) to turn on the high beams. Pull the multifunction lever rearward (toward the rear of the vehicle) to turn off the high beams. If the high beams are off, pull the lever toward you for a temporary high beam on, “flash to pass” scenario.

CLIMATE CONTROLS

DESCRIPTION

The Climate Control system allows you to regulate the temperature, air flow, and direction of air circulating throughout the vehicle. The controls are located on the touchscreen under the Climate tab.

AUTOMATIC CLIMATE CONTROL DESCRIPTIONS AND FUNCTIONS



Uconnect 5 NAV With 14.4-inch Display Automatic Climate Controls

MAX A/C Button



Press and release the MAX A/C button on the touchscreen to change the current setting to the coldest output of air. The MAX A/C indicator illuminates when MAX A/C is on. Pressing the button again will cause the MAX A/C operation to exit.

NOTE:

The MAX A/C button is only available on the touchscreen.

MAX A/C sets the control for maximum cooling performance. The button illuminates when MAX A/C is on. In MAX A/C, the blower level and mode position can be adjusted to desired user settings. Pressing other settings will cause the MAX A/C to turn off.

A/C Button



Press and release this button on the touchscreen to change the current setting. The A/C indicator illuminates when A/C is on.

The A/C button allows the operator to manually activate or deactivate the A/C system. When the A/C system is turned on, cool dehumidified air will flow through the outlets into the cabin.

Recirculation Button



Press and release this button on the touchscreen to change the system between recirculation mode and outside air mode.

The Recirculation indicator and the A/C indicator illuminate when the Recirculation button is pressed. Recirculation can be used when outside conditions, such as smoke, odors, dust, or high humidity are present. Recirculation can be used in all modes. Recirculation may be unavailable (button on the touchscreen greyed out) if conditions exist that could create fogging on the inside of the windshield. The A/C can be deselected manually without disturbing the mode control selection. Continuous use of the Recirculation mode may make the inside air stuffy and window fogging may occur. Extended use of this mode is not recommended. Recirculation mode may automatically adjust to optimize customer experience for warming, cooling, dehumidification, etc.

In cold weather, use of Recirculation mode may lead to excessive window fogging.

AUTO/AUTO ECO Button



Press and release the Auto/AutoEco button to toggle between Auto and AutoEco. This activates the comfort settings to automatically control the front driver and passenger area's comfort by adjusting distribution and the amount of airflow.

When the AutoEco button is selected, the Eco status will be activated, and the climate system will be controlled to optimize for energy savings, but comfort may be compromised.

Front Defrost Button



Press and release this button on the touchscreen to change the current airflow setting to Defrost mode. The Front Defrost indicator illuminates when Front Defrost is on. Air comes from the windshield and side window demist outlets. When the defrost button is selected, the blower level may increase. Use Defrost mode with maximum temperature settings for best windshield and side window defrosting and defogging. When toggling the front defrost mode button, the climate system returns to the previous setting.

Rear Defrost Button



Press and release the Rear Defrost button on the touchscreen to turn on the rear window defroster and the heated outside mirrors (if equipped). The Rear Defrost indicator illuminates when the rear window defroster is on. The rear window defroster automatically turns off after 10 minutes.

CAUTION!

Failure to follow these cautions can cause damage to the heating elements:

- Use care when washing the inside of the rear window. Do not use abrasive window cleaners on the interior surface of the window. Use a soft cloth and a mild washing solution, wiping parallel to the heating elements. Labels can be peeled off after soaking with warm water.
- Do not use scrapers, sharp instruments, or abrasive window cleaners on the interior surface of the window.
- Keep all objects a safe distance from the window.

Driver And Passenger Temperature Up And Down Buttons

Provides the driver and passenger with independent temperature control.



Push the red button on the faceplate or touchscreen or press and slide the temperature bar towards the red arrow button on the touchscreen for warmer temperature settings.



Push the blue button on the faceplate or touchscreen or press and slide the temperature bar towards the blue arrow button on the touchscreen for cooler temperature settings.

NOTE:

The numbers within the temperature display will only appear if your vehicle is equipped with an Automatic Climate Control system.

SYNC Button



Press the SYNC button on the touchscreen to toggle the SYNC feature on/off. The SYNC indicator illuminates when SYNC is on. SYNC synchronizes the passenger temperature setting with the driver temperature setting. Changing the passenger's temperature setting while in SYNC will automatically exit this feature.

NOTE:

The SYNC button is only available on the touchscreen.

Blower Control



Blower Control regulates the amount of air forced through the Climate Control system. Adjusting the blower will cause automatic mode to switch to manual operation. There are seven blower speeds available. The speeds can be selected using either the blower control knob on the faceplate or the buttons on the touchscreen.

- **Faceplate:** The blower speed increases as you turn the blower control knob clockwise from the lowest blower setting. The blower speed decreases as you turn the blower control knob counterclockwise.
- **Touchscreen:** Use the small blower icon to reduce the blower setting and the large blower icon to increase the blower setting. The blower can also be selected by pressing the blower bar area between the icons.

Mode Control



Select one of the Mode buttons on the touchscreen or press the Mode button on the faceplate to adjust the airflow distribution. The airflow distribution can be adjusted so air comes from the instrument panel outlets, floor outlets, defrost outlets, and demist outlets.

Panel Mode



Air comes from the outlets in the instrument panel. Each of these outlets can be individually adjusted to direct the flow of air. The air vanes of the center outlets and outboard outlets can be moved up and down or side to side to regulate airflow direction. There is a shut-off wheel located below the air vanes to shut off or adjust the amount of airflow from these outlets.

Bi-Level Mode



Air comes from the instrument panel outlets and floor outlets. A slight amount of air is directed through the defrost and side window demister outlets.

NOTE:

Bi-Level mode is designed under comfort conditions to provide cooler air out of the panel outlets and warmer air from the floor outlets.

Floor Mode



Air comes from the floor outlets. A slight amount of air is directed through the defrost and side window demister outlets.

Mix Mode



Air is directed through the floor, defrost, and side window demister outlets. This setting works best in cold or snowy conditions that require extra heat to the windshield. This setting is good for maintaining comfort while reducing moisture on the windshield.

Climate Control OFF Button



Press and release the OFF button on the touchscreen, or push the OFF button on the faceplate to turn the Climate Control ON/OFF.

AUTOMATIC TEMPERATURE CONTROL (ATC) — IF EQUIPPED

Automatic Operation

1. Push the AUTO button on the front climate control display, and the word "AUTO" will illuminate along with two temperatures for the driver and front passenger. The system will then automatically regulate the amount of airflow.
2. Adjust the temperature you would like the system to maintain, by adjusting the driver and passenger temperatures. Once the desired

temperature is displayed, the system will achieve, and automatically maintain, that comfort level.

3. When the system is set up for your comfort level, it is not necessary to change the settings. You will experience the greatest efficiency by simply allowing the system to function automatically.

NOTE:

It is not necessary to move the temperature settings. The system automatically adjusts the temperature, mode, and fan speed to provide comfort as quickly as possible.

Manual Operation Override

This system offers a full complement of manual override features. The AUTO symbol in the front climate control display will no longer be illuminated when the system is being used in the manual mode.

CLIMATE VOICE COMMANDS

Adjust vehicle temperatures hands-free and keep everyone comfortable while you keep moving ahead.

Push the VR button on the steering wheel. After the beep, say one of the following commands:

- "Set the driver temperature to [Desired Temperature] degrees"
- "Set the passenger temperature to [Desired Temperature] degrees"

Voice Command for Climate may only be used to adjust the interior temperature of your vehicle. Voice Command will not work to adjust the heated seats or steering wheel if equipped.

OPERATING TIPS

Refer to the chart at the end of this section for suggested control settings for various weather conditions.

Vacation/Storage

For information on maintaining the Climate Control system when the vehicle is being stored for an extended period of time, see ➞ page 252.

Window Fogging

Vehicle windows tend to fog on the inside in mild, rainy, and/or humid weather. To clear the windows, select Defrost or Mix mode and increase the front blower speed. Do not use the Recirculation mode without A/C for long periods, as fogging may occur.

Outside Air Intake

Make sure the air intake, located directly in front of the windshield, is free of obstructions, such as leaves.

Operating Tips Chart

WEATHER	CONTROL SETTINGS
All Conditions	Set the mode control to AUTO (Auto), for optimal HVAC performance as it is engineered based on the current vehicle interior and exterior conditions
Hot Weather & Vehicle Interior Is Very Hot	Set the mode control to MAX A/C . Roll down the windows for a minute to flush out the hot air. Adjust the controls as needed to achieve comfort.

Leaves collected in the air intake may reduce airflow, and if they enter the air distribution box, they could plug the water drains. In Winter months, make sure the air intake is clear of ice, slush, and snow.

Cabin Air Filter

The Climate Control system filters out dust and pollen from the air. Contact an authorized dealer to service your cabin air filter, and to have it replaced when needed.

Windshield Wiper De-Icer — If Equipped

The Windshield Wiper De-Icer is a heating element located at the base of the windshield.

It operates automatically once the following conditions are met:

- **Activation By Front Defrost**

The Windshield Wiper De-Icer activates automatically during a cold weather manual start with **full defrost**, and when the **ambient temperature is below 33°F (0.6°C)**.

- **Activation By Rear Defrost**

The Windshield Wiper De-Icer activates automatically when the Rear Defrost is operating and the **ambient temperature is below 33°F (0.6°C)**.

- **Activation By Remote Start Operation**

When Remote Start is activated and the **outside ambient temperature is less than 33°F (0.6°C)** the Windshield Wiper De-Icer will activate. Exiting Remote Start will resume its previous operation. If the Windshield Wiper De-Icer was active, the timer and operation will continue.

WEATHER	CONTROL SETTINGS
Warm Weather	Turn  (A/C) on and set the mode control to  (Panel Mode).
Cool Sunny	Operate in  (Bi-Level Mode).
Cool & Humid Conditions	Set the mode control to  (Mix Mode) and turn  (A/C) on to keep windows clear.
Cold Weather	Set the mode control to  (Floor Mode). If windshield fogging starts to occur, move the control to  (Mix Mode).
Wet Conditions (Rain/Sleet/Snow)	Set the mode control to  (MAX Defrost) to clear window fogging as quickly as possible.

INFOTAINMENT

INTRODUCTION

UCONNECT SYSTEMS

Your vehicle is equipped with a Uconnect 5/5 NAV With 14.4-inch Display. For more information, refer to the Uconnect Radio Instruction Manual.

NOTE:

- Uconnect screen images are for illustration purposes only and may not reflect exact software for your vehicle.
- At vehicle start up, there may be a delay in certain features such as Android Auto™ and Apple CarPlay®.

RADIO OPERATION, MOBILE PHONES, AND CYBERSECURITY

RADIO OPERATION AND MOBILE PHONES

Under certain conditions, the mobile phone being on in your vehicle can cause erratic or noisy performance from your radio. This condition may be lessened or eliminated by repositioning the mobile phone within the vehicle. This condition is not harmful to the radio. If your radio performance does not satisfactorily improve from repositioning the mobile phone, it is recommended that the volume be turned down or off during mobile phone operation when not using the Uconnect system.

Regulatory And Safety Information

US/CANADA

Exposure to Radio Frequency Radiation

The radiated output power of the internal wireless radio is far below the FCC and IC radio frequency exposure limits. Nevertheless, the wireless radio will be used in such a manner that the radio is 8 inches (20 cm) or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.

CYBERSECURITY

Depending on applicability, your vehicle may be able to send or receive information from a wired or wireless network. This information allows systems and features in your vehicle to function properly.

Your vehicle may be equipped with certain security features to reduce the risk of unauthorized and unlawful access to vehicle systems and wireless communications. Vehicle software technology continues to evolve over time and FCA US LLC, working with its suppliers, evaluates and takes appropriate steps as needed. As always, if you experience unusual behavior, contact an authorized dealer immediately, or refer to your Uconnect Radio Instruction Manual for additional contact information.

The risk of unauthorized and unlawful access to your vehicle systems may still exist, even if the most recent version of vehicle software (such as Uconnect software) is installed.

WARNING!

- ONLY insert trusted devices/components into your vehicle. Media of unknown origin could possibly contain malicious software, and if installed in your vehicle, it may increase the possibility for vehicle systems to be breached.
- As always, if you experience unusual vehicle behavior, take your vehicle to an authorized dealer immediately.

NOTE:

To help further improve user experience, features, stability, etc., and minimize the potential risk of a security breach, vehicle owners should routinely check www.driveuconnect.com (US Residents) or

www.driveuconnect.ca (Canadian Residents) to learn about available Uconnect software updates.

MULTIMEDIA SYSTEM

STEERING WHEEL AUDIO CONTROLS — IF EQUIPPED

The remote sound system controls are located on the rear surface of the steering wheel at the three and nine o'clock positions.



Remote Sound System Controls

The right-hand control is a rocker-type switch with a push button in the center and controls the volume and mode of the sound system. Pushing the top of the rocker switch will increase the volume, and pushing the bottom of the rocker switch will decrease the volume.

Pushing the right-hand control's center button will make the radio switch between the various modes available (AM/FM/SXM or Media, etc.).

The left-hand control is a rocker-type switch with a push button in the center. The function of the left-hand control is different depending on which mode you are in.

The following describes the left-hand control operation in each mode:

Radio Operation

Pushing the top of the switch will seek up for the next available station and pushing the bottom of the switch will seek down for the next available station.

The button located in the center of the left-hand control will tune to the next preset station that you have programmed in the radio preset button.

Media Mode

Pushing the top of the switch once goes to the next track on the selected media (USB/Bluetooth®). Pushing the bottom of the switch once goes to the beginning of the current track, or to the beginning of the previous track if it is within eight seconds after the current track begins to play.

UCONNECT VOICE RECOGNITION

Introducing Voice Recognition

Start using Uconnect Voice Recognition with these helpful quick tips. It provides the key Voice Commands and tips you need to know to control your vehicle's Voice Recognition (VR) system.

Basic Voice Commands

The following basic Voice Commands can be given at any point while using your Uconnect system.

Push the VR button on the steering wheel. After the beep, say:

- **“Cancel”** to stop a current voice session.
- **“Help”** to hear a list of suggested Voice Commands.
- **“Repeat”** to listen to the system prompts again.

Notice the visual cues that inform you of your Voice Recognition system's status.

Get Started

The VR button  is used to activate/deactivate your Voice Recognition system. You can also use the system's Wake Up word to activate voice recognition. The Wake Up word can be set through the Uconnect Settings.

Helpful hints for using Voice Recognition:

- Reduce background noise. Wind noise and passenger conversations are examples of noise that may impact recognition.
- Speak clearly at a normal pace and volume while facing straight ahead.
- Each time you give a Voice Command, first push the VR button  or say the Wake Up word, wait until after the beep, then say your Voice Command.
- You can interrupt the help message or system prompts by pushing the VR button and saying a Voice Command from the current category.

- You can also interrupt the help message or system prompts by speaking. This feature is called “barge-in” and can be set through the Uconnect Settings.

NOTE:

If your vehicle is not equipped with Voice Recognition, you may still have voice recognition buttons. These buttons will work with Android Auto™ and Apple CarPlay® by initiating a Siri or Google Assistant voice recognition session. Depending on your device, you may need to press and hold the VR button for one second to begin a voice recognition session.



Uconnect Voice Command Buttons

- For Vehicles Equipped With Navigation: Push The Voice Recognition Button To Begin Radio, Media, Navigation, Climate, Start Or Answer A Phone Call, And Send Or Receive A Text. For Vehicles Not Equipped With Navigation: Push The Phone Button To Answer An Incoming Phone Call
- Push The Hang Up Button To End A Call Currently In Progress

Additional Information

© 2026 FCA US LLC. All rights reserved. Mopar and Uconnect are registered trademarks and Mopar Owner Connect is a trademark of FCA US LLC. SiriusXM® and all related marks and logos are trademarks of SiriusXM® Radio Inc.

For Uconnect system support, call 1-877-855-8400 (24 hours a day 7 days a week) or visit DriveUconnect.com (US) or DriveUconnect.ca (Canada).

UCONNECT SETTINGS

The Uconnect system uses a combination of buttons on the touchscreen and buttons on the touchscreen faceplate. Many features can vary by vehicle.

Buttons on the faceplate are located beside the Uconnect system in the center of the instrument panel. There is a TUNE/SCROLL knob located on the right side of the faceplate. Turn the control knob to scroll through menus and change settings. Push the center of the control knob one or more times to select or change a setting.

Your Uconnect system has a Power Off button on the left side of the faceplate.

Press the Back Arrow button on the touchscreen to exit out of a Menu or certain option on the Uconnect system.

Customer Programmable Features



Uconnect 5 NAV With 14.4-inch Display Touchscreen And Faceplate Buttons

- Uconnect Setting Selection Buttons
- Uconnect Volume and Tune/Scroll Dials

Press the Vehicle button and then press the Settings tab at the top of the touchscreen. In this menu, the Uconnect system allows you to access all of the available programmable features.

NOTE:

- Depending on the vehicle's options, feature settings may vary.
- All settings should be changed with the start button in the ON/RUN position.

When making a selection, press the button on the touchscreen to enter the desired menu. Once in the desired menu, press and release the preferred setting option until a check mark appears next to the setting, showing that setting has been selected. Once the setting is complete, press the Vehicle button to exit to the screen. Pressing the Up or Down Arrow button on

the right side of the screen will allow you to toggle up or down through the available settings.

NOTE:

The Climate Control selections on the bottom of the touchscreen will always remain on even if the Uconnect system has been turned off.

MORE INFORMATION ICON

Located next to certain settings, the More Information Icon (I) can provide additional information and context for the specific Uconnect Setting. Pressing the (I) icon will display a pop-up. For some settings, the desired option can be selected from the pop-up. Press the "X" button to close the pop-up.

DISPLAY

The Display menu provides settings that will alter the display of the Uconnect system. These settings will relate to the theme, screen brightness, and color of the touchscreen. Displayed units and on-screen pop-ups can also be adjusted.

MY PROFILE

The My Profile menu provides settings related to the selected Profile. These settings will be saved to a profile, and the vehicle will adjust to these settings when that profile is selected. The settings will include options to adjust the on-screen language, display, pop-up types, and time format.

SAFETY/ASSISTANCE

The Safety/Assistance menu provides settings related to the vehicle's safety features. These options will differ depending on the safety features equipped on the

vehicle. These settings may include options for braking and collision assist, lane changing assist, and parking assist features.

Some safety settings may be present within a sub-folder of the Safety/Assistance menu. Select the sub-folder to access those settings.

CLOCK & DATE

The Clock & Date menu provides settings related to the vehicle's clock and date. The settings include options to sync the clock with the GPS, change the clock to a 12 hour or 24 hour format, and adjust the date.

PHONE/BLUETOOTH®

The Phone/Bluetooth® menu provides settings related to Bluetooth® devices paired to the vehicle. The Device Manager can be accessed from this menu and from it, a Bluetooth® device can be paired to the vehicle. These settings include options for activating do not disturb and enabling the use of two phones with the system.

VOICE

The Voice menu provides settings for the vehicle's Voice Recognition system. The settings include options related to changing the system's response voice, changing the vehicle Wake Up word, and the ability to interrupt a voice recognition session.

NAVIGATION

The Navigation button provides settings related to the vehicle's built-in navigation system. These settings provide options to change the icons displayed on the map, how "time to arrival" is calculated, and route types.

For more information on Navigation and settings, refer to your Uconnect Radio Instruction Manual.

CAMERA

The Camera menu provides settings related to the on-vehicle camera systems. These settings include options to adjust camera delay times and the presence of camera guidelines.

MIRRORS & WIPERS

The Mirrors & Wipers menu provides settings related to mirror and wiper behavior. These settings include options for when wipers automatically activate, if the headlights come on when wipers are active, and how power mirrors may behave.

LIGHTS

The Lights menu provides settings related to the vehicle's interior and exterior lights. These settings include options related to the brightness of the interior lights, the amount of time it takes for the headlights to deactivate, and flashing the lights when the vehicle is locked.

BRAKES

The Brakes menu provides settings related to the vehicle's brake system. These settings include options for activating or deactivating the AutoPark brake or setting the brakes for vehicle service.

DOORS & LOCKS

The Doors & Locks menu provides settings related to the vehicle's doors and how the lock/unlock systems will behave. These settings will include options related to the lights flashing or the horn sounding when the

vehicle is locked, activation of the passive entry system, and the number of presses on the key fob Unlock button to unlock all the doors.

SEATS & COMFORT

The Seats & Comfort menu provides settings related to seat comfort features. The settings may include options for automatically activating the driver heated seats or steering wheel.

KEY OFF OPTIONS

The Key Off Options menu provides settings related to vehicle shut off and will only activate when the vehicle is OFF. These settings include options on how long the headlights will take to deactivate, how long the radio will take to turn off, and if the radio will turn off after the doors are opened.

AUDIO

The Audio menu provides settings related to the vehicle's sound system. These settings can change the audio location within the vehicle, adjust the bass or treble levels, and auto-play settings from an audio device or smartphone.

For more information on audio settings, refer to your Uconnect Radio Instruction Manual.

NOTIFICATIONS

The Notifications menu provides settings related to displayed notifications for the system. These settings include options for the notification sounds and the type of notifications that will display.

SIRIUSXM® SETUP

The SiriusXM® Setup menu provides settings related to SiriusXM® Satellite Radio. These settings includes options used to skip specific radio channels and restart favorite songs from the beginning.

ACCESSIBILITY

The Accessibility menu provides a setting for video button readback related to Uconnect screens. For example, when activated, and the Play button is selected, the system will announce "Play Button Selected", and then once pressed again, the Play button will perform its action.

SOFTWARE UPDATES

The Software Updates menu provides settings related to updating the Uconnect software. Downloading software updates to the Uconnect system over Wifi can be activated or deactivated.

SYSTEM INFORMATION

The System Information menu provides information on Uconnect system versions and licensing.

RESET

The Reset menu provides settings related to resetting the Uconnect system back to its default settings. These settings can clear personal data, reset selected settings from other menus, and restart the radio.

3RD PARTY APPS — IF EQUIPPED

If equipped, your vehicle may contain some 3rd party apps, which will further enhance your Uconnect system.

McIntosh

McIntosh is a 3rd party app that can enhance your Uconnect system's media player. For the app to be effective, there must be audio playback in the Uconnect media player. McIntosh can control the playback of audio as well as display the output level decibel meters.

To launch the app, begin playing audio and follow these steps:

1. Press the Apps button.
2. Press the McIntosh app.

The McIntosh app will allow you to perform the following when listening to music:

NOTE:

The Seek feature will not work while using Bluetooth®.

Skip Backward	Press to skip backward. Press and hold to fast rewind.
Play/Pause	Press to play/pause the track.
Skip Forward	Press to skip forward. Press and hold to fast forward.
Repeat	Press to repeat track. Press again to repeat playlist. Press again to turn off (works only with a USB device).

Change Channel Down	Press to change channel down. Press and hold to seek channel down. While using AM/FM, pressing the channel down will change the frequency by 0.1. Pressing and holding in AM/FM will seek channels.
Change Channel Up	Press to change channel up. Press and hold to seek channel up. While using AM/FM, pressing the channel up will change the frequency by 0.1. Pressing and holding in AM/FM will seek channels.
Menu	Press to access McIntosh settings.
About	Press to learn more about McIntosh.
Audio	Press to open the Audio Settings page of the Uconnect media player.

NOTE:

To change the source within the app, press the source name. Pressing this will open a menu with all available sources. To change the audio source outside of the app, press the Media button, and then press the Sources button.

To exit the app, press any of the buttons on the bottom menu bar.

Day/Night Mode

Press the Menu button in the upper left-hand corner to access McIntosh settings. Tap on a mode to set it as the default, or tap “Auto Mode” to enable your screen to automatically switch between Day and Night Modes.

Theater Mode

Press the Menu button in the upper left-hand corner to access McIntosh settings. Under “Theater Mode”, select “On” to bring forward the McIntosh Meters. This will enlarge the meters for a more prominent view.

NOTE:

Theater Mode will engage after 10 seconds without input from the user.

For more information on McIntosh, the McIntosh app and its functionality, please visit <https://www.mcintoshlabs.com>.

OFF-ROAD PAGES — IF EQUIPPED

To access Off-Road Pages, press the Vehicle Mode button, select Dashboard, and then select Off Road Pages.

DESCRIPTION

If your vehicle is equipped with Off-Road Pages, it will provide you vehicle status information while operating on off-road conditions.

To access Off-Road Pages, press the Apps button on the touchscreen. Then, select Off-Road pages.

**Off Road Pages****Vehicle Dynamics**

The Vehicle Dynamics page displays information concerning the dynamics of the vehicle.

The following information is displayed:

- Rear Locker Status
- Steering Angle
- Current 4WD Mode
- Latitude and Longitude
- Altitude



Vehicle Dynamics Page

Accessory Gauge

The Accessory Gauge page displays the current status of the vehicle's Battery Voltage, High Voltage Battery Temperature, Front Motor Temperature, and Rear Motor Temperature.



Accessory Gauges Menu

Pitch & Roll

The Pitch & Roll page displays the vehicle's current pitch (angle up and down) and roll (angle side to side) in degrees. The Pitch & Roll gauges provide a visualization of the current vehicle angle.



Pitch & Roll Page

Selec-Terrain — If Equipped

The Selec-Terrain page displays the current Selec-Terrain Mode through a high resolution image. Adjusting the Selec-Terrain Mode will alter the image on the screen. The vehicle must be in the ON/RUN position to display Selec-Terrain information.

The selectable modes are as follows:

- Rock
- Sand/Mud
- Snow
- Auto — Default
- Sport

NOTE:

The Off-Road Pages Status Bar will also display the current Selec-Terrain Mode.

TrailCam — If Equipped

Your vehicle may be equipped with a TrailCam that allows you to see an on-screen image of the front view of your vehicle. The image will be displayed on the touchscreen along with a caution note "Check Entire Surroundings" across the top of the screen.

To activate, press the TrailCam button on the touchscreen.



TrailCam Activation

Trail Recording — If Equipped

Overview

The Trail Recording feature can be accessed from a variety of different ways: Within the Vehicle Dashboard screen, from the App Drawer menu, within the Off-Road Pages Vehicle Dynamics. There will be options within "Trail Recording" where you can start recording

your trail or view saved recordings where you can see previous trails recorded.

Recording A Trail And Stop Recording

To start recording a trail, select “Start Recording” towards the bottom of the touchscreen. Once selected, your trail will start recording for as long as desired.

When the trail is over, press “Stop Recording”. Select whether to save the trail in which the trail will be saved and will appear in “Saved Recordings”. Selecting “Cancel” will not save the trail, and the trail will be deleted.

NOTE:

After 30 miles (48 km) a notification will appear on the touchscreen asking if you want to keep recording.

Adding a Waypoint

On the bottom left-hand side of the touchscreen select “Add Waypoint” from the trail recording screen. This will allow the user to pin a location along the trail, both during and after the recording. There are three selectable options to mark a Waypoint: A Waypoint can be placed whether the vehicle is in or out of motion, but can only be edited when the vehicle is not moving. As a default, Waypoints are named chronologically in the order in which the Waypoints are marked or added. They can be renamed later by pressing the edit icon located to the right of the defaulted Waypoint name.

- Places
- Obstacle
- Guidance

NOTE:

A Waypoint can be placed whether or not the vehicle is in motion, but can only be edited when the vehicle is not moving.

Expand/Collapse View

While in the Trail Recording screen, press the Expand button located to the right of the Map View to enlarge the Trail Map screen during recordings. Once in expanded view, press the collapse icon which will shrink the trail map during screen recordings.

Editing A Trail

After finishing recording a trail, there will be a scale to rate the difficulty of the trail for future reference. The scale is from 1-10 with one being the easiest and 10 being the most difficult.

NOTE:

Setting the difficulty is not required to save the trail and can be edited afterwards.

Editing/Deleting a Waypoint

To edit a Waypoint, select the desired Waypoint on the map. Once selected, choose the type of Waypoint. Once selected, choose a sub-type that describes the Waypoint. Waypoint sub-types are listed in the following table:

Places	Obstacles	Guidance
Camping	Mud	Bare Left
Scenic View	Rock	Bare Right

Places	Obstacles	Guidance
Staging Area	Sand	Dead End
Trailhead	Steep Ascent	Hard Left
Water	Steep Descent	Hard Right
	Water	Slow
		Route Closure

Waypoints can be renamed later by pressing the pencil icon located to the right of the defaulted Waypoint name. Selecting the pencil icon will bring up a keyboard which will allow you to customize the Waypoint name.

NOTE:

Editing Waypoints is not available while the vehicle is in motion. To edit and customize Waypoints the vehicle must not be in motion.

If you want to Delete a Waypoint, select the Waypoint that you created and press the delete Waypoint button located towards the bottom of your touchscreen. The pop-up, “Your waypoint was deleted successfully” will appear on your touchscreen once the Waypoint was successfully deleted.

Saving And Canceling A Trail

When finished editing a trail select “Save”. The trail will be stored in the Saved Recordings tab.

Selecting “Cancel” will delete the trail, and a pop-up screen will appear asking if you are sure that you want to cancel your current trail recording. Selecting “No,

Don't Cancel", or the X button, will take you back to the Waypoint editing screen. Selecting "Yes, Cancel" will discard the selected trail recording.

Saved Trails

To view previously saved trails, click the Saved Recordings button on the Trail Recording home page. Once entering Saved Recordings, a list of previously saved trails will be listed. The Remove Icon button to the far right of each trail will delete the trail. To delete all trails select "Delete All" towards the bottom of the touchscreen.

NOTE:

Saved recordings can be accessed even once the Brand connected services subscription has expired.

After selecting a saved recording, options will be available to view, edit, delete, or export the recording onto a USB device. Pressing "View Performance Data" will showcase the vehicle's pitch, roll, altitude, and location for each selected Waypoint. A Snapshot feature is available, where a photo of the performance data can be exported to a connected USB device.

Export a Recording onto a USB

After selecting a saved recording, press the Export button towards the bottom of the touchscreen and select the USB icon option. There will be a pop-up message afterwards stating whether or not the export was successful.

STARTING AND OPERATING

STARTING PROCEDURE

NORMAL STARTING

Achieving Vehicle READY Using The Start Button

1. The transmission must be in PARK or NEUTRAL.
2. Press and hold the brake pedal while pushing the start button once.



Start button

3.  The READY indicator will appear in the instrument cluster display when the vehicle is in Ready to Drive mode.
4. If you wish to terminate Ready to Drive mode, push the start button again.

Start Button Functions — With Driver's Foot Off The Brake Pedal (In PARK Or NEUTRAL Position)

The start button operates similar to an ignition switch by providing two positions: OFF, and ON/RUN. To change the power mode without starting the vehicle (to power certain accessories), follow these steps:

1. Begin with the start button in the OFF position.
2. Push the start button once, without brake pedal being pressed, to place the start button in the ACC position (instrument cluster will display "ACC").

NOTE:

The vehicle is not able to be driven in the On or ACC position, see "Achieving Vehicle READY Using The Start Button" previously defined in this section for further information.

3. Push the start button a second time, without the brake pedal being pressed, to return the start button to the OFF position (instrument cluster will display "OFF").

NOTE:

Only press one pedal at a time while driving the vehicle. Torque performance of the vehicle could be reduced if both pedals are pressed at the same time. If pressure is detected on both pedals simultaneously, a warning message will display in the instrument cluster.

To achieve Propulsion System Active (PSA) or Ready to Drive mode, press the brake pedal while pushing the start button.

In extreme temperatures, high or low, the high voltage battery may need to be conditioned, and therefore may require the vehicle to be plugged in ➡ page 132.

NOTE:

If the start button does not change modes when the button is pushed, the key fob may have a low or depleted battery. A back-up method can be used to operate the start button switch. Put the nose side of the key fob (side opposite of the emergency key) against the start button and push to operate the button.

AUTO PARK

AutoPark is a supplemental feature to assist with placing the vehicle in PARK should the situations on the following pages occur. It is a back up system and should not be relied upon as the primary method by which the driver shifts the vehicle into PARK.

The conditions under which AutoPark will engage are outlined on the following pages.

WARNING!

- Never use the PARK position as a substitute for the parking brake. Always apply the parking brake fully when exiting the vehicle to guard against vehicle movement and possible injury or damage.
- Your vehicle could move and injure you and others if it is not in PARK. Check by trying to move the

(Continued)

WARNING!

gear selector out of PARK with the brake pedal released. Make sure the gear box is in PARK before exiting the vehicle.

- The gear box may not engage PARK if the vehicle is moving. Always bring the vehicle to a complete stop before shifting to PARK, and verify that the gear selector indicator solidly indicates PARK (P) without blinking. Ensure that the vehicle is completely stopped, and the PARK position is properly indicated, before exiting the vehicle.
- It is dangerous to shift out of PARK or NEUTRAL if your foot is not firmly pressing the brake pedal.
- Unintended movement of a vehicle could injure those in or near the vehicle. As with all vehicles, you should never exit a vehicle while the electric motor is on. Before exiting a vehicle, always come to a complete stop, then apply the parking brake, shift the gear selector into PARK, and turn the Start button OFF. When the Start button is OFF position, the gear box is locked in PARK, securing the vehicle against unwanted movement.
- When exiting the vehicle, always make sure the Start button is in the OFF position, remove the key fob from the vehicle, and lock the vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector.

(Continued)

WARNING!

- Do not leave the key fob in or near the vehicle (or in a location accessible to children), and do not leave the Start button in the ACC or ON/RUN position. A child could operate power windows, other controls, or move the vehicle.

ALWAYS DO A VISUAL CHECK that your vehicle is in PARK by looking for the "P" in the instrument cluster display and on the gear selector. As an added precaution, always apply the parking brake.

If the vehicle is not in PARK and the driver turns off the vehicle, if certain conditions are met, the vehicle will AutoPark, automatically shifting the vehicle's transmission to the PARK position. The rotary shifter will automatically reset itself to the PARK position. The vehicle's start button will then move to the OFF position (electric motor off). When AutoPark is activated the instrument cluster will display the message "AutoPark Engaged".

AutoPark will engage when all of these conditions are met:

- Vehicle is equipped with a gear selector
- Vehicle is not in PARK
- Vehicle speed is 1.2 mph (1.9 km/h) or less
- Driver has pushed the start button button

If the vehicle is not in PARK and the driver exits the vehicle with the on. If certain conditions are met, the vehicle will AutoPark, automatically shifting the vehicle

to the PARK position. The Electric Park Brake SAFE HOLD feature will also activate in some conditions.

NOTE:

The electric motor will remain on.

AutoPark will engage when all of these conditions are met:

- Vehicle is equipped with a gear selector
- Vehicle is not in PARK
- Vehicle speed is 1.2 mph (1.9 km/h) or less
- Driver's door is ajar
- Driver's seat belt is unbuckled
- Brake pedal is not pressed

The message **"AutoPark Engaged"** will display in the instrument cluster.

WARNING!

- Never use the PARK position as a substitute for the parking brake. Always apply the parking brake fully when exiting the vehicle to guard against vehicle movement and possible injury or damage.
- Your vehicle could move and injure you and others if it is not in PARK. Check by trying to move the gear selector out of PARK with the brake pedal released. Make sure the gear box is in PARK before exiting the vehicle.
- The gear box may not engage PARK if the vehicle is moving. Always bring the vehicle to a complete stop before shifting to PARK, and verify that

(Continued)

WARNING!

the gear selector indicator solidly indicates PARK (P) without blinking. Ensure that the vehicle is completely stopped, and the PARK position is properly indicated, before exiting the vehicle.

- It is dangerous to shift out of PARK or NEUTRAL if your foot is not firmly pressing the brake pedal.
- Unintended movement of a vehicle could injure those in or near the vehicle. As with all vehicles, you should never exit a vehicle while the electric motor is on. Before exiting a vehicle, always come to a complete stop, then apply the parking brake, shift the gear selector into PARK, and turn the Start button OFF. When the Start button is OFF position, the gear box is locked in PARK, securing the vehicle against unwanted movement.
- When exiting the vehicle, always make sure the Start button is in the OFF position, remove the key fob from the vehicle, and lock the vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector.
- Do not leave the key fob in or near the vehicle (or in a location accessible to children), and do not leave the Start button in the ACC or ON/RUN position. A child could operate power windows, other controls, or move the vehicle.

CAUTION!

Damage to the gear box may occur if the following precautions are not observed:

- Shift into or out of PARK or REVERSE only after the vehicle has come to a complete stop.
- Before shifting into any gear, make sure your foot is firmly pressing the brake pedal.

Achieving Propulsion System Active (PSA) Using the Start Button

1. The gear selector must be in PARK or NEUTRAL.
2. Press and hold the brake pedal while pushing the start button once.

To release the parking brake manually, the start button must be in the ON/RUN position. Press on the brake pedal, then push the parking brake switch momentarily.

If the driver shifts into PARK while moving, the vehicle may park.

Park will engage **ONLY** when vehicle speed is 1.2 mph (1.9 km/h) or less.

The message **"Vehicle Speed Is Too High To Shift to P"** will be displayed in the instrument cluster if vehicle speed is above 1.2 mph (1.9 km/h). The gear position indicator will blink continuously until the selector is returned to the proper position, or the requested shift can be completed.

WARNING!

If vehicle speed is above 1.2 mph (1.9 km/h) when the driver shifts into PARK, the transmission will default to NEUTRAL until the vehicle speed drops below 1.2 mph (1.9 km/h) and the previously stated condition is met, enabling AutoPark. A vehicle left in the NEUTRAL position can roll. As an added precaution, always apply the parking brake when exiting the vehicle.

AFTER STARTING

To optimize energy efficiency, the vehicle will automatically control electric motor operation.

TO TURN OFF THE VEHICLE USING START BUTTON

1. Place the gear selector in PARK, then push and release the Start button.
2. The Start button indicator will return to the OFF position.
3. If the gear selector is not in PARK, with vehicle speed less than speed greater than 5 mph (8 km/h), when the Start button is pushed, the instrument cluster will display a "Vehicle Not In Park" message, and the vehicle will remain running.

NOTE:

This vehicle is equipped with an automatic shutdown feature. If the vehicle is left in a READY state (vehicle running) with the gear selector in PARK for one hour, the vehicle will automatically turn itself off.

The vehicle provides automatic notification, using a three Horn Chirp Alert, cluster chiming, and a cluster message "Key Fob Has Left The Vehicle" if the vehicle was not turned OFF (still "Ready to Drive") and a valid key fob for the vehicle is not detected within the passenger cabin, following the opening and closing of any passenger compartment door (requires all doors to be closed before the key fob check will occur). These automatic alerts are to remind the driver to turn off the vehicle before leaving it, as well as, to let the driver know that the vehicle's key fob may have been unintentionally removed from the vehicle by an exiting passenger. After providing the Horn Chirp Alert, additional auto chirps will be inhibited until the gear selector has been moved out of park or Start button cycled.

BRAKES

ELECTRIC PARK BRAKE (EPB)

Your vehicle is equipped with an EPB that offers simple operation, and some additional features that make the parking brake more convenient and useful.

The parking brake is primarily intended to prevent the vehicle from rolling while parked. Before leaving the vehicle, make sure that the parking brake is applied. Also, be certain to leave the transmission in PARK.

You can engage the parking brake in two ways:

- Manually, by applying the EPB switch.
- Automatically, by enabling the Auto Park Brake feature in the customer programmable features section of the Uconnect settings.

The EPB switch is located on the instrument panel to the left of the steering wheel (below the headlamp switch).



Electric Park Brake Switch

To apply the parking brake manually, pull up on the switch momentarily. You may hear a sound from the back of the vehicle while the parking brake engages. Once the parking brake is engaged, the Brake Warning Light in the instrument cluster and an indicator on the switch will illuminate. If your foot is on the brake pedal while you apply the parking brake, you may notice a small amount of brake pedal movement. The parking brake can be applied even when the start button is OFF but the Brake Warning Light will not illuminate, however, it can only be released when the start button is in the ON/RUN position.

NOTE:

The EPB Warning Light will illuminate if the EPB switch is held for longer than 20 seconds in either the released or applied position. The light will extinguish upon releasing the switch.

If the Auto Park Brake feature is enabled, the parking brake will automatically engage whenever the transmission is placed in PARK. If your foot is on the brake pedal, you may notice a small amount of brake pedal movement while the parking brake is engaging.

The parking brake will release automatically when the start button is ON, the gear box is in DRIVE or REVERSE, the driver's seat belt is buckled, and an attempt is made to drive away.

To release the parking brake manually, the start button must be in the ON/RUN position. Put your foot on the brake pedal, then push the EPB switch down momentarily. You may hear a sound from the back of the vehicle while the parking brake disengages. You may also notice a small amount of movement in the brake pedal. Once the parking brake is disengaged, the Brake Warning Light in the instrument cluster and the LED indicator on the switch will extinguish.

NOTE:

When parking on a hill, it is important to turn the front wheels toward the curb on a downhill grade and away from the curb on an uphill grade. Apply the parking brake before placing the gear selector in PARK, otherwise the load on the gear box locking mechanism may make it difficult to move the gear selector out of PARK.

WARNING!

- Never use the PARK position as a substitute for the parking brake. Always apply the parking brake when parked to guard against vehicle movement and possible injury or damage.

(Continued)

WARNING!

- When exiting the vehicle, always turn the start button off, secure the key fob, and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector.
- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave a vehicle equipped with Keyless Enter 'n Go™ in the ON/RUN position. A child could operate power windows, other controls, or move the vehicle.
- Be sure the parking brake is disengaged before driving; failure to do so can lead to a brake failure and a collision.
- Always make sure the parking brake is engaged when leaving your vehicle, or it may roll and cause damage or injury. Also be certain to leave the transmission in PARK. Failure to do so may allow the vehicle to roll and cause damage or injury.

CAUTION!

If the Brake System Warning Light remains on with the parking brake released, a brake system malfunction is indicated. Have the brake system serviced by an authorized dealer immediately.

If exceptional circumstances should make it necessary to engage the parking brake while the vehicle is in motion, maintain upward pressure on the EPB switch for as long as engagement is desired. The Brake Warning Light will illuminate, and a continuous chime will sound. The rear stop lamps will also be illuminated automatically while the vehicle remains in motion.

To disengage the parking brake while the vehicle is in motion, release the switch. If the vehicle is brought to a complete stop using the parking brake, when the vehicle reaches approximately 3 mph (5 km/h), the parking brake will remain engaged.

WARNING!

Driving the vehicle with the parking brake engaged, or repeated use of the parking brake to slow the vehicle, may cause serious damage to the brake system. Be sure the parking brake is disengaged before driving; failure to do so can lead to brake failure and a collision.

In the unlikely event of a malfunction of the EPB system, a yellow EPB Warning Light will illuminate. This may be accompanied by the Brake Warning Light flashing. In this event, urgent service of the EPB system is required. Do not rely on the parking brake to hold the vehicle stationary.

Auto Park Brake

The EPB can be programmed to be applied automatically whenever the vehicle is at a standstill and the transmission is placed in PARK. Auto Park Brake is enabled and disabled by customer selection through

the customer programmable features section of the Uconnect Settings ➡ page 115.

Any single Auto Park Brake application can be bypassed by pushing the EPB switch to the release position while the transmission is placed in PARK.

SafeHold

SafeHold is a safety feature of the EPB system that will engage the parking brake automatically if the vehicle is left unsecured while the start button is in ON/RUN.

The parking brake will automatically engage if all of the following conditions are met:

- The vehicle is at a standstill.
- There is no attempt to press the brake pedal or accelerator pedal.
- The driver's seat belt is unbuckled.
- The driver's door is open (not applicable when doors are off).
- The transmission is not in park.

SafeHold can be temporarily bypassed by pushing the EPB switch while the driver's door is open. Once manually bypassed, SafeHold will be enabled again once the vehicle reaches 12 mph (20 km/h) or the start button is turned to the OFF position and back to ON again.

Auto Hold — If Equipped

Auto Hold is a comfort feature that allows the driver to remove their foot from the brake pedal once the vehicle has come to a stop. The vehicle must be held at a standstill for a predetermined amount of

time by hydraulic braking. The EPB will then engage and continue to hold the vehicle at a stop until the driver applies the accelerator pedal. Auto Hold can be activated or deactivated by pushing the AUTO HOLD button located on the switch bank.



AUTO HOLD Switch

The following conditions must be met for Auto Hold to activate:

- Driver's door is closed
- Driver's seat belt is fastened
- Vehicle is at a standstill
- Forward gear is selected
- ACC is not engaged
- EPB is not applied
- ParkSense Active Park Assist System auto parking maneuver is not activated

Brake Maintenance Mode

We recommend having your brakes serviced by an authorized dealer. You should only make repairs for which you have the knowledge and the right equipment. You should only enter Brake Maintenance mode during brake service.

When servicing your rear brakes, it may be necessary for you or your technician to push the rear piston into the rear caliper bore. With the EPB system, this can only be done after retracting the EPB actuator. Fortunately, actuator retraction can be done easily by entering the Brake Maintenance mode through the Uconnect Settings in your vehicle. This menu-based system will guide you through the steps necessary to retract the EPB actuator in order to perform rear brake service.

Maintenance mode has requirements that must be met in order to be activated:

- The vehicle must be at a standstill.
- The parking brake must be unapplied.
- The transmission must be in PARK or NEUTRAL.

While in Maintenance mode, the EPB Warning Light will flash continuously while the start button is ON.

When brake service work is complete, the following steps must be followed to reset the parking brake system to normal operation:

- Ensure the vehicle is at a standstill.
- Press the brake pedal with moderate force.
- Apply the EPB switch.

WARNING!

You can be badly injured working on or around a motor vehicle. Do only that service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.

TRANSMISSIONS

ELECTRIC DRIVE MODULE (EDM)

Your vehicle uses a Single-Speed Electric Drive Module (EDM) to direct the output from the electric motor. The single-speed EDM is operated using a rotary knob instead of a traditional gear selector.

WARNING!

- Only place the gear selector into gear when your foot is firmly pressing the brake pedal.
- Unintended movement of a vehicle could injure those in or near the vehicle. As with all vehicles, you should never exit a vehicle while the vehicle is in "READY" mode. Before exiting a vehicle, always apply the parking brake, shift the gear selector into PARK, and place the start button in the OFF position. Once start button is in the OFF position the transmission is locked in PARK, securing the vehicle against unwanted movement.
- When leaving the vehicle, always remove the key fob and lock your vehicle.

(Continued)

WARNING!

- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector range buttons.
- Do not leave the key fob in or near the vehicle (or in a location accessible to children). A child could operate power windows, other controls, or move the vehicle.

Gear Ranges

The Electric Drive Module (EDM) is controlled using a rotary electronic gear selector located on the center console. The gear range (PRND) is displayed both above the gear selector and in the instrument cluster.

To select a gear range, rotate the gear selector.

**Gear Selector****NOTE:**

- The brake pedal must be depressed to select a gear.
- After selecting any gear, wait a moment to allow the selected gear to engage before accelerating.

PARK (P)

The Park (P) selection supplements the parking brake by locking the Electric Drive Module (EDM). The vehicle can be started in this range. Never attempt to use P while the vehicle is in motion. Apply the parking brake when exiting the vehicle in P.

When parking on flat surfaces, you can first shift to P and then apply the parking brake.

When parking on sloping roads, apply the parking brake before shifting to P. For added safety, turn the front wheels towards the curb.

NOTE:

Refer to the gear position shown on the instrument panel display and check that it indicates P.

WARNING!

- Never use the PARK position as a substitute for the parking brake. Always apply the parking brake when exiting the vehicle to guard against vehicle movement and possible injury or damage.
- Your vehicle could move and injure you and others if it is not in PARK. Check by trying to move the gear selector out of PARK with the brake pedal released. Make sure the gear selector is in PARK before exiting the vehicle.

*(Continued)***WARNING!**

- The gear box may not engage PARK if the vehicle is moving. Always bring the vehicle to a complete stop before shifting to PARK, and verify that the gear selector indicator solidly indicates PARK (P) without blinking. Ensure that the vehicle is completely stopped, and the PARK position is properly indicated, before exiting the vehicle.
- If your foot is not firmly pressing the brake pedal, the vehicle could accelerate quickly forward or in reverse. You could lose control of the vehicle and hit someone or something. Only shift into gear when your foot is firmly pressing the brake pedal.
- Unintended movement of a vehicle could injure those in or near the vehicle. As with all vehicles, you should never exit a vehicle while the vehicle is on. Before exiting a vehicle, always come to a complete stop, then apply the parking brake, shift the gear selector into PARK, and turn the start button OFF. When the start button is the OFF position, the gear box is locked in PARK, securing the vehicle against unwanted movement.
- When exiting the vehicle, always make sure the Start button is in the OFF position, remove the key fob from the vehicle, and lock the vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the transmission gear selector.

(Continued)

WARNING!

- Do not leave the key fob in or near the vehicle (or in a location accessible to children), and do not leave the start button in the ACC or ON/RUN position. A child could operate power windows, other controls, or move the vehicle.

REVERSE (R)

The car can be moved backwards in this position. Select position Reverse (R) only with the car at a standstill.

NEUTRAL (N)**WARNING!**

Do not coast in NEUTRAL and never turn off the ignition to coast down a hill. These are unsafe practices that limit your response to changing traffic or road conditions. You might lose control of the vehicle and have a collision.

CAUTION!

Towing the vehicle, coasting, or driving for any other reason with the transmission in NEUTRAL can cause severe transmission damage. Refer to "Recreational Towing" in "Starting And Operating" and "Towing A Disabled Vehicle" in "In Case Of Emergency" for further information.

DRIVE (D)

Use Drive (D) driving in towns and on motorways.

Auto Park

The function automatically put the transmission in Park (P) if there is any indication that the driver may leave the car while the transmission is in Drive (D), Neutral (N) or Reverse (R).

Operation with the Start Button in the ON/RUN position

The Auto Park function is activated when the gear selector is in position D, N or R and the following conditions are detected:

- Seat belt not fastened
- Brake pedal released
- Accelerator pedal released
- Driver's door open
- Vehicle speed is 1.2 mph (1.9 km/h) or less

Operation with the Start Button in the OFF position

The Auto Park function is activated when the gear selector is in position D, N or R, the vehicle speed is less than 2 mph (3 km/h) and the user requests the vehicle to be turned off by placing the Start button in the OFF position.

Gear engagement inhibition

This system prevents shifting the gear selector from position P or N if the brake pedal has not been previously pressed. With the Start button in the ON/RUN position: the brake pedal must be pressed in order to shift the gear box from position P to positions R, N or D; to shift the gear box from position N to positions R or D the brake pedal must be pressed.

Stopping the vehicle

The system automatically engages P when the vehicle is shut down (Start button in the OFF position).

To stop the vehicle at speeds higher than 1.6 mph (2.5 km/h) hold the Start button or press it three times in a row within a few seconds. The Start button is in the ON/RUN position.

SELEC-TERRAIN — IF EQUIPPED**SELEC-TERRAIN MODE SELECTION**

Selec-Terrain combines the capabilities of the vehicle control systems, along with driver input, to provide the best performance for all terrains. The Selec-Terrain control is located on the center console. Use the upper control to cycle through the modes.



Selec-Terrain Control

Selec-Terrain consists of the following modes:

- **ROCK** (if equipped) – Traction-based tuning with improved steerability for use on high traction off-road surfaces. Use for low speed obstacles such as large rocks, deep ruts, etc.
- **SAND/MUD** (if equipped) – Off-road calibration for use on low traction surfaces such as mud or sand. Driveline is maximized for traction. Some binding may be felt on less forgiving surfaces. The electronic brake controls are set to limit traction control management of wheel spin.
- **SNOW** – Tuning set for additional stability in inclement weather. Use on and off road on loose traction surfaces such as snow.
- **AUTO** – Fully automatic full-time four-wheel drive operation can be used on and off road. Balances traction with seamless steering feel to provide improved handling and acceleration over two-wheel drive vehicles.
- **SPORT** – This mode alters the pedal response for sportier driving.

LOCKING REAR AXLE — IF EQUIPPED

The system locks the rear axle to evenly provide power to both rear wheels. The locking rear axle control is located on the center console. Use the lower control to lock and unlock the rear axle.



Locking Rear Axle Control

The locking rear axle is speed dependent:

For Auto, Sport, and Snow

- Relocks when at vehicle speeds less than 20 mph (32 kph).
- Unlocks automatically when vehicle speeds reach greater than 25 mph (40 kph).

For Rock and Sand/Mud

- Unlocks automatically when vehicle speeds reach greater than 35 mph (56 kph).
- Relocks when at vehicle speeds less than 20 mph (32 kph).

When the control is used to lock the axle, the axle may stay unlocked until the vehicle starts moving. Steering while the vehicle is moving will also help to lock the rear axle. An indicator on the instrument cluster will blink during engagement attempts.

When the control is used to unlock, the axle can stay locked until the vehicle starts moving. Changing the

steering angle from right to left, while the vehicle is moving will help to unlock the rear axles.

Off Road pages show the current steering angle (+/-15 degrees change is ideal for unlocking).

If the axle fails to lock, it is most likely due to the internal mechanism teeth alignment not being reached. The axle may have to be locked a second time if engagement timed out and a cluster message indicated that the component unlocked.

INSTRUMENT CLUSTER DISPLAY MESSAGES

When the appropriate conditions exist, a message will appear in the instrument cluster ➡ page 96.

CHARGING

HIGH VOLTAGE BATTERY

Your vehicle is equipped with a Lithium-ion high voltage battery that is used to power the electric powertrain systems and the 12 Volt vehicle electrical system.

The high voltage battery is located under the middle section of the vehicle, below and in front of the second row seating. The high voltage battery is maintenance free and designed to last for the life of the vehicle.

Lithium-ion batteries provide the following benefits:

- Lithium-ion batteries are much lighter than other types of rechargeable batteries of the same size.
- Lithium-ion batteries hold their charge; they only lose approximately three percent of their charge per month.

- Lithium-ion batteries have no memory, which means that you do not have to completely discharge them before recharging, as with some other batteries.
- Lithium-ion batteries can be recharged and discharged thousands of times.

High Voltage Battery Service Disconnect

Only a qualified service technician should access the high voltage battery service disconnect. If your vehicle requires high voltage battery service, see an authorized dealer.

WARNING!

- Never try to remove the high voltage battery service disconnect. The high voltage battery service disconnect is used when your vehicle requires service by a qualified technician at an authorized dealership. Failure to follow this warning can result in electrical shock, toxic emissions, fire, and other hazards which can cause death or serious injury including severe burns, respiratory injuries, and blindness.
- The high voltage battery and battery case have no parts that you or an unqualified technician can service. The high voltage system can be hot during and after starting and when the vehicle is shut off or charging. Under no circumstances should you or an unqualified technician open, disassemble, penetrate, or tamper with the high voltage battery, battery case, their cables, or connectors. High Voltage wires, connectors, and wire coverings are identified by their distinct orange color. Damage

(Continued)

WARNING!

to these components can result in electrical shock, toxic emissions, fire, and other hazards which can cause death or serious injury including severe burns, respiratory injuries, and blindness. You should take the vehicle to an authorized dealership for any service or maintenance on these high voltage components.

Disposal of the High Voltage Battery

Your vehicle's high voltage battery is designed to last the life of your vehicle. See an authorized dealer for information on the disposal of the battery if it should require replacement.

WARNING!

Your vehicle contains a sealed Lithium-ion high voltage battery. If the battery is disposed of improperly, there is a risk of electrical shock and toxic emissions which can cause severe burns, respiratory injuries, fires, and other hazards resulting in serious injury or death. Bring the vehicle to your dealership when the life of the battery is exhausted.

General Information

The vehicle is also equipped with a Battery Management system that is designed to:

- Ensure safe operation
- Maximize driving range
- Maximize the life expectancy of the high voltage battery

NOTE:

- During vehicle start up and shut down, a clicking noise may be heard from within the vehicle. When the vehicle is in the ON/RUN position, the high voltage battery contactors inside the battery are closed to make the stored electricity inside available for vehicle use. After the vehicle is shut down, the contactors open to electrically isolate the battery from other vehicle systems. The clicking noise is the sound of these contactors as they open and close during normal operation.
- The Audible Pedestrian Warning system will emit a noise from the front of the vehicle when driving forward at speeds below 22 mph (35 km/h). It will also emit a noise from the rear of the vehicle when in REVERSE, and from both the front and rear of the vehicle when in NEUTRAL. For more information on this system, see ➞ page 157.

WARNING!

In the event of a collision:

- If your vehicle is still drivable, pull off the road and place the vehicle in the PARK, apply the parking brake, and turn the vehicle off.
- Check your vehicle to see if there are exposed high-voltage parts or cables. High Voltage wires, connectors, and wire coverings are identified by their distinct orange color. To avoid electrical shock which can result in serious injury or death, never touch wiring, connectors, and other high-voltage parts, such as the inverter unit and the Lithium-ion battery.

(Continued)

WARNING!

- If your vehicle was not in a collision but the undercarriage received an impact from road debris or other source while driving, have the Lithium-ion battery inspected by an authorized dealer.
- Leaks or damage to the Lithium-ion battery may result in a fire and toxic emissions which can cause severe burns, respiratory injuries, and other serious injuries or death. If you discover these leaks, contact emergency services immediately. Since the fluid leak may be Lithium Manganate from the Lithium-ion battery, never touch the fluid leak inside or outside of the vehicle. If the fluid contacts your skin or eyes, wash these areas immediately with a large amount of water and obtain immediate medical attention to help avoid serious injury.
- If a fire occurs inside your vehicle, leave the vehicle as soon as possible. Only use a type ABC, BC, or C fire extinguisher that is meant for use on electrical fires. Using a small amount of water, or the incorrect fire extinguisher can result in serious injury or death from electrical shock.
- If you are not able to safely assess the vehicle due to vehicle damage, do not touch the vehicle. Leave the vehicle and contact emergency services. Advise first responders that this is an electric vehicle.
- In the event of an accident that requires bodywork, refer to an authorized dealership.

Regenerative Braking System (RBS)

Your vehicle has an RBS. The RBS replenishes the vehicle's high voltage battery during deceleration, and is particularly useful in stop-and-go city traffic. The electric motor, which propels the vehicle forward, can operate as a generator when braking. The RBS recharges the high voltage battery under certain braking conditions by recapturing energy that would otherwise be lost while braking. The electric power that is generated goes back into the high voltage battery for later use, for example when acceleration is desired.

The RBS uses conventional hydraulic friction brakes, regenerative braking, or a combination to slow the vehicle. If the system detects slippery conditions while braking, ONLY friction is used to slow the vehicle. The RBS can result in extended life of the hydraulic service brakes; however, all inspection, scheduled maintenance, and service intervals for the vehicle service brakes must be followed.

Regenerative Braking: Intervenes in place of the brakes when the throttle is released, allowing energy recovery when slowing down, even when the brake pedal is released. When the accelerator pedal is released, the system recovers energy during the slowing down phase of the car.

Regenerative braking is always active regardless of the selected operating mode, and activates the high-voltage battery charging when the brake pedal is pressed, thereby recovering energy during braking. It is useful when driving in the city, where there are continuous stops and starts. To make the most efficient use of the system, the braking phase should be modulated by applying gradual pressure on the brake pedal to allow maximum energy recovery.

Battery Conditioning

In extreme temperatures, high or low, the high voltage battery may need to be conditioned, and therefore may require the vehicle to be plugged in.

If the ambient temperature is 5°F (-15°C) or below at vehicle shut down, the instrument cluster will display the message "Plug In Vehicle To Keep Battery Conditioned".

If the battery temperature is below -22°F (-30°C), or 131°F (55°C) or above, the vehicle will NOT start:

- If the vehicle is plugged in at these battery temperatures, the instrument cluster will display the message "Please Leave Key In RUN — Battery Conditioning Needed".
- If the vehicle is not plugged in at these battery temperatures, the "Plug In Vehicle To Condition Battery" will be shown in the instrument cluster display.
- If the battery temperature is below -22°F (-30°C) or above 131°F (55°C), the message "Please Leave Key In RUN — Battery Conditioning Needed" will be displayed whether the vehicle is plugged in or not.

NOTE:

- When the "Please Leave Key In RUN — Battery Conditioning Needed" message is displayed, keep the vehicle in the RUN position for the battery to recover. Place the vehicle back in the OFF position when the message disappears, and then start the vehicle. When this message is displayed, do not operate any air conditioning controls.
- Under these high or low temperatures, if the vehicle is plugged in, and the vehicle is in OFF, the vehicle

may “wake up” to precondition the high voltage battery for use.

- It is recommended that the vehicle be plugged in overnight when possible to maximize the electric range of the vehicle.

The messages will only be displayed when the vehicle is ON, and the high voltage battery is not ready to provide propulsion power. The message also displays if there is a failed attempt to achieve READY state when the high voltage battery cell temperatures are either too cold or too hot.

HIGH VOLTAGE CHARGING OPERATION

SAE J1772 Charging Inlet

Your vehicle uses an industry standard SAE J1772 charge inlet (vehicle charge inlet) for AC Level 1 (120 V), AC Level 2 (240 V), and DC Fast charge (400 V) charging.



Vehicle Charge Inlet

- 1 – Charge Port
- 2 – DC Port Cover

The charge port door will lock or unlock along with the doors. Press the Unlock button on the Key Fob to unlock the charge port door. Press the Lock button on the Key Fob to lock the charge port door.

Open the charge port door by pushing near the rear outer edge of the door, near the center to unlatch. To close the charge port door, engage the door latch by pushing on the rear outer edge near the center.

NOTE:

Only utilize UL-certified (UL 2594) charging equipment to charge your vehicle. Failure to do so may result in safety hazards.

CHARGE PORT COVER

The EV Charge Port is equipped with a plastic cover to protect the DC- and DC+ terminals, located at the bottom of the Charge Port. The cover prevents dust, water, snow or other contaminants from entering the DC- and DC+ terminals and cavities while not in use. Keep the cover closed at all times, and only open it when using Level 3 Public Chargers. If the plastic cover is damaged or missing, see an authorized dealer for service and replacement.

Water presence and contamination in the EV Charge Port pins is unsafe and may prevent the EV from charging. The charge port is capable of draining excess water. Allow the charge port to fully drain and dry out before use.

Smart Charge Button

The Smart Charge button to the right of the charge port can be used to stop charging, start charging, and override a set charging schedule. The button has different uses and sequences depending on which charging mode is set.

● No scheduled charge

- Plug in the vehicle: charge starts
- Push the charging button: charge is stopped
- Push the charging button again: charge starts again

● Scheduled charge (not started yet)

- Plug in the vehicle: scheduled charge is ready (as set)
- Push the charging button: charge starts
- Push the charging button again: charge is stopped, and scheduled charge is set again

● Scheduled charge (set and started)

- Push the charging button: charge is stopped
- Push the charging button: immediate charge starts (scheduled charge is overridden)



Smart Charging Button

L1/L2 Dual Level Charge Cord - AC Level 1 Charging (120 Volt)/AC Level 2 Charging (240 Volt) — If Equipped

This vehicle may be equipped with a L1/L2 Dual Level Charge Cord.

AC Level 1 charging requires a conventional NEMA 5-15R 120 Volt AC grounded wall outlet along with the L1/L2 Dual Level Charge Cord provided with the vehicle. Level 1 charge provides up to 12 amps. To use Level 1 charging, fully insert the three-prong Level 1 Grid Cord into the wall outlet and the Charging adapter to the indicator display.

AC Level 2 charging requires a NEMA 14-50R 240 Volt AC grounded wall outlet along with the L1/L2 Dual Level Charge Cord provided with the vehicle. The Level 2 charge provides up to 32 amps. To use Level 2 charging, fully insert the four-prong Level 2 Grid Cord into the wall outlet and the Charging adapter to the indicator display.

When using public charging stations, ensure the charging station is ready to provide charge and the vehicle is in PARK before the Level 2 EVSE is plugged into the vehicle's charge inlet. You will hear a "click" when the charge connector is inserted correctly and is coupled with the vehicle's charge inlet.

WARNING!

Please be sure to follow these warnings. Failure to do so may result in serious injury or death.

- Discontinue use of the L1/L2 Dual Level Charge Cordset immediately if the plug or outlet becomes hot to the touch or if you notice any unusual odors.
- Do not use the L1/L2 Dual Level Charge Cordset in building structures that use fuse-based circuit protection. Use only with electrical circuits protected by circuit breakers.
- Do not use the L1/L2 Dual Level Charge Cordset if other devices are plugged into the same circuit.
- When unplugging the L1/L2 Dual Level Charge Cordset from the wall outlet, be sure to pull by the plug, and not the cord.
- Do not pull, twist, bend, step on or drag the cord of the L1/L2 Dual Level Charge Cordset.
- Stop using the L1/L2 Dual Level Charge Cordset immediately if charging stops before it's completed when the plug or cord is moved or adjusted.
- Do not use the L1/L2 Dual Level Charge Cordset if the plug has a loose connection with the wall outlet or if the wall outlet is damaged or rusted.

(Continued)

WARNING!

- If in any doubt about the wall outlet and/or circuit, contact a qualified electrician.
- Do not use if a malfunction occurs or if the L1/L2 Dual Level Charge Cordset has been damaged in any manner. It is recommended that you contact an authorized dealership.
- There are no user serviceable parts inside the L1/L2 Dual Level Charge Cordset. Do not attempt to repair or service the L1/L2 Dual Level Charge Cordset, doing so will void the New Vehicle Warranty.

WARNING!

Electrical shock, fire, and other serious hazards can occur if the L1/L2 Dual Level Charge Cordset is not used properly. This vehicle uses a high voltage current. Failure to follow the proper charging instructions in this publication can cause serious injury or death. There are no serviceable parts in the L1/L2 Dual Level Charge Cordset. Do not open, disassemble, penetrate, or tamper with the L1/L2 Dual Level Charge Cordset. Failure to follow this warning can result in electrical shock, fire, property damage, and death or serious injury.

NOTE:

After use, the L1/L2 Dual Level Charge Cord should be placed in the storage area or attached to the wall with the proper mounting accessories. If the L1/L2 Dual Level Charge Cord (EVSE) will be left outside the vehicle, be sure to protect the connection end

from moisture, dirt, and debris accumulation and contamination.

WARNING!

This publication contains important instructions and warnings that should be followed during charging operations. Failure to follow these warnings and instructions can result in electrical shock and fire which can cause death or serious injury.

- Do not put fingers or objects into the L1/L2 Dual Level Charge Cord connector.
- Do not use the L1/L2 Dual Level Charge Cord if the flexible power cord is frayed, broken, has cracked insulation, or any other signs of damage.
- Do not use the L1/L2 Dual Level Charge Cord if the enclosure or the connector is broken, cracked, open, or shows any other indication of damage.
- Do not use the L1/L2 Dual Level Charge Cord with an extension cord or plug adapters.
- The L1/L2 Dual Level Charge Cord may attempt to reset and run after a power interruption.
- There are no user serviceable parts inside the L1/L2 Dual Level Charge Cord. Do not attempt to repair or service the L1/L2 Dual Level Charge Cord yourself – personal injury may result.
- When using a charging station with the L1/L2 Dual Level Charge Cord attached, ensure the charging station's cable is not visibly damaged before plugging into the vehicle.
- Do not allow children to operate the L1/L2 Dual Level Charge Cord. Adult supervision is mandatory

(Continued)

WARNING!

when children are in proximity to the charge station that is in use.

- Do not use a charge station or vehicle charge inlet that is worn or damaged with the charging cable. Plugging into worn or damaged receptacles may cause damage to the L1/L2 Dual Level Charge Cord and vehicle.
- Ensure that the L1/L2 Dual Level Charge Cord is always stored in a safe place. Do not expose the EVSE vehicle connector to rain or wet conditions. Avoid allowing water or other liquids to pour or drip onto the vehicle connection end of the EVSE connector. If water penetrates the electrical device, the risk of electrical shock increases. Ensure that all plugs and cables are free of moisture before using the L1/L2 Dual Level Charge Cord.
- In a collision, a loose L1/L2 Dual Level Charge Cord in the vehicle could cause injury. It could fly around in a sudden stop and strike someone in the vehicle. Do not store the L1/L2 Dual Level Charge Cord on the cargo load floor, or in the passenger compartment.
- The L1/L2 Dual Level Charge Cord has been tested for use in temperatures ranging from -40 °F to 122 °F (-40 °C to 50 °C).
- The L1/L2 Dual Level Charge Cord should be stored at temperatures between -40 °F and 176 °F (-40 °C and 80 °C).

L1/L2 DUAL LEVEL CHARGING CORD COMPONENTS

The L1/L2 Dual Level Charging Cord is compliant with SAE J1772, and applicable for use with vehicles fitted with standard SAE J1772 charge inlets. The L1/L2 Dual Level Charging Cord includes:

- A charge connector
- A NEMA 6 rated enclosure with a Charge Current Interrupt Device (CCID) with a status indicator display
- An AC Power Cord Adapter with a NEMA 5-15P right angle plug
- An AC Power Cord Adapter with a NEMA 14-50P plug
- An indoor/outdoor charge cable, EV-rated



L1/L2 Dual Level Charging Cord

- 1 — Charge Indicators
- 2 — Level 1 Grid Cord
- 3 — Level 2 Grid Cord
- 4 — Charge Cable
- 5 — Charge Head

CHARGING CORD OPERATION

1. For Level 1 charging, insert the AC plug prongs of the L1/L2 Dual Level Charging Cord into a 15 A, or 20 A, 120 VAC, 60 Hz, grounded wall outlet (NEMA 5-15R or NEMA 5-20R). For Level 2 Charging, insert the AC plug prongs of the L1/L2 Dual Level Charging Cord into a 50 A, 240 VAC, 60 Hz, grounded wall outlet (NEMA 14-50R). AC Level 2 charging is recommended because it is significantly faster than AC Level 1 charging. Do not use an extension cord, outlet/plug adapter, or a worn outlet. The L1/L2 Dual Level Charging Cord will not operate safely unless it is plugged directly into the wall outlet.

NOTE:

The L1/L2 Dual Level Charging Cord should be plugged into a dedicated circuit, not a circuit shared with other devices drawing electricity on the circuit.

WARNING!

Do not use the L1/L2 Dual Level Charging Cord on electrical circuits with two-prong outlets; use with improper outlets could result in electric shock, fire, property damage, and death or serious injury. Check with a qualified electrician if you are in doubt as to whether the wall outlet is properly grounded. Do not modify the plug prongs provided with the L1/L2 Dual Level Charging Cord – if it does not fit the outlet, you must have a proper outlet installed by a qualified electrician.

2. Check to see if the L1/L2 Dual Level Charging Cord is ready to charge by reviewing the indicator lights. After a brief self-check, where the indicator lights will flash, a green AC Power indicator light and two green Charge Active indicator lights indicate that the Portable Charging Cord (EVSE) is ready for use.
3. If the L1/L2 Dual Level Charging Cord is ready to charge, ensure the vehicle is in PARK, and then connect the charge connector to the vehicle's charge inlet. You will hear a "click" when the charge connector is inserted correctly and coupled with the vehicle's charge inlet.



Inserting The Charge Connector Into The Vehicle Charge Inlet

4. When the vehicle commences charging, the Charge Active indicator lights on the L1/L2 Dual Level Charging Cord will cycle from left to right, and then both turn off. This pattern will repeat while the vehicle is charging. The lights are illuminated at the rate of approximately one cycle per second.

NOTE:

The vehicle should start charging automatically. If not, please check the following:

- L1/L2 Dual Level Charging Cord — The L1/L2 Dual Level Charging Cord status indicators illuminate green or red to identify the charging status.
- Wall Outlet — Check whether the wall outlet is functional (no power outage) and/or plug the L1/L2 Dual Level Charging Cord into a different wall outlet.
- Charging Schedule — Check whether or not the charging schedules have been enabled. If enabled, check that you are within the

scheduled time and day of the week. A charge schedule can be overridden using the Smart Charge button ➡ page 133.

5. To stop the charging process, the charging cordset will need to be unlocked from the vehicle. To unlock the cordset, press the Unlock button on the key fob to unlock the doors and then press the button on the charging cordset connector or the Smart Charge button next to the charging port. There will be a delay before the cordset can be removed from the vehicle. White courtesy lights will flash around the charging port once the connector has unlocked.
6. To disengage the vehicle coupler, push the button on the connector and gently pull the cordset from vehicle.



Removing The Charge Connector From The Vehicle Charge Inlet

7. Close the inlet door when a L1/L2 Dual Level Charging Cord is not connected to the vehicle.

NOTE:

It is good practice to keep the vehicle OFF while conducting Level 1 charging. This minimizes any additional vehicle loads the L1/L2 Dual Level Charging Cord has to support. The additional electrical loads will extend the high voltage battery charging time.

TROUBLESHOOTING USING THE STATUS INDICATOR DISPLAY

If the vehicle is not charging properly, consult the status indicator lights.

The **AC Power Indicator** displays the status and safety of the input power. If this indicator is green, the power is within acceptable limits to charge the vehicle. If only the AC Power Indicator is flashing red, then there is a problem with the AC power at the electrical outlet. If the AC Power Indicator does not return to green, then the outlet should be inspected by a qualified electrician to ensure the voltage, frequency, and grounding are compliant to national and local electrical codes and ordinances. It may be possible to attempt charging from a different outlet.

The **Fault Indicator** displays the status of the L1/L2 Dual Level Charging Cord and the vehicle connection. The L1/L2 Dual Level Charging Cord will not allow charging while the fault indicator is red. If it is off, the L1/L2 Dual Level Charging Cord has not detected any internal faults, or faults with the vehicle connection. If the Fault Indicator is flashing red, there is a fault detected either with the L1/L2 Dual Level Charging Cord, electronics, or with the vehicle connection. The

L1/L2 Dual Level Charging Cord may attempt to retry to provide current to the vehicle if the fault is cleared. If the L1/L2 Dual Level Charging Cord does not attempt to provide charge to the vehicle, the charge connector will need to be removed from the vehicle to clear the fault.

The fault code list in the following table provides a reference for the important faults that are detected by the L1/L2 Dual Level Charging Cord. When a fault is detected, the AC Power Indicator, the Fault Indicator, or both the AC Power and Fault Indicators will flash red. If only the AC Power Indicator is red, there is a problem on the AC Power side of the unit. If only the Fault Indicator is flashing red, there is a problem internal to the unit or with the vehicle. If both the AC Power and Fault Indicators are flashing red, an over temperature condition is detected at either the AC plug or within the L1/L2 Dual Level Charging Cord enclosure. Additional information about the faults is provided by a fault code that is displayed on the two green Charge Active Indicators. The fault code consists of four digits, each with a value of 1 or 2. The value of a digit is the number of indicators illuminated for that part of the sequence. For example, fault code (1, 2, 1, 1) will display the following sequence: One indicator will illuminate for 0.3 seconds, then two indicators will illuminate, then one indicator, and finally one indicator will illuminate. After all four fault code digits have been displayed, the indicators will remain off for one second before repeating the sequence.

L1/L2 Dual Level Charging Cord Fault Code List			
Flashing Fault Code	Flashing Indicator	Fault Indication	Recommended Actions
1, 2, 2, 2	AC Power	Vehicle Current Draw is Too High	Check L1/L2 Dual Level Charging Cord and vehicle at an authorized dealership.
1, 1, 2, 1	AC Power	Incorrect Electrical Supply	Attempt to charge the vehicle at a different outlet. Contact a qualified electrician to check the electrical outlet and AC Supply (house wiring).
1, 1, 2, 2	AC Power	Incorrect Electrical Supply	Attempt to charge the vehicle at a different outlet. Contact a qualified electrician to check the electrical outlet and AC Supply (house wiring).
1, 2, 1, 1	AC Power	Incorrect Electrical Supply	Attempt to charge the vehicle at a different outlet. Contact a qualified electrician to check the electrical outlet and AC Supply (house wiring).
1, 2, 1, 2	AC Power	Incorrect Electrical Supply	Attempt to charge the vehicle at a different outlet. Contact a qualified electrician to check the electrical outlet and AC Supply (house wiring).
1, 1, 1, 1	Fault	L1/L2 Dual Level Charging Cord Internal Fault	Unplug the L1/L2 Dual Level Charging Cord from the vehicle charge inlet and retry to charge. If the issue is not corrected, check the L1/L2 Dual Level Charging Cord and vehicle at an authorized dealership.
1, 1, 1, 2	Fault	L1/L2 Dual Level Charging Cord Internal Fault	Unplug the L1/L2 Dual Level Charging Cord from the vehicle charge inlet and retry to charge. If the issue is not corrected, check the L1/L2 Dual Level Charging Cord and vehicle at an authorized dealership.
1, 2, 2, 1	AC Power	Outlet Wiring Bad Ground	Attempt to charge the vehicle at a different outlet. Contact a qualified electrician to check the electrical outlet and AC Supply (house wiring).
1, 2, 1, 1	Fault	Portable Charging Cord (EVSE) Internal Fault	Check the L1/L2 Dual Level Charging Cord and vehicle at an authorized dealership.

L1/L2 Dual Level Charging Cord Fault Code List			
Flashing Fault Code	Flashing Indicator	Fault Indication	Recommended Actions
1, 2, 1, 2	Fault	CCID Leakage Current Detected	Disconnect charge connector and retry charging. If problem persists, check the L1/L2 Dual Level Charging Cord and vehicle at an authorized dealership.
2, 2, 2, 1	Fault	Vehicle Interface Connector	Error with the Vehicle Charge Connector Interface — Check for water or other contamination in the vehicle charge inlet or charge connector.
2, 2, 2, 2	Fault	Vehicle Interface Connector	Error with the Vehicle Charge Connector Interface — Check for water or other contamination in the vehicle charge inlet or charge connector.
1, 1, 2, 1	Fault & AC Power	Portable Charging Cord (EVSE) Enclosure Internal Temperature is Too High	Use caution as the L1/L2 Dual Level Charging Cord housing may be hot. It is recommended to move the L1/L2 Dual Level Charging Cord out of direct sun exposure. Allow the unit to cool. If error persists, check the L1/L2 Dual Level Charging Cord at an authorized dealer.
1, 1, 1, 2	Fault & AC Power	Hot AC Power Plug Warning	Use caution as the L1/L2 Dual Level Charging Cord AC Power Plug may be hot. It is recommended to carefully unplug the unit from the wall outlet and allow it to cool down. Attempt to charge the vehicle at a different wall outlet. Contact a qualified electrician to inspect/replace the wall outlet that was associated with the Hot AC Plug event. Charging will still occur, but at a reduced rate.
1, 1, 1, 1	Fault & AC Power	AC Power Plug Over Temperature	Use caution as the L1/L2 Dual Level Charging Cord AC Power Plug may be hot. It is recommended to carefully unplug the unit from the wall outlet and allow it to cool down. Attempt to charge the vehicle at a different outlet. Contact a qualified electrician to inspect/replace the outlet that was associated with the Hot AC Plug event.

Guidelines for preventing fire and electric shock:

- Ensure the L1/L2 Dual Level Charging Cord is positioned so it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- There are no user serviceable parts inside.
- Do not use the L1/L2 Dual Level Charging Cord if it is visibly damaged. Contact an authorized dealership for service.
- Do not place fingers, or any other objects inside the charge connector.
- Do not allow children to operate the L1/L2 Dual Level Charging Cord. Adult supervision is mandatory

when children are in proximity when the L1/L2 Dual Level Charging Cord is in use.

- Do not use the L1/L2 Dual Level Charging Cord with an extension cord or plug adapters.
- Do not unplug the L1/L2 Dual Level Charging Cord from the wall outlet during a charging operation.

NOTE:

During normal operation, the charge connector or AC plug may feel warm. If either one feels hot during charging, unplug the L1/L2 Dual Level Charging Cord and have a qualified electrician inspect the wall outlet before you continue charging.

WARNING!

Do not use the L1/L2 Dual Level Charging Cord with an outlet that is worn or damaged. Failure to follow this warning can result in electrical shock, fire, property damage, and death or serious injury.

DC (Level 3) Charging

DC (Level 3) Charging is a significantly faster method of charging your vehicle either on the go or overnight. When using public charging stations, ensure the charging station is ready to provide charge before use. To begin charging:

1. Ensure the vehicle is in PARK, and then connect the charge connector to the vehicle's charge inlet. After a short delay, the charge connector will lock into the vehicle's charge port, and the vehicle will begin to charge.
2. To stop the charging process, press the Smart Charge button to the right of the vehicle charging

port. The charge indicator lights to the right of the charge port will begin to flash yellow, indicating that charge connector is unlocking from the vehicle. When the lights go out, the charge connector is unlocked. Remove the charge connector from the vehicle.

NOTE:

- DC Charging can vary from high to low power depending on potential external factors such as weather and power supply.
- Due to the convenience of DC Charging there may be a higher payment required depending on the charge station selected.
- The vehicle should start charging automatically. If not, please check the following:
 - Charging Station — Check the indications and instructions at the charging station.
 - Charging Schedule — Check whether the charging schedule is enabled and if so, whether the vehicle is currently within the scheduled charge time/day (weekday/weekend). If the charging schedule is enabled within the vehicle, you may override it by pressing the Smart Charge button.

CAUTION!

- Level 1 and Level 2 AC charging should be used as the primary method for charging the vehicle.
- DC charging should be reserved for times when a faster charge period is desired (such as a long trip).
- High voltage battery life may decline if DC fast charging is used constantly.

Vehicle Charge Indicators

Instrument Cluster High Voltage Battery Display

There is a battery display indicator located on the instrument cluster. The battery display will indicate the current State Of Charge (SOC) for the high voltage battery and a percentage value. When plugged in, the battery symbol also indicates the battery level along with messages about the charge or whether the system is waiting to charge due to the charge schedule. These will appear unless there is a charging fault. A green plug telltale will be shown in the cluster, as well as applicable messaging when charging.



High Voltage Battery Display



Charge Port SOC Indicator

The SOC indicator provides a visual indication of the high voltage battery's charge status during charging. It is also used to indicate a charging problem as well as waiting for a scheduled charge to begin.

NOTE:

The lights flash one at a time when the vehicle is plugged in outside of its charging schedule time/day of the week, and it is waiting on the schedule to begin charging.

In extreme hot or cold environments, the lights on the SOC indicator may not illuminate. Charge status is available in the instrument cluster display. In the event of an error in the charging process, the outer two lights will blink.

Number Of Indicator Lights Illuminated	Percent Of Battery Charge
1st light blinks green	0 – 20%

Number Of Indicator Lights Illuminated	Percent Of Battery Charge
1st light on, 2nd light blinks green	21 – 40%
1st and 2nd lights on, 3rd light blinks green	41 – 60%
1st, 2nd, and 3rd lights on, 4th light blinks green	61 – 80%
1st, 2nd, 3rd, and 4th lights on, 5th light blinks green	81 – 99%
All 5 green lights on	100%
Two outer lights are blinking red	Indicates an error in the charging process
Blue Lights turn on one at a time from bottom to top	Indicates system is waiting for scheduled time in charge schedule to begin charging
All lights turn on, then immediately turn off	Indicates a successful plug-in
Lights turn yellow	Indicates Charge Port Lock is waiting to Unlock

NOTE:

For each segment of lights illuminated indicating the percent of battery charge, two different blink rates are used. A blink rate of 1 second on/1 second off indicates that the first half is charging. The blink rate will increase to 0.5 second on/0.5 second off to indicate that the second half is charging. When the battery is fully charged, the blinking stops and the lights remain illuminated as charging continues.

Emergency Release Cables

In the event of an emergency, the charging cordset can be unlocked manually from the charging port. Located in the rear loadspace behind the quarter panel is an emergency release cable.

1. Gently remove the quarter panel on the left side of the rear loadspace.
2. Locate the yellow emergency release cable.
3. Gently pull the cable a short distance. The Charge Port will unlock, and the charging cordset can be removed.

NOTE:

Pulling the emergency release cable may not provide feedback when the Charging cordset is unlocked from the charge port. After pulling the emergency release cable, use both hands to hold and test the charging cordset by pressing the button on the cordset head and removing it straight out from the charge port. If the cordset is still locked, pull the emergency release cable again.

CAUTION!

Do not use excessive force when pulling the emergency release cable as it could cause damage to the emergency release cable or the vehicle Charge Port.

Electric Vehicle App

Within the Uconnect system is the Electric Vehicle App that allows you to see your vehicle's power flow, understand your driving history, and set a charging schedule for your vehicle's high voltage battery. To access this App, press the Apps or Vehicle button on the main menu bar of the radio's touchscreen, and locate the Electric Vehicle App. Accessing the app brings you to a set of four pages: Power Flow, Driving History, Schedules, and AC Charging Level.

DRIVING PAGES

The Drive pages screen shows the current brake regeneration level and lets you turn the feature on or off. The bars at the bottom show the current regeneration levels. When the bar is completely full, the maximum amount of energy is being produced to recharge the battery. When only one bar is showing full, less energy is being produced to recharge the battery.

When On, The Creep option allows the vehicle to slow to a rolling speed and continue forward momentum. When the feature is turned Off, the vehicle will come to a complete stop. Creep can be activated or deactivated from this page.

**Driving Page Screen****POWER FLOW**

The Power Flow screen shows the current power readings for all of the following:

- Battery - Shows the amount of power (in kW) the battery of the vehicle has remaining.
- Climate - Shows the amount of power (in kW) the Climate Control system is using to maintain the current interior temperature.

Power Flow paths are indicated by the direction of the arrows on the touchscreen.

**Power Flow Screen****DRIVING HISTORY**

The Driving History screen shows the miles (km) driven in kWh (battery powered) at the current time compared to a weekly average.

**Driving History Screen**

CHARGING SCHEDULE

To set a charging schedule, select the Electric Vehicle App in the touchscreen and follow these steps:

1. Select “Schedules”.



Schedules Tab

2. Select “Charge Schedule”.
3. Select the schedule 1 or 2 to be set by pressing the appropriate arrow on the right side of the screen.
4. Select what time Scheduled Charging should start and stop charging or select “Charge Until Full”. If “Charge Until Full” is selected a stop charging time cannot be selected.
5. Set the Charge Start Time: Hours, Minutes, and AM/PM.

NOTE:

This is to occur every week (as long as the vehicle is connected to an EVSE).



Set Charge Schedule

6. When done, press the X in the upper right hand corner, then select “yes” to save the charge schedule. The active schedule will be indicated by the check mark to the right of the schedule event line. The event action and time will be displayed.
7. To add another Scheduled Charging event, repeat these steps.

NOTE:

A maximum of two independent Scheduled Charging events can be scheduled at a given time.

NOTE:

- If the charging schedule is not enabled, the vehicle will charge whenever plugged in. It is not necessary to set up the charging schedule to charge the vehicle.
- If the vehicle is plugged in outside of the charging schedule set in the Uconnect system (and Charge Until Full is not selected), the vehicle's battery will not charge. Charging will only begin immediately if the vehicle is plugged in within the time and day of the week set in the schedule. Otherwise, charging

will automatically begin when the selected charge time/day of the week occurs or whenever the vehicle is plugged in with no charge schedule set.

- If “Charge Until Full” is selected, and the vehicle is plugged in after the start time of the schedule, the vehicle will start charging when it reaches the start time the next day. If you would like to begin charging immediately, and continue charging until the vehicle is fully charged, press the Smart Charge button on the charge port.

SCHEDULED CABIN CONDITIONING (SCC)

This feature allows the driver to pre-condition (warm up or cool down) the passenger cabin based on a planned departure time. The target temperature is preset to the same values used by the Remote Start feature. Unlike Remote Start, the driver does not need to initiate the cabin conditioning by pushing the Remote Start button, instead, a programmed departure time will be used. Also, all scheduled cabin conditioning will be powered by the vehicle's high voltage battery working in conjunction with any EVSE connected to the vehicle.

In order to conserve the vehicle's high voltage battery power, the driver can choose between allowing the battery to be drained of power down to <1%, or to stop the SCC when the high voltage battery has been depleted to 25% State Of Charge (SOC). The battery percentages are displayed in the instrument cluster display.

A maximum of two independent schedule event timers are available for use by the SCC feature and Scheduled Charging feature for charging the high voltage battery. The timers may be used in any combination for SCC

and Scheduled Charging, but only two total timers are available.

The SCC event times are used to wake up the vehicle so that the Climate Control system can condition the passenger cabin prior to the scheduled departure time. Based on vehicle operating conditions, ambient temperature, and the next programmed departure time, the vehicle will determine when to begin cabin conditioning. Cabin conditioning can begin up to 30 minutes prior to the scheduled departure time, provided the stated high voltage battery conditions are met.

The SCC will continue for a maximum of 15 minutes after the scheduled departure time.

Once a scheduled event has been created, it can be applied to one or more days of the week. The scheduled event can also be set to occur only during the current week, or repeat every week until the feature is turned off or the event is changed.

All of the following conditions must be met before the vehicle will initiate a scheduled SCC event:

- Gear selector in PARK
- Doors Closed
- Hood Closed
- Rear Compartment Closed
- Hazard switch off
- 12 Volt battery at an acceptable charge level
- Key fob not located inside the vehicle
- Vehicle start button in the OFF position

- Remote Start has not been activated

Scheduling An SCC Event:

1. Select the Electric Vehicle App on the touchscreen.
2. Select "Schedules".



Schedules Screen

3. Choose "Climate Schedules".
4. Select one of two Climate Schedules by pressing the appropriate arrow on the right side of the touchscreen.
5. Select if SCC should stop when the high voltage battery drops to 25% or lower.
6. Set the Manual Climate Schedule Departure Time: Hours, Minutes, and AM/PM or set the Auto Climate Schedule Departure Time: Hours, Minutes, AM/PM, and Temperature.



Set Manual Climate Schedule

7. Select the days that this SCC event will occur. The "Repeat" indicator illuminates to indicate that SCC will occur every week on the selected day(s), at the selected time.

If you uncheck the "Repeat" option, all the days of the week will be grayed out and the vehicle will perform only one SCC event, which will occur at the next available time that matches the SCC event time (regardless of what day it was originally set to occur before "Repeat" was unchecked).

8. To schedule another SCC event, press the X and repeat these steps.

AC CHARGING LEVELS

From the AC Charging Levels screen, you can select the rate at which your vehicle charges. Rate selections 1 (low rate of charge) through 5 (high rate of charge) are available. The lower the selected rate, the longer it will take for your vehicle to reach a full charge.

The Charge Levels can be adjusted by selecting one of the levels 1 through 5, with 1 being the slowest rate of

charge and 5 being the fastest. The display also shows information related to:

- Battery Level — Indicates, in percentage, the high-voltage battery SOC.
- Estimate time to 100% — Corresponds to the time required to obtain full recharging of the high-voltage battery.



AC Charging Levels

NOTE:

- The Charge Levels will be saved each time the vehicle is turned off, then back on again.
- For information on jump starting your vehicle → page 209.

Charge Setting Amperage

The charge setting page shows five current levels that can be selected (one level at a time). Each level is

allowing a specific amperage value according to the following tables*:

If AC voltage is 120V (max amperage of Stellantis charging cable is 12A):

Level 1 Charging Amperage					
Levels	1	2	3	4	5*
Current Amperage	8 A	12 A	12 A	12 A	12 A*

If AC voltage is 240V (max amperage of Stellantis charging cable is 32A):

Level 2 Charging Amperage					
Levels	1	2	3	4	5
Current Amperage	8 A	12 A	16 A	24 A	32 A*

NOTE:

If charging cable is equipped with 'ampere setting' (possibility to choose a specific ampere value), please always set the charge setting in vehicle on level 5 to avoid a not expected charging current level. In this case, charging time will be correctly shown on vehicle screen after cable connection.

MAXIMUM BATTERY LEVEL

The Maximum Battery Level screen will allow you to adjust to total battery charge when charging the vehicle. The available options are 80% Daily Range and 100% Full Range.

NOTE:

It is recommended to set the vehicle to 80% charge. Doing so will protect the durability and life of the battery, improving drive range long term.



Maximum Battery Level

VEHICLE LOADING

CERTIFICATION LABEL

As required by National Highway Traffic Safety Administration regulations, your vehicle has a

* Maximum amperage could be higher if using alternative charging equipment other than provided charging cable. In this case, charging time will be correctly shown on vehicle screen after cable connection.

certification label affixed to the driver's side door or pillar.

This label contains the month and year of manufacture, Gross Vehicle Weight Rating (GVWR), Gross Axle Weight Rating (GAWR) front and rear, and Vehicle Identification Number (VIN). A Month-Day-Hour (MDH) number is included on this label and indicates the Month, Day and Hour of manufacture. The bar code that appears on the bottom of the label is your VIN.

Gross Vehicle Weight Rating (GVWR)

The GVWR is the total permissible weight of your vehicle including driver, passengers, vehicle, options and cargo. The label also specifies maximum capacities of front and rear axle systems (GAWR). Total load must be limited so GVWR and front and rear GAWR are not exceeded.

Payload

The payload of a vehicle is defined as the allowable load weight a truck can carry, including the weight of the driver, all passengers, options and cargo.

Gross Axle Weight Rating (GAWR)

The GAWR is the maximum permissible load on the front and rear axles. The load must be distributed in the cargo area so that the GAWR of each axle is not exceeded.

Each axle GAWR is determined by the components in the system with the lowest load carrying capacity (axle, springs, tires or wheels). Heavier axles or suspension components sometimes specified by purchasers for increased durability do not necessarily increase the vehicle's GVWR.

Tire Size

The tire size on the Vehicle Certification Label represents the actual tire size on your vehicle. Replacement tires must be equal to the load capacity of this tire size.

Rim Size

This is the rim size that is appropriate for the tire size listed.

Inflation Pressure

This is the cold tire inflation pressure for your vehicle for all loading conditions up to full GAWR.

Curb Weight

The curb weight of a vehicle is defined as the total weight of the vehicle with all fluids, at full capacity conditions, and with no occupants or cargo loaded into the vehicle. The front and rear curb weight values are determined by weighing your vehicle on a commercial scale before any occupants or cargo are added.

Loading

The actual total weight and the weight of the front and rear of your vehicle at the ground can best be determined by weighing it when it is loaded and ready for operation.

The entire vehicle should first be weighed on a commercial scale to ensure that the GVWR has not been exceeded. The weight on the front and rear of the vehicle should then be determined separately to be sure that the load is properly distributed over the front and rear axle. Weighing the vehicle may show

that the GAWR of either the front or rear axles has been exceeded but the total load is within the specified GVWR. If so, weight must be shifted from front to rear or rear to front as appropriate until the specified weight limitations are met. Store the heavier items down low and be sure that the weight is distributed equally. Stow all loose items securely before driving.

Improper weight distributions can have an adverse affect on the way your vehicle steers and handles and the way the brakes operate.

WARNING!

Do not load your vehicle any heavier than the GVWR or the maximum front and rear GAWR. If you do, parts on your vehicle can break, or it can change the way your vehicle handles. This could cause you to lose control. Overloading can shorten the life of your vehicle.

TRAILER TOWING

DESCRIPTION

In this section you will find safety tips and information on limits to the type of towing you can reasonably do with your vehicle. Before towing a trailer, carefully review this information to tow your load as efficiently and safely as possible.

To maintain the New Vehicle Limited Warranty coverage, follow the requirements and recommendations in this manual concerning vehicles used for trailer towing.

Common Towing Definitions

The following trailer towing related definitions will assist you in understanding the following information:

GROSS VEHICLE WEIGHT RATING (GVWR)

The GVWR is the total allowable weight of your vehicle. This includes driver, passengers, cargo and tongue weight. The total load must be limited so that you do not exceed the GVWR ➞ page 145.

GROSS TRAILER WEIGHT (GTW)

The GTW is the weight of the trailer plus the weight of all cargo, consumables and equipment (permanent or temporary) loaded in or on the trailer in its "loaded and ready for operation" condition.

The recommended way to measure GTW is to put your fully loaded trailer on a vehicle scale. The entire weight of the trailer must be supported by the scale.

GROSS COMBINATION WEIGHT RATING (GCWR)

The GCWR is the total permissible weight of your vehicle and trailer when weighed in combination.

GROSS AXLE WEIGHT RATING (GAWR)

The GAWR is the maximum capacity of the front and rear axles. Distribute the load over the front and rear axles evenly. Make sure that you do not exceed either front or rear GAWR ➞ page 145.

WARNING!

It is important that you do not exceed the maximum front or rear GAWR. A dangerous driving condition can result if either rating is exceeded.

TONGUE WEIGHT (TW)

The TW is the downward force exerted on the hitch ball by the trailer. You must consider this as part of the load on your vehicle.

FRONTAL AREA

The frontal area is the maximum height multiplied by the maximum width of the front of a trailer.

TRAILER SWAY CONTROL (TSC) — IF EQUIPPED

Trailer Sway Control is an electronic feature, a subset of the electronic brake control module, that detects trailer sway and applies the brakes selectively to counteract the sway. It may also reduce torque to help lower vehicle speed as further aid in reducing trailer sway.

WEIGHT-CARRYING HITCH

A weight-carrying hitch supports the trailer tongue weight, just as if it were luggage located at a hitch ball or some other connecting point of the vehicle. These kinds of hitches are commonly used to tow small and medium sized trailers.

WEIGHT-DISTRIBUTING HITCH

A Weight-Distributing Hitch works by applying leverage through spring (load) bars. They are typically used for heavier loads to distribute trailer tongue weight to the tow vehicle's front axle and the trailer axle(s). When used in accordance with the manufacturer's directions, it provides for a more level ride, offering more consistent steering and brake control thereby enhancing towing safety. The addition of a friction/hydraulic sway control also dampens sway caused by traffic and crosswinds and contributes positively to tow vehicle and trailer stability. Trailer sway control and a Weight-Distributing (load equalizing) Hitch are recommended for heavier Tongue Weights (TW) and may be required depending on vehicle and trailer configuration/loading to comply with Gross Axle Weight Rating (GAWR) requirements.

WARNING!

- An improperly adjusted Weight Distributing Hitch system may reduce handling, stability, braking performance, and could result in a collision.
- Weight-Distributing Hitch Systems may not be compatible with surge brake couplers. Consult with your hitch and trailer manufacturer or a reputable Recreational Vehicle dealer for additional information.

Trailer Hitch Classification

The following chart provides the industry standard for the maximum trailer weight a given trailer hitch class can tow and should be used to assist you in selecting the correct trailer hitch for your intended towing condition.

Trailer Hitch Classification Definitions	
Class	Max. Trailer Hitch Industry Standards
Class I - Light Duty	2,000 lb (907 kg)
Class II - Medium Duty	3,500 lb (1,587 kg)
Class III - Heavy Duty	6,000 lb (2,721 kg)
Class IV - Extra Heavy Duty	10,000 lb (4,535 kg)
Refer to the "Trailer Towing Weights (Maximum Trailer Weight Ratings)" chart for the Maximum Gross Trailer Weight (GTW) towable for your given drivetrain.	
All trailer hitches should be professionally installed on your vehicle.	


Trailer Towing Weights (Maximum Trailer Weight Ratings)

Model	Electric Motor	Battery	Wheelbase (in)	Axle Ratio	GCWR	Frontal Area	Maximum GTW	Maximum TW
WILLYS AWD	2-150 kW	99.6 kWh	112.99	N/A	9,725 lbs. (4,411 kg)	2.79 m ² (30 ft ²)	3,400 lbs. (1,542 kg)	340 lbs. (154 kg)
OVERLAND AWD	2-150 kW	99.6 kWh	112.99	N/A	9,700 lbs. (4,399 kg)	2.79 m ² (30 ft ²)	3,400 lbs. (1,542 kg)	340 lbs. (154 kg)

Model	Electric Motor	Battery	Wheelbase (in)	Axle Ratio	GCWR	Frontal Area	Maximum GTW	Maximum TW
MOAB AWD	2-250 kW	100.5 kWh	112.99	N/A	9,700 lbs. (4,399 kg)	2.79 m ² (30 ft ²)	3,300 lbs. (1,497 kg)	330 lbs. (150 kg)

Trailer And Tongue Weight

Never exceed the maximum tongue weight stamped on your bumper or trailer hitch.

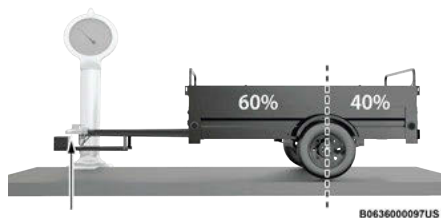

Weight Distribution

Consider the following items when computing the weight on the rear axle of the vehicle:

- The tongue weight of the trailer.
- The weight of any other type of cargo or equipment put in or on your vehicle.
- The weight of the driver and all passengers.

NOTE:

Remember that everything put into or on the trailer adds to the load on your vehicle. Also, additional factory-installed options or dealer-installed options must be considered as part of the total load on your vehicle. Refer to the Tire And Loading Information Placard for the maximum combined weight of occupants and cargo for your vehicle.

Towing Requirements

To promote proper break-in of your new vehicle drivetrain components, the following guidelines are recommended:

WARNING!

Improper towing can lead to a collision. Follow these guidelines to make your trailer towing as safe as possible:

- Make certain that the load is secured in the trailer and will not shift during travel. When trailering cargo that is not fully secured, dynamic load shifts can occur that may be difficult for the driver to control. You could lose control of your vehicle and have a collision.

(Continued)

WARNING!

- When hauling cargo or towing a trailer, do not overload your vehicle or trailer. Overloading can cause a loss of control, poor performance or damage to brakes, axle, transmission, steering, suspension, chassis structure or tires.
- Safety chains must always be used between your vehicle and trailer. Always connect the chains to the hook retainers of the vehicle hitch. Cross the chains under the trailer tongue and allow enough slack for turning corners.
- Vehicles with trailers should not be parked on a grade. When parking, apply the parking brake on the tow vehicle. Put the tow vehicle transmission in PARK (P). For four-wheel drive vehicles, make sure the transfer case is not in NEUTRAL (N). Always, block or "chock" the trailer wheels.
- GCWR must not be exceeded.
- Total weight must be distributed between the tow vehicle and the trailer such that the following four ratings are not exceeded:
 - GVWR
 - GTW

(Continued)

WARNING!

- GAWR
- Tongue weight rating for the trailer hitch utilized

NOTE:

- Do not tow a trailer at all during the first 500 miles (805 km) the new vehicle is driven. The electric motor, axle or other parts could be damaged.
- Then, during the first 500 miles (805 km) that a trailer is towed, do not drive over 50 mph (80 km/h) and do not make starts at full throttle. This helps the electric motor and other parts of the vehicle wear in at the heavier loads.

TOWING REQUIREMENTS — TIRES

- Proper tire inflation pressures are essential to the safe and satisfactory operation of your vehicle.
- Check the trailer tires for proper tire inflation pressures before trailer usage.
- Check for signs of tire wear or visible tire damage before towing a trailer.
- Replacing tires with a higher load carrying capacity will not increase the vehicle's GVWR and GAWR limits.
- For further information ➡ page 238.

TOWING REQUIREMENTS — TRAILER BRAKES

- Do **not** interconnect the hydraulic brake system or vacuum system of your vehicle with that of the trailer. This could cause inadequate braking and possible personal injury.

- An electronically actuated trailer brake controller is required when towing a trailer with electronically actuated brakes. When towing a trailer equipped with a hydraulic surge actuated brake system, an electronic brake controller is not required.
- Trailer brakes are recommended for trailers over 1,000 lb (453 kg) and required for trailers in excess of 2,000 lb (907 kg).

WARNING!

- Do not connect trailer brakes to your vehicle's hydraulic brake lines. It can overload your brake system and cause it to fail. You might not have brakes when you need them and could have an accident.
- Towing any trailer will increase your stopping distance. When towing, you should allow for additional space between your vehicle and the vehicle in front of you. Failure to do so could result in an accident.

CAUTION!

If the trailer weighs more than 1,000 lb (453 kg) loaded, it should have its own brakes and they should be of adequate capacity. Failure to do this could lead to accelerated brake lining wear, higher brake pedal effort, and longer stopping distances.

TOWING REQUIREMENTS — TRAILER LIGHTS AND WIRING

Whenever you pull a trailer, regardless of the trailer size, stop lights and turn signals on the trailer are required for motoring safety.

The Trailer Tow Package may include a four- and seven-pin wiring harness. Use a factory approved trailer harness and connector.


NOTE:

Do not cut or splice wiring into the vehicle's wiring harness.

The electrical connections are all complete to the vehicle but you must mate the harness to a trailer connector. Refer to the following illustrations.

NOTE:

- Disconnect the trailer wiring connector from the vehicle (or any other device plugged into the vehicle's electrical connectors) before launching a boat into water.
- Be sure to reconnect once clear from water area.

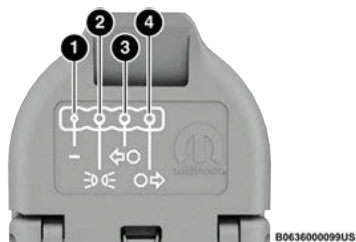

Four-Pin Connector

- 1 — Ground
- 2 — Park
- 3 — Left Stop/Turn
- 4 — Right Stop/Turn



Seven-Pin Connector

- 1 — Backup Lamps
- 2 — Running Lamps
- 3 — Left Stop/Turn
- 4 — Ground
- 5 — Battery
- 6 — Right Stop/Turn
- 7 — Electric Brakes

Towing Tips

Before setting out on a trip, practice turning, stopping and backing the trailer in an area away from heavy traffic.

If using a manual transmission vehicle for trailer towing, all starts must be in **FIRST** gear to avoid excessive clutch slippage.

CRUISE CONTROL — IF EQUIPPED

- Do not use in hilly terrain or with heavy loads.
- When using the Cruise Control, if you experience speed drops greater than 10 mph (16 km/h), disengage until you can get back to cruising speed.
- Use Cruise Control in flat terrain and with light loads to maximize vehicle range efficiency.

RECREATIONAL TOWING

TOWING THIS VEHICLE BEHIND ANOTHER VEHICLE

Towing Condition	Wheels OFF the Ground	AWD Models
Flat Tow	NONE	NOT ALLOWED
Dolly Tow	Front	NOT ALLOWED
	Rear	NOT ALLOWED
On Trailer or Flatbed	ALL	ONLY METHOD

NOTE:

When towing your vehicle, always follow applicable state and provincial laws. Contact state and provincial Highway Safety offices for additional details.

DRIVING TIPS

ON-ROAD DRIVING TIPS

Utility vehicles have higher ground clearance and a narrower track to make them capable of performing in a wide variety of off-road applications. Specific design characteristics give them a higher center of gravity than conventional passenger cars.

An advantage of the higher ground clearance is a better view of the road, allowing you to anticipate problems. They are not designed for cornering at the same speeds as conventional passenger cars any more than low-slung sports cars are designed to perform satisfactorily in off-road conditions. Avoid sharp turns or abrupt maneuvers. As with other vehicles of this type, failure to operate this vehicle correctly may result in loss of control or vehicle rollover.

OFF-ROAD DRIVING TIPS

The Basics Of Off-Road Driving

You will encounter many types of terrain driving off-road. You should be familiar with the terrain and area before proceeding. There are many types of surface conditions: hard-packed dirt, gravel, rocks, grass, sand, mud, snow and ice. Every surface has a different effect on your vehicle's steering, handling and traction. Controlling your vehicle is one of the keys to successful off-road driving, so always keep a firm grip on the steering wheel and maintain a good driving posture. Avoid sudden accelerations, turns or braking. In most cases, there are no road signs, posted speed limits or signal lights. Therefore, you will need to use your own good judgment on what is safe and what is not. When on a trail, you should always be looking ahead for surface obstacles and changes in terrain. The key is to plan your future driving route while remembering what you are currently driving over.

NOTE:

It is recommended that the Forward Collision Warning (FCW) system (if equipped) be disabled during off-road use.

WARNING!

Always wear your seat belt and firmly tie down cargo. Unsecured cargo can become projectiles in an off-road situation.

Simultaneous Brake And Throttle Operation

Many off-road driving conditions require the simultaneous use of the brake and throttle (two-footed driving). When climbing rocks, logs, or other stepped objects, using light brake pressure with light throttle will keep the vehicle from jerking or lurching. This technique is also used when you need to stop and restart a vehicle on a steep incline.

Driving In Snow, Mud And Sand

SNOW

Over-revving the electric motor can spin the wheels causing traction will be lost. If you start to slow to a stop, try turning your steering wheel no more than a 1/4 turn quickly back and forth, while still applying throttle. This will allow the tires to get fresh traction and help maintain your momentum.

CAUTION!

On icy or slippery roads, do not downshift at high RPM or vehicle speeds, because vehicle braking may cause skidding and loss of control.

MUD

Deep mud creates a great deal of suction around the tires and is very difficult to get through. If you start to slow to a stop, try turning your steering wheel no more than a 1/4 turn quickly back and forth to help clear the area around the tires for additional traction. See Traction Control System (TCS) ➞ page 215.

Mud holes pose an increased threat of vehicle damage and getting stuck. They could be full of debris from previous vehicles getting stuck. As a good practice before entering any mud hole, get out and determine how deep it is, if there are any hidden obstacles and if the vehicle can be safely recovered if stuck.

SAND

Soft sand is very difficult to travel through with full tire pressure. When crossing soft, sandy spots in a trail, maintain your vehicle's momentum and do not stop. The key to driving in soft sand is using the appropriate tire pressure, accelerating slowly, avoiding abrupt maneuvers and maintaining the vehicle's momentum. If you are going to be driving on large soft sandy areas or dunes, reduce your tire pressure to a minimum of 20 psi (138 kPa) to allow for a greater tire surface area. Reduced tire pressure will drastically improve your traction and handling while driving on the soft sand, but you must return the tires to normal air pressure before driving on pavement or other hard surfaces. Be sure you have a way to reinflate the tires prior to reducing the pressure.

CAUTION!

Reduced tire pressures may cause tire unseating and total loss of air pressure. To reduce the risk of tire unseating, while at a reduced tire pressure, reduce your speed and avoid sharp turns or abrupt maneuvers.

Crossing Obstacles (Rocks And Other High Points)

While driving off-road, you will encounter many types of terrain. These varying types of terrain bring different types of obstacles. Before proceeding, review the path ahead to determine the correct approach and your ability to safely recover the vehicle if something goes wrong. Keeping a firm grip on the steering wheel, bring the vehicle to a complete stop and then inch the vehicle forward until it makes contact with the object. Apply the throttle lightly while holding a light brake pressure and ease the vehicle up and over the object.

WARNING!

Crossing obstacles can cause abrupt steering system loading which could cause you to lose control of your vehicle.

USING A SPOTTER

There are many times where it is hard to see the obstacle or determine the correct path. Determining the correct path can be extremely difficult when you are confronting many obstacles. In these cases have someone guide you over, through, or around the obstacle. Have the person stand a safe distance in front

of you where they can see the obstacle, watch your tires and undercarriage, and guide you through.

CROSSING LARGE ROCKS

When approaching large rocks, choose a path which ensures you drive over the largest of them with your tires. This will lift your undercarriage over the obstacle. The tread of the tire is tougher and thicker than the side wall and is designed to take the abuse. Always look ahead and make every effort to cross the large rocks with your tires.

CAUTION!

- Never attempt to straddle a rock that is large enough to strike your axles or undercarriage.
- Never attempt to drive over a rock which is large enough to contact the door sills.

CROSSING A RAVINE, GULLY, DITCH, WASHOUT OR RUT

When crossing a ravine, gully, ditch, washout or a large rut, the angled approach is the key to maintaining your vehicle's mobility. Approach these obstacles at a 45-degree angle and let each tire go through the obstacle independently. You need to use caution when crossing large obstacles with steep sides. Do not attempt to cross any large obstacle with steep sides at an angle great enough to put the vehicle at risk of a rollover. If you get caught in a rut, dig a small trench to the right or left at a 45-degree angle ahead of the front tires. Use the removed dirt to fill the rut ahead of the turnout you just created. You should now be able to drive out following the trench you just created at a 45-degree angle.

WARNING!

There is an increased risk of rollover when crossing an obstacle, at any angle, with steep sides.

CROSSING LOGS

When driving over a log, approach it at a slight angle (approximately 10 to 15 degrees). This allows one front tire to be on top of the log while the other just starts to climb the log. While climbing the log, modulate your brake and accelerator to avoid spinning the log out from under your tires. Then ease the vehicle off the log using your brakes.

CAUTION!

Do not attempt to cross a log with a greater diameter than the running ground clearance or the vehicle will become high-centered.

GETTING HIGH-CENTERED

If you get hung up or high-centered on an object, get out of the vehicle and try to determine what the vehicle is hung up on, where it is contacting the underbody and what is the best direction to recover the vehicle. Depending on what you are in contact with, jack the vehicle up and place a few rocks under the tires so the weight is off of the high point when you let the vehicle down. You can also try rocking the vehicle or winching the vehicle off the object.

CAUTION!

Winching or rocking the vehicle off hard objects increases the risk of underbody damage.

Hill Climbing

Hill climbing requires good judgment and a good understanding of your abilities and your vehicle's limitations. Hills can cause serious problems. Some are just too steep to climb and should not be attempted. You should always feel confident with the vehicle and your abilities. You should always climb hills straight up and down. Never attempt to climb a hill on an angle.

BEFORE CLIMBING A STEEP HILL

As you approach a hill, consider its grade or steepness. Determine if it is too steep. Look to see what the traction is on the hill side trail. Is the trail straight up and down? What is on top and the other side? Are there ruts, rocks, branches or other obstacles on the path? Can you safely recover the vehicle if something goes wrong? If everything looks good and you feel confident, shift the transmission into a lower gear with 4L engaged, and proceed with caution, maintaining your momentum as you climb the hill.

DRIVING UP HILL

Once you have determined your ability to proceed and have shifted into gear, line your vehicle up for the straightest possible run. Accelerate with an easy constant throttle and apply more power as you start up the hill. Do not race forward into a steep grade; the abrupt change of grade could cause you to lose control. If the front end begins to bounce, ease off the throttle slightly to bring all four tires back on the ground. As you approach the crest of the hill, ease off the throttle and slowly proceed over the top. If the wheels start to slip as you approach the crest of a hill, ease off the accelerator and maintain headway by turning the steering wheel no more than a 1/4 turn quickly

back and forth. This will provide fresh traction into the surface and will usually provide enough traction to complete the climb. If you do not make it to the top, place the vehicle in REVERSE and back straight down the grade using electric motor resistance along with the vehicle brakes.

WARNING!

Never attempt to climb a hill at an angle or turn around on a steep grade. Driving across an incline increases the risk of a rollover, which may result in severe injury.

DRIVING DOWNHILL

Before driving down a steep hill, you need to determine if it is too steep for a safe descent. What is the surface traction? Is the grade too steep to maintain a slow, controlled descent? Are there obstacles? Is it a straight descent? Is there plenty of distance at the base of the hill to regain control if the vehicle descends too fast? If you feel confident in your ability to proceed, then make sure you are in 4L and proceed with caution. Allow electric motor braking to control the descent and apply your brakes, if necessary, but do not allow the tires to lock.

WARNING!

Do not descend a steep grade in NEUTRAL. Use vehicle brakes in conjunction with electric motor braking. Descending a grade too fast could cause you to lose control and be seriously injured or killed.

DRIVING ACROSS AN INCLINE

If at all possible, avoid driving across an incline. If it is necessary, know your vehicle's abilities. Driving across an incline places more weight on the downhill wheels, which increases the possibilities of a downhill slide or rollover. Make sure the surface has good traction with firm and stable soils. If possible, transverse the incline at an angle heading slightly up or down.

WARNING!

Driving across an incline increases the risk of a rollover, which may result in severe injury.

IF YOU STALL OR BEGIN TO LOSE HEADWAY

If you begin to lose headway while climbing a steep hill, allow your vehicle to come to a stop and immediately apply the brake and shift into REVERSE. Back slowly down the hill allowing electric motor braking to control the descent and apply your brakes, if necessary, but do not allow the tires to lock.

WARNING!

If you lose headway or cannot make it to the top of a steep hill or grade, never attempt to turn around. To do so may result in tipping and rolling the vehicle, which may result in severe injury. Always back carefully straight down a hill in REVERSE. Never back down a hill in NEUTRAL using only the vehicle brakes. Never drive diagonally across a hill, always drive straight up or down.

Driving Through Water

Extreme care should be taken crossing any type of water. Water crossings should be avoided, if possible, and only be attempted when necessary in a safe, responsible manner. Only drive through areas which are designated and approved. Tread lightly and avoid damage to the environment. Know your vehicle's abilities and be able to recover it if something goes wrong. Never stop or shut a vehicle off when crossing deep water. The key to any crossing is low and slow. Proceed very slowly with a constant slow speed of {3 to 5 mph (5 to 8 km/h) maximum} and light throttle. Keep the vehicle moving; do not try to accelerate through the crossing. After crossing any water higher than the bottom of the axle differentials, inspect all of the vehicle fluids for signs of water ingestion.

NOTE:

Water fording is not allowed with the doors off.

CAUTION!

- Water ingestion into the axles, transmission, transfer case, electric motor or vehicle interior can occur if you drive too fast or through too deep of water. Water can cause permanent damage to electric motor, driveline or other vehicle components, and your brakes will be less effective once wet and/or muddy.
- When driving through water, do not exceed 5 mph (8 km/h). Always check water depth before entering as a precaution, and check all fluids afterward. Driving through water may cause damage that may not be covered by the New Vehicle Limited Warranty.

BEFORE YOU CROSS ANY TYPE OF WATER

As you approach any type of water, you need to determine if you can cross it safely and responsibly. If necessary, get out and walk through the water or probe it with a stick. You need to be sure of its depth, approach angle, current and bottom condition. Be careful of murky or muddy waters; check for hidden obstacles. Make sure you will not be intruding on any wildlife, and you can recover the vehicle if necessary. The key to a safe crossing is the water depth, current and bottom conditions. On soft bottoms, the vehicle will sink in, effectively increasing the water level on the vehicle. Be sure to consider this when determining the depth and the ability to safely cross.

CROSSING PUDDLES, POOLS, FLOODED AREAS OR OTHER STANDING WATER

Puddles, pools, flooded or other standing water areas normally contain murky or muddy waters. These water types normally contain hidden obstacles and make it difficult to determine an accurate water depth, approach angle, and bottom condition. Murky or muddy water holes are where you want to hook up tow straps prior to entering. This makes for a faster, cleaner and easier vehicle recovery. If you are able to determine you can safely cross, then proceed using the low and slow method.

CAUTION!

Muddy waters can reduce the cooling system effectiveness by depositing debris onto the radiator.

CROSSING DITCHES, STREAMS, SHALLOW RIVERS OR OTHER FLOWING WATER

Flowing water can be extremely dangerous. Never attempt to cross a fast running stream or river even in shallow water. Fast moving water can easily push your vehicle downstream, sweeping it out of control. Even in very shallow water, a high current can still wash the dirt out from around your tires putting you and your vehicle in jeopardy. There is still a high risk of personal injury and vehicle damage with slower water currents in depths greater than the vehicle's running ground clearance. You should never attempt to cross flowing water which is deeper than the vehicle's running ground clearance. Even the slowest current can push the heaviest vehicle downstream and out of control if the water is deep enough to push on the large surface area of the vehicle's body. Before you proceed, determine the speed of the current, the water's depth, approach angle, bottom condition and if there are any obstacles. Then cross at an angle heading slightly upstream using the low and slow technique.

WARNING!

Never drive through fast moving deep water. It can push your vehicle downstream, sweeping it out of control. This could put you and your passengers at risk of injury or drowning.

After Driving Off-Road

Off-road operation puts more stress on your vehicle than does most on-road driving. After going off-road, it is always a good idea to check for damage. That way

you can get any problems taken care of right away and have your vehicle ready when you need it.

- Completely inspect the underbody of your vehicle. Check tires, body structure, steering, and suspension for damage.
- Inspect the radiator for mud and debris and clean as required.
- Check threaded fasteners for looseness, particularly on the chassis, drivetrain components, steering, and suspension. Retighten them, if required, and torque to the values specified in the Service Manual.
- Check for accumulations of plants or brush. These things could be a fire hazard. They might hide damage to brake hoses, axle seals, and axle shafts.
- After extended operation in mud, sand, water, or similar dirty conditions, have the radiator, cooling fan, brake rotors, wheels, brake linings, and axles inspected and cleaned as soon as possible.

WARNING!
Abrasive material in any part of the brakes may cause excessive wear or unpredictable braking. You might not have full braking power when you need it to prevent a collision. If you have been operating your vehicle in dirty conditions, get your brakes checked and cleaned as necessary.

- If you experience unusual vibration after driving in mud, slush or similar conditions, check the wheels for impacted material. Impacted material can cause a wheel imbalance and freeing the wheels of it will correct the situation.

ENHANCED DRIVING ASSISTANCE SYSTEMS

SENSORS

AUDIBLE PEDESTRIAN WARNING SYSTEM - If EQUIPPED

Your vehicle is equipped with an Audible Pedestrian Warning system. The Audible Pedestrian Warning system uses distinct sounds to alert pedestrians that your vehicle is approaching. In addition, the system will indicate changes in vehicle speed by varying the relative volume.

The system uses two external speakers. One is located in the under-hood compartment and the other is in the rear of the vehicle. The Audible Pedestrian Warning system is active when the vehicle is not in PARK and is traveling at lower speeds. Depending on the selected gear (REVERSE, DRIVE, or NEUTRAL), the system activates the corresponding speaker location based on the intended direction of travel.

WARNING!

The Audible Pedestrian Warning system is not intended to avoid a collision. It is always the driver's responsibility to be attentive to the vehicle's distance between other vehicles, people, and objects, and most importantly utilize brake operation to ensure safe driving of the vehicle under all road conditions. Your complete attention is always required while

(Continued)

WARNING!

driving to maintain safe control of your vehicle. Failure to follow this warning could result in a collision or serious personal injury.

REAR SEAT REMINDER ALERT (RSRA) — If EQUIPPED

RSRA alerts you through visual and auditory notifications of the possible presence of an object, passenger, or pet in the rear seats if a rear door was opened up to 10 minutes before the ignition was placed in the ON/RUN position. RSRA does not directly detect objects, passengers, or pets in the rear seats. When the previous conditions are met, RSRA displays the message "Check Rear Seat" on the instrument cluster display and sounds an auditory alert upon the driver placing the ignition in the OFF.

To enable or disable RSRA, see ➞ page 115.

WARNING!

- Before exiting a vehicle, always come to a complete stop, then place into PARK and apply the parking brake.
- Always make sure the vehicle is in the OFF position, key fob is removed from the vehicle and vehicle is locked.

(Continued)

WARNING!

- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Leaving children in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector.
- Do not leave children or animals inside parked vehicles in hot weather. Interior heat buildup may cause serious injury or death.

WARNING!

- The Rear Seat Reminder Alert is not available when the vehicle is in Storage Mode.
- Make sure to check the rear seats for children and animals before engaging Storage Mode.

6

COLLISION AVOIDANCE ASSISTANCE SYSTEM

FORWARD COLLISION WARNING (FCW) With MITIGATION — If EQUIPPED

The FCW with Mitigation system provides the driver with audible warnings, visual warnings (within the

instrument cluster display), and may apply a haptic warning in the form of a brake jerk, to warn the driver when it detects a potential frontal collision. The warnings are intended to provide the driver with enough time to react, avoid or mitigate the potential collision.

NOTE:

FCW monitors the information from the forward looking sensors as well as Electronic Brake Controller (EBC), to calculate the probability of a forward collision. When the system determines that a forward collision is probable, the driver will be provided with audible and visual warnings as well as a possible haptic warning in the form of a brake jerk.

If the driver does not take action based upon these progressive warnings, then the system will provide a limited level of active braking to help slow the vehicle and mitigate the potential forward collision. If the driver reacts to the warnings by braking and the system determines that the driver intends to avoid the collision by braking but has not applied sufficient brake force, the system will compensate and provide additional brake force as required.

If a FCW with Mitigation event begins at a speed below 32 mph (52 km/h), the system may provide the maximum braking possible to mitigate the potential forward collision. If the Forward Collision Warning with Mitigation event stops the vehicle completely, the system will hold the vehicle at standstill for two seconds and then release the brakes.



FCW Message

When the system determines a collision with the vehicle in front of you is no longer probable, the warning message will be deactivated.

NOTE:

- The minimum speed for FCW activation is 3 mph (5 km/h).
- The FCW alerts may be triggered on objects other than vehicles such as guardrails or sign posts based on the course prediction. This is expected and is a part of normal FCW activation and functionality.
- It is unsafe to test the FCW system. To prevent such misuse of the system, after four Active Braking events within a key cycle, the Active Braking portion of FCW will be deactivated until the next key cycle.
- The FCW system is intended for on-road use only. If the vehicle is taken off-road, the FCW system should be deactivated to prevent unnecessary warnings to the surroundings.
- FCW may not react to irrelevant objects such as overhead objects, ground reflections, objects not in the path of the vehicle, stationary objects that are

far away, oncoming traffic, or leading vehicles with the same or higher rate of speed.

- FCW will be disabled like ACC, with the unavailable screens.

WARNING!

Forward Collision Warning (FCW) is not intended to avoid a collision on its own, nor can FCW detect every type of potential collision. In rare situations, the system may react to surrounding objects such as tunnels, bridges, guardrails, etc. The driver has the responsibility to avoid a collision by controlling the vehicle via braking, steering, and acceleration. Unintended braking reactions can always be overridden by pressing down hard on the accelerator. Failure to follow this warning could lead to serious injury or death.

Turning FCW On Or Off

The FCW setting menu can be adjusted through the Uconnect Settings ➞ page 115.

- To turn the FCW system on, select between “Only Warning” and “Warning and Braking” in the FCW menu.
- Select “OFF” in the FCW menu to turn the FCW system off.

NOTE:

- When the FCW is “on”, this allows the system to warn the driver of a possible collision with the vehicle in front.
- When the FCW is “off”, this prevents the system from warning the driver of a possible collision with the

vehicle in front. If the FCW is set to “off”, “FCW OFF” will be displayed in the instrument cluster display.

- When FCW status is set to “Only Warning”, this prevents the system from providing limited active braking, or additional brake support if the driver is not braking adequately in the event of a potential frontal collision.
- When FCW status is set to “Warning and Braking”, this allows the system to warn the driver of a possible collision with the vehicle in front using audible/visual warnings and it applies autonomous braking.
- The system will retain the last setting selected by the driver after ignition shutdown.

FCW Braking Status And Sensitivity

The FCW Sensitivity and Active Braking status are programmable through the Uconnect system
 ➞ page 115.

- Far
 - When the sensitivity of FCW is set to the “Far” setting, this allows the system to warn the driver of a possible more distant collision with the vehicle in front using audible/visual warnings.
 - More cautious drivers that do not mind frequent warnings may prefer this setting.

NOTE:

The “Far” setting may result in a greater number of FCW possible collision warnings experienced.

- Medium

- When the sensitivity of FCW is set to the “Medium” setting, this allows the system to warn the driver of a possible collision with the vehicle in front using audible/visual warnings.

- Near

- When the sensitivity of FCW is set to the “Near” setting, this allows the system to warn the driver of a possible closer collision with the vehicle in front using audible/visual warnings.
- This setting provides less reaction time than the “Far” and “Medium” settings, which allows for a more dynamic driving experience.
- More dynamic or aggressive drivers that want to avoid frequent warnings may prefer this setting.

NOTE:

The “Near” setting may result in a lesser number of FCW possible collision warnings experienced.

FCW Limited Warning

If the instrument cluster displays “ACC/FCW Limited Functionality” or “ACC/FCW Limited Functionality Clean Front Windshield” momentarily, there may be a condition that limits FCW functionality. Although the vehicle is still drivable under normal conditions, the active braking may not be fully available. Once the condition that limited the system performance is no longer present, the system will return to its full performance state. If the problem persists, see an authorized dealer.

Service FCW Warning

If the system turns off, and the instrument cluster displays:

- ACC/FCW Unavailable Service Required
- Cruise/FCW Unavailable Service Required

This indicates there is an internal system fault. Although the vehicle is still drivable under normal conditions, have the system checked by an authorized dealer.

Audible Pedestrian Warning System - If Equipped

Your vehicle is equipped with an Audible Pedestrian Warning system. The Audible Pedestrian Warning system uses distinct sounds to alert pedestrians that your vehicle is approaching. In addition, the system will indicate changes in vehicle speed by varying the relative volume.

The system uses two external speakers. One is located in the under-hood compartment and the other is in the rear of the vehicle. The Audible Pedestrian Warning system is active when the vehicle is not in PARK and is traveling at lower speeds. Depending on the selected gear (REVERSE, DRIVE, or NEUTRAL), the system activates the corresponding speaker location based on the intended direction of travel.

WARNING!

The Audible Pedestrian Warning system is not intended to avoid a collision. It is always the driver's

(Continued)

WARNING!

responsibility to be attentive to the vehicle's distance between other vehicles, people, and objects, and most importantly utilize brake operation to ensure safe driving of the vehicle under all road conditions. Your complete attention is always required while driving to maintain safe control of your vehicle. Failure to follow this warning could result in a collision or serious personal injury.

Intersection Collision Assist (ICA) — If Equipped

ICA uses three front radar sensors located in the front fascia/bumper, to detect oncoming vehicles from the front or side when driving through an intersection. When the system determines that a collision is probable when turning across oncoming traffic, the system will attempt to mitigate a possible collision by decelerating the vehicle. When the system determines that a collision with a crossing vehicle is probable, the system may apply additional braking to supplement the driver braking input to attempt to mitigate a possible collision. The system will also provide audible warnings and visual warnings (shown in the instrument cluster). If the driver determines acceleration is needed to avoid a collision, when the accelerator is pressed ICA will cancel.

VEHICLE STABILITY ASSISTANCE SYSTEM

ELECTRONIC STABILITY CONTROL (ESC)

ESC enhances directional control and stability of the vehicle under various driving conditions. ESC corrects for oversteering or understeering of the vehicle by applying the brake of the appropriate wheel(s) to counteract these conditions. Power may also be reduced to help the vehicle maintain the desired path.

- Oversteer — when the vehicle is turning more than appropriate for the steering wheel position.
- Understeer — when the vehicle is turning less than appropriate for the steering wheel position.

ESC uses sensors in the vehicle to determine the vehicle path intended by the driver and compares it to the actual path of the vehicle. When the actual path does not match the intended path, ESC applies the brake of the appropriate wheel to assist in counteracting the oversteer or understeer condition.

The ESC Activation/Malfunction Indicator Light located in the instrument cluster will start to flash as soon as the ESC system becomes active. The ESC Activation/Malfunction Indicator Light also flashes when the TCS is active. If the ESC Activation/Malfunction Indicator Light begins to flash during acceleration, ease up on the accelerator and apply as little throttle as possible. Be sure to adapt your speed and driving to the prevailing road conditions.

WARNING!

- Electronic Stability Control (ESC) cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase the traction afforded by prevailing road conditions. ESC cannot prevent accidents, including those resulting from excessive speed in turns, driving on very slippery surfaces, or hydroplaning. ESC also cannot prevent accidents resulting from loss of vehicle control due to inappropriate driver input for the conditions. Only a safe, attentive, and skillful driver can prevent accidents. The capabilities of an ESC equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user's safety or the safety of others.
- Vehicle modifications, or failure to properly maintain your vehicle, may change the handling characteristics of your vehicle, and may negatively affect the performance of the ESC system. Changes to the steering system, suspension, braking system, tire type and size or wheel size may adversely affect ESC performance. Improperly inflated and unevenly worn tires may also degrade ESC performance. Any vehicle modification or poor vehicle maintenance that reduces the effectiveness of the ESC system can increase the risk of loss of vehicle control, vehicle rollover, personal injury and death.

TRACTION CONTROL SYSTEM (TCS)

TCS monitors the amount of wheel spin of each of the driven wheels. If wheel spin is detected, the TCS may apply brake pressure to the spinning wheel(s) and/or

reduce power to provide enhanced acceleration and stability. A feature of the TCS, Brake Limited Differential (BLD) functions similarly to a limited slip differential and controls the wheel spin across a driven axle. If one wheel on a driven axle is spinning faster than the other, the system will apply the brake of the spinning wheel. This will allow more torque to be applied to the wheel that is not spinning. BLD may remain enabled even if TCS and Electronic Stability Control (ESC) are in reduced modes.

BRAKING PERFORMANCE ASSISTANCE SYSTEM

BRAKE SYSTEM WARNING LIGHT

The red Brake System Warning Light will turn on when the ignition is placed in the ON/RUN mode and may stay on for as long as four seconds.

If the Brake System Warning Light remains on or comes on while driving, it indicates that the brake system is not functioning properly and that immediate service is required. If the Brake System Warning Light does not come on when the ignition is placed in the ON/RUN mode, have the light repaired as soon as possible.

BRAKE ASSIST SYSTEM (BAS)

The BAS is designed to optimize the vehicle's braking capability during emergency braking maneuvers. The system detects an emergency braking situation by sensing the rate and amount of brake application and then applies optimum pressure to the brakes. This can help reduce braking distances. The BAS complements

the Anti-Lock Brake System (ABS). Applying the brakes very quickly results in the best BAS assistance. To receive the benefit of the system, you must apply continuous braking pressure during the stopping sequence (do not "pump" the brakes). Do not reduce brake pedal pressure unless braking is no longer desired. Once the brake pedal is released, the BAS is deactivated.

WARNING!

The Brake Assist System (BAS) cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase the traction afforded by prevailing road conditions. BAS cannot prevent collisions, including those resulting from excessive speed in turns, driving on very slippery surfaces, or hydroplaning. The capabilities of a BAS-equipped vehicle must never be exploited in a reckless or dangerous manner, which could jeopardize the user's safety or the safety of others.

READY ALERT BRAKING (RAB)

RAB may reduce the time required to reach full braking during emergency braking situations. It anticipates when an emergency braking situation may occur by monitoring how fast the throttle is released by the driver. The Electronic Brake Controller (EBC) will prepare the brake system for a panic stop.

ELECTRONIC BRAKE FORCE DISTRIBUTION (EBD)

EBD manages the distribution of the braking torque between the front and rear axles by limiting braking

pressure to the rear axle. This is done to prevent overslip of the rear wheels to avoid vehicle instability, and to prevent the rear axle from entering ABS before the front axle.

RAIN BRAKE SUPPORT (RBS)

RBS may improve braking performance in wet conditions. It will periodically apply a small amount of brake pressure to remove any water buildup on the front brake rotors. It functions when the windshield wipers are in LO or HI speed. When RBS is active, there is no notification to the driver and no driver interaction is required.

ANTI-LOCK BRAKE SYSTEM (ABS)

The ABS provides increased vehicle stability and brake performance under most braking conditions. The system automatically prevents wheel lock and enhances vehicle control during braking.

The ABS performs a self-check cycle to ensure that the ABS is working properly each time the vehicle is started and driven. During this self-check, you may hear a slight clicking sound as well as some related motor noises.

The ABS is activated during braking when the system detects one or more wheels are beginning to lock. Road conditions such as ice, snow, gravel, bumps, railroad tracks, loose debris, or panic stops may increase the likelihood of ABS activation(s).

You also may experience the following normal characteristics when the ABS activates:

- ABS motor noise or clicking sounds (you may continue to hear for a short time after the stop)

- Brake pedal pulsations
- A slight drop of the brake pedal at the end of the stop

The ABS is designed to function with the Original Equipment Manufacturer (OEM) tires. Modification may result in degraded ABS performance.

WARNING!

- The ABS contains sophisticated electronic equipment that may be susceptible to interference caused by improperly installed or high output radio transmitting equipment. This interference can cause possible loss of anti-lock braking capability. Installation of such equipment should be performed by qualified professionals.
- Pumping of the Anti-Lock Brakes will diminish their effectiveness and may lead to a collision. Pumping makes the stopping distance longer. Just press firmly on your brake pedal when you need to slow down or stop.
- The ABS cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase braking or steering efficiency beyond that afforded by the condition of the vehicle brakes and tires or the traction afforded.
- The ABS cannot prevent collisions, including those resulting from excessive speed in turns, following another vehicle too closely, or hydroplaning.
- The capabilities of an ABS equipped vehicle must never be exploited in a reckless or dangerous manner that could jeopardize the user's safety or the safety of others.

ANTI-LOCK BRAKE SYSTEM (ABS) WARNING LIGHT

The yellow ABS Warning Light will turn on when the ignition is placed in the ON/RUN mode and may stay on for as long as four seconds.


If the ABS Warning Light remains on or comes on while driving, it indicates that the anti-lock portion of the brake system is not functioning and that service is required. However, the conventional brake system will continue to operate normally if the ABS Warning Light is on.

If the ABS Warning Light is on, the brake system should be serviced as soon as possible to restore the benefits of Anti-Lock Brakes. If the ABS Warning Light does not come on when the ignition is placed in the ON/RUN mode, have the light repaired as soon as possible.

VISIBILITY ASSISTANCE SYSTEM

BLIND SPOT MONITORING (BSM) — If EQUIPPED

The BSM system uses two radar sensors, located inside the inside the rear bumper/fascia, to detect highway licensable vehicles (automobiles, trucks, motorcycles, etc.) that enter the blind spot zones from the rear/front/side of the vehicle.

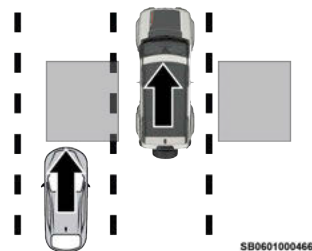

Rear Detection Zones

When the vehicle is started, the BSM Warning Light will momentarily illuminate in both outside rearview mirrors to let the driver know that the system is operational. The BSM system sensors operate when the vehicle is in any forward gear and enters standby mode when the vehicle is in PARK (P).

The BSM detection zone covers approximately one lane width on both sides of the vehicle 12 ft (3.8 m). The zone length starts at the outside rearview mirror and extends approximately 10 ft (3 m) beyond the rear fascia/bumper of the vehicle. The BSM system monitors the detection zones on both sides of the vehicle when the vehicle speed reaches approximately 6 mph (10 km/h) or higher and will alert the driver of vehicles in these areas.

NOTE:

- The BSM system DOES NOT alert the driver about rapidly approaching vehicles that are outside the detection zones.
- The Blind Spot Monitoring (BSM) system may experience dropouts (blinking on and off) of the side

mirror warning indicator light when a motorcycle or any small object remains at the side of the vehicle for extended periods of time (more than a couple of seconds).

The BSM system can become blocked if snow, ice, mud, or other road contaminants accumulate on the rear fascia/bumper where the radar sensors are located. The system may also detect blockage if the vehicle is operated in areas with extremely low radar returns such as a desert or parallel to a large elevation drop. If blockage is detected, a “Blind Spot Temporarily Unavailable, Wipe Rear Corners” message will display in the cluster, both mirror lights will illuminate, and BSM and RCP alerts will not occur. This is normal operation. The system will automatically recover and resume function when the condition clears. To minimize system blockage, do not block the area of the rear fascia/bumper where the radar sensors are located with foreign objects (bumper stickers, bicycle racks, etc.) and keep it clear of road contaminants.



SB0601000537

BSM Radar Location (Left Side Shown)

The BSM system notifies the driver of objects in the detection zones by illuminating the BSM Warning Light located in the outside mirrors in addition to sounding an audible (chime) alert and reducing the radio volume
⇒ page 165.




Warning Light Location

The BSM system monitors the detection zone from three different entry points (side, rear, front) while driving to see if an alert is necessary. The BSM system will issue an alert during these types of zone entries.

Entering From The Side

Vehicles that move into your adjacent lanes from either side of the vehicle.

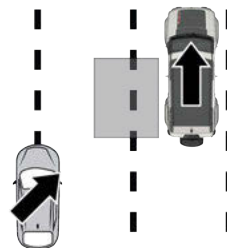


SB0601000477

Side Monitoring

Entering From The Rear

Vehicles that come up from behind your vehicle on either side and enter the rear detection zone with a relative speed of less than 30 mph (48 km/h).

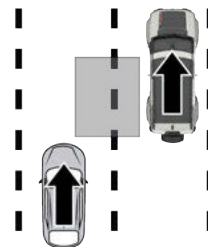


SB0601000469

Rear Monitoring


Overtaking Traffic

If you pass another vehicle slowly with a relative speed less than 15 mph (24 km/h) and the vehicle remains

in the blind spot for approximately 1.5 seconds, the warning light will be illuminated. If the difference in speed between the two vehicles is greater than 15 mph (24 km/h), the warning light will not illuminate.

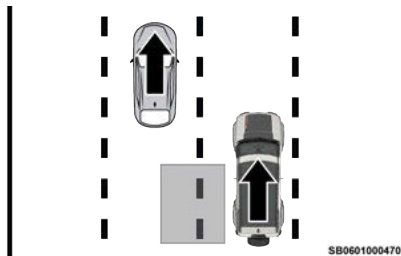

Overtaking/Approaching

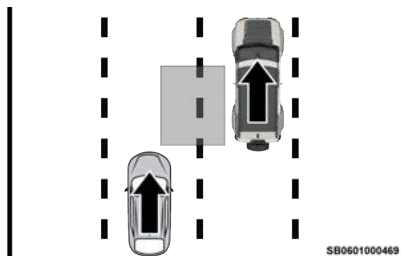


Overtaking/Passing

The BSM system is designed not to issue an alert on stationary objects such as guardrails, posts, walls, foliage, berms, etc. However, occasionally the system

may alert on such objects. This is normal operation and your vehicle does not require service.

The BSM system will not alert you of objects that are traveling in the opposite direction of the vehicle in adjacent lanes.

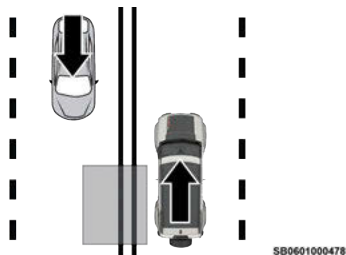

Opposing Traffic


WARNING!

The Blind Spot Monitoring system is only an aid to help detect objects in the blind spot zones. The BSM system is not designed to detect pedestrians, bicyclists, or animals. Even if your vehicle is equipped with the BSM system, always check your vehicle's mirrors, glance over your shoulder, and use your turn signal before changing lanes. Failure to do so can result in serious injury or death.

Rear Cross Path (RCP)

RCP is intended to aid the driver when backing out of parking spaces where their vision of oncoming vehicles may be blocked. Proceed slowly and cautiously out of

the parking space until the rear end of the vehicle is exposed. The RCP system will then have a clear view of the cross traffic and if an oncoming vehicle is detected, alert the driver.

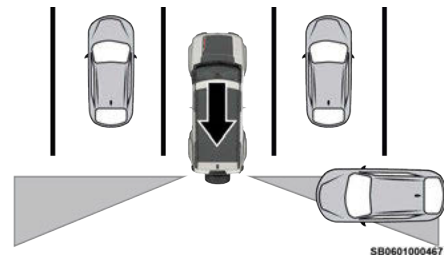

RCP Detection Zones

RCP monitors the rear detection zones on both sides of the vehicle, for objects that are moving toward the side of the vehicle with a minimum speed of approximately 3 mph (5 km/h), to objects moving a maximum of approximately 20 mph (32 km/h), such as in parking lot situations.

When RCP is on and the vehicle is in REVERSE, the driver is alerted using both the visual and audible alarms, including reducing the radio volume.

NOTE:

In a parking lot situation, oncoming vehicles can be blocked by vehicles parked on either side. If the sensors are blocked by other structures or vehicles, the system will not be able to alert the driver.

WARNING!

Rear Cross Path Detection (RCP) is not a backup aid system. It is intended to be used to help a driver detect an oncoming vehicle in a parking lot situation. Drivers must be careful when backing up, even when using RCP. Always check carefully behind your vehicle, look behind you, and be sure to check for pedestrians, animals, other vehicles, obstructions, and blind spots before backing up. Failure to do so can result in serious injury or death.

Blind Spot Modes

Blind Spot has three selectable modes of operation that are available in the Uconnect system.

Blind Spot Alert Lights Only

When operating in Blind Spot Alert mode, the BSM system will provide a visual alert in the appropriate side view mirror based on a detected object. However, when the system is operating in Rear Cross Path (RCP) mode, the system will respond with both visual and audible alerts when a detected object is present. Whenever an audible alert is requested, the radio is muted.

Blind Spot Alert Lights/Chime

When operating in Blind Spot Alert Lights/Chime mode, the BSM system will provide a visual alert in the appropriate side view mirror based on a detected object. If the turn signal is then activated, and it corresponds to an alert present on that side of the vehicle, an audible chime will also be sounded. Whenever a turn signal and detected object are present on the same side at the same time, both the visual and

audible alerts will be issued. In addition to the audible alert the radio (if on) will also be muted.

NOTE:

Whenever an audible alert is requested by the BSM system, the radio is also muted.

When the system is in RCP, the system shall respond with both visual and audible alerts when a detected object is present. Whenever an audible alert is requested, the radio is also muted. Turn/hazard signal status is ignored; the RCP state always requests the chime.

Blind Spot Alert Off

When the BSM system is turned off there will be no visual or audible alerts from either the BSM or RCP systems.

NOTE:

The BSM system will store the current operating mode when the vehicle is shut off. Each time the vehicle is started the previously stored mode will be recalled and used.

Door Removal

Only audible alerts will be available when either the front driver or passenger doors are removed. Upon re-installation of the doors, the system will resume functionality based on the personalized mode selected.

Trailer Merge Assist — If Equipped


Trailer Merge Assist is a function of the Blind Spot Monitoring (BSM) system that extends the blind spot zone to work while pulling a trailer.

NOTE:

When Trailer Merge Assist is activated, Rear Cross Path is disabled.

Trailer Merge Assist consists of three sub functions:

- Automatic Trailer Detection
- Trailer Length Detection
- Trailer Merge Warning

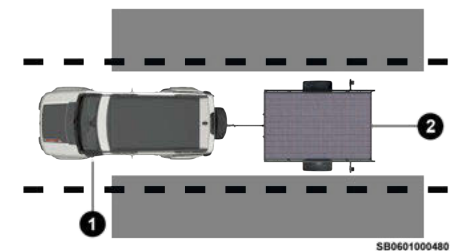

Blind Spot Zones With Trailer Merge Assist

- 1 — Vehicle
- 2 — Trailer

Automatic Trailer Detection

There are two modes of operation for the detection of the trailer length:

- **Automatic Mode** — When "Auto Mode" is selected, the system will use the blind spot sensors to automatically determine the presence and length of a trailer. The presence of a trailer will be detected using the blind spot radar within 90 seconds of forward movement of the vehicle. The

vehicle must be moving above 6 mph (10 km/h) to activate the feature. Once the trailer has been detected, the system will default to the maximum blind spot zone until the length has been verified. You will see "Auto" in the instrument panel cluster.

- 
Maximum Mode— When "Max Mode" is selected, the system will default to the maximum blind spot zone regardless of what size trailer is attached.

NOTE:

Selected setting is stored when the power button is placed in the OFF position. To change this setting, it must be selected through the Uconnect Settings  page 113.

Trailer Length Detection

Once the trailer presence has been established, the trailer length will be established (by making a 90 degree turn) and then the trailer length category (example 10-20 ft (3 m to 6 m)) will be displayed. This can take up to 30 seconds after completing the turn.

NOTE:

During the same key cycle, if the vehicle is at a standstill for a minimum of 90 seconds, a new "trailer detection request" is enabled by the system once the vehicle resumes motion.


The maximum trailer length supported by the Trailer Merge Assist feature is 39.5 ft (12 m). Trailer length is considered the forward most portion of the trailer hitch to the rearward most portion of the body, fascia/ bumper, or ramp of the trailer.

The maximum width supported by the Trailer Merge Assist feature is 8.5 ft (2.59 m). Trailer width is

measured at the widest portion of the trailer and may include wheels, tires, fenders, or rails.

NOTE:

The ability to detect a trailer may be degraded in crowded or busy environments. Busy parking lots, narrow areas surrounded with trees, or any other crowded area may prevent the radar sensors from being able to adequately detect the trailer. The system will try to detect a trailer at every key cycle.

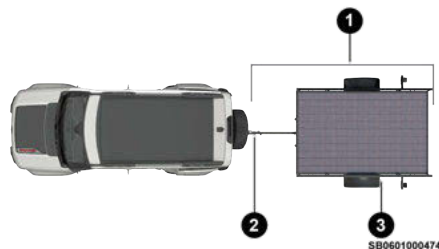

Trailer Length Detection

- 1 — Trailer Length
- 2 — Trailer Hitch
- 3 — Trailer Width

Trailer length will be identified and placed into one of the following categories:

- 
 Trailer length up to 10 ft (3 m) — Blind spot zone will be adjusted to 10 ft (3 m).
- 
 Trailer length between 10 ft to 20 ft (3 m to 6 m) — Blind spot zone will be adjusted to 20 ft (6 m).

- 
 Trailer length between 20 ft to 30 ft (6 m to 9 m) — Blind spot zone will be adjusted to 30 ft (9 m).
- 
 Trailer length between 30 ft and 39.5 ft (9 m to 12 m) — Blind spot zone will be adjusted to Max distance.

NOTE:

Trailer length is determined within +/- 3 ft (1 m) of actual length. Trailers that are the same size as the category limit, 10/20/30 ft (3/6/9 m), could be subject to being placed in the category above or below the correct one.

Trailer Merge Warning

Trailer Merge Warning is the extension of the blind spot function to cover the length of the trailer, plus a safety margin, to warn the driver when there is a vehicle in the adjacent lane. The driver is alerted by the illumination of the BSM Warning Light located in the outside mirror on the side the other vehicle is detected on. In addition, an audible (chime) alert will be heard and radio volume will be reduced.

NOTE:

- The Trailer Merge Alert system DOES NOT alert the driver about rapidly approaching vehicles that are outside the detection zones.
- The Blind Spot Monitoring (BSM) system may experience drop outs (blinking on and off) of the side mirror warning indicator lights when a motorcycle or any small object remains at the side of the vehicle for extended periods of time (more than a couple of seconds).
- Crowded areas such as parking lots, neighborhoods, etc. may lead to an increased amount of false alerts. This is normal operation.

WARNING!

The Blind Spot Monitoring system is only an aid to help detect objects in the blind spot zones. The BSM system is not designed to detect pedestrians, bicyclists, or animals. Even if your vehicle is equipped with the BSM system, always check your vehicle's mirrors, glance over your shoulder, and use your turn signal before changing lanes. Failure to do so can result in serious injury or death.

LANE CENTERING ASSISTANCE SYSTEM

ACTIVE LANE MANAGEMENT SYSTEM — If EQUIPPED

Active Lane Management Operation

The Active Lane Management (ALM) system uses a forward facing camera to detect lane markings or road edges and to measure vehicle position within the lane boundaries. It also uses the Blind Spot Monitoring (BSM) sensors to detect vehicles in adjacent lanes while the driver is preparing to change lanes.

The system is operational at speeds above 37 mph (60 km/h) and below 112 mph (180 km/h).

When both lane markings are detected, and the vehicle approaches (or crosses) the lane marking with no turn signal applied, and the blind spot zone is not occupied, the ALM system provides warnings to prompt the driver

to remain within the lane boundaries. These warnings include a visual warning in the instrument cluster along with steering assist torque (if configured in Uconnect Settings).

If the driver crosses the lane marking, the system will either guide the vehicle back to the center of the lane, provide a vibration in the steering wheel, or both, depending on radio settings.

When both lane markings are detected, and the driver uses the turn signal to indicate a lane change, and a vehicle is detected in the BSM zone on that side of the vehicle, the ALM system provides a warning in the form of steering assist and/or steering vibration (depending on radio settings) to guide the vehicle back to the center of the lane.

NOTE:

- The system will suppress visual warnings, steering vibration (if selected in radio settings), and steering assistance (if selected in radio settings) when the driver activates the turn signal, the blind spot zone is clear of vehicles, and a lane change is occurring.
- If the Blind Spot Monitoring (BSM) system detects a vehicle in the adjacent lane, and the turn signal is applied in that direction, the BSM LED on the mirror will flash. If the driver continues to attempt the lane change, steering wheel torque will be provided to keep the vehicle within its lane markings.

The driver may manually override the steering assist warning by applying force to the steering wheel at any time.

When only a single lane marking is detected and the driver drifts across the lane marking (no turn signal applied), the Active Lane Management system provides

a visual warning in the instrument cluster, as well as a steering assist torque (if configured in Uconnect Settings), to prompt the driver to remain within the lane boundaries. If the driver continues to drift out of the lane, the system provides a flashing visual warning through the instrument cluster display as well as a haptic steering wheel vibration (if configured in Uconnect Settings) when the vehicle crosses the lane boundary.

NOTE:

When operating conditions have been met, the Active Lane Management system will monitor if the driver's hands are on the steering wheel and provides an audible and visual warning to the driver if removed. The system will cancel if the driver does not return their hands to the wheel.

Turning Active Lane Management On Or Off



The Active Lane Management button is located on the switch panel below the Uconnect display.

To turn the system on, push the Active Lane Management button (LED turns off). A message is shown in the instrument cluster display.

To turn the system off, push the button again (LED turns on).

NOTE:

The Active Lane Management system will retain the last system state on or off from the last key cycle when the Start button is placed in the ON/RUN position.

Active Lane Management Warning Message

The Active Lane Management system will indicate the current lane drift condition through the instrument cluster display.

Lane Departure

- When the system is on, the lane lines are gray.



Lanes Sensed (Gray Lines)

- When the system senses a lane drift situation, the left lane line turns solid yellow. At this time, steering assist warning is applied to the steering wheel in the opposite direction of the lane boundary.

For example: If approaching the left side of the lane the steering wheel will turn to the right.



Lane Drift (Solid Yellow Line)

- When the system senses the lane line is being crossed, the left lane line changes from solid yellow to flashing yellow (on/off). At this time, vibration is applied to the steering wheel.

For example: If approaching the left side of the lane the steering wheel will turn to the right.



Lane Crossed (Flashing Yellow Line)

NOTE:

- The Active Lane Management system operates with similar behavior for a right lane departure.
- If the turn signal is activated, and the vehicle begins to depart the lane at the same time the Blind Spot Monitoring (BSM) system detects another vehicle in the BSM zones, the system will provide haptic steering wheel vibration and/or steering assist torque (if programmed in Uconnect Settings).

Changing Active Lane Management Status

Configurable settings for the Active Lane Management system are available within the Uconnect system.

Selectable Warning Types:

- Vibration Only
- Steering Assist Only
- Vibration And Steering Assist

Other configurable settings for this system are for steering assist strength (high/med/low), and the warning zone sensitivity (early/medium/late).

NOTE:

- The system will not apply vibration and/or steering assist to the steering wheel whenever a safety system engages (Anti-Lock Brakes, Traction Control System, Electronic Stability Control, Forward Collision Warning, etc.).
- The Blind Spot Monitoring system will be forced on when the ALM system is enabled.
- The ALM system will be suppressed when the Active Driving Assist system (if equipped) is engaged.

ACTIVE DRIVING ASSIST SYSTEM — IF EQUIPPED

Operation

The Active Driving Assist (ADA) system is combined with the Adaptive Cruise Control (ACC) system, and centers the vehicle in the driving lane while traveling at speeds up to 90 mph (145 km/h).

For ACC system operating instructions and system limitations, see ➞ page 189.

NOTE:

- The driver should always obey traffic laws and speed limits. Never drive above applicable speed limit restrictions.
- The driver can override ADA at any time by braking, accelerating, or steering the vehicle.

Just like ACC, ADA will maintain a set speed as long as the set distance between your vehicle and the vehicle in front is maintained. ADA will also keep your vehicle centered between the lane lines, and monitor for other vehicles in adjacent lanes by utilizing the Blind Spot Monitoring sensors.

Active Driving Assist System

The ADA system uses sensors within the steering wheel to measure driver attentiveness, and requires that the driver have their hands on the steering wheel at all times.

The system will generally aim to keep the vehicle centered in the lane, but when the driver turns the steering wheel (e.g. to move farther away from a large vehicle in an adjacent lane) the system will

reduce its control and enter "co-steering" mode. While in co-steering mode, the system will provide reduced assistance and allow the driver to control the path of the vehicle. Once the driver stops providing input to the steering wheel, the system will require a few seconds to fully resume lane centering assistance, especially during curves.

WARNING!

The driver is always responsible for determining if a lane change is safe. Failure to follow this warning can result in a collision and death or serious personal injury.

WARNING!

The Active Driving Assist (ADA) system is a convenience system. It is not a substitute for active driver involvement. It is always the driver's responsibility to be attentive of road traffic, weather conditions, vehicle speed, distance to the vehicle ahead, position in the lane compared to other vehicles, and brake operation to ensure safe operation of the vehicle under all road conditions. Your complete attention is always required while driving to maintain safe control of your vehicle. Failure to follow these warnings can result in a collision and death or serious personal injury.

Some states and local laws may require hands to be kept on the steering wheel at all times. For vehicles equipped with the Hands-Free ADA system, **ONLY** remove your hands from the steering wheel if the

(Continued)

WARNING!

Hands-Free system is engaged, it is safe to do so, and it is permitted by state and local laws.

You should turn off the Active Driving Assist systems:

- When driving in complex driving situations (e.g. urban environments, construction zones, etc.), adverse weather or low visibility conditions (e.g. rain, snow, fog, sleet, dust), or adverse road conditions (e.g. heavy traffic, worn or missing lane markings, etc.).
- When entering a highway on-ramp or exiting an off-ramp.
- When driving on roads that are icy, snow covered, or slippery.
- When driving during difficult or uncertain conditions.

Turning Active Driving Assist On Or Off



Active Driving Assist On/Off Button

To enable the Active Driving Assist system, proceed as follows:

1. Push the Active Driving Assist on/off button located on the right side of the steering wheel. The steering wheel image will display white in the instrument cluster display until the system is engaged. If ACC was previously disabled, pushing this button will activate BOTH ACC and Active Driving Assist systems.
2. If ACC was engaged before pushing the ADA on/off button, ACC will remain active and ADA will also become engaged (once all other conditions are met).
3. If ACC was not active before pushing the ADA on/off button, push the SET (+) button or the SET (-) button and release when the desired driving speed is shown in the instrument cluster display.
4. If desired, adjust the ACC distance setting by pushing the Distance Increase or Distance Decrease buttons.

When all system conditions are met as described in “System Engagement Conditions” in the next section, the system will engage and the steering wheel image in the display will change to green.



Active Driving Assist Engaged (Steering Wheel Green)

System Engagement Conditions

The following conditions must be met before the system will engage and will NOT be shown in the ADA status message location:

- Active Driving Assist system is enabled (white ADA status icon)
- Turn signal is not activated
- Driver seat belt is buckled
- Driver door is closed
- Driver is not pressing the brake pedal
- Driver has hands on steering wheel

The following conditions must be met before the system will engage and WILL be shown in the ADA status message location:

- System detects visible lane markings
- Vehicle is traveling below 90 mph (145 km/h)

- Vehicle is centered in lane
- Vehicle is not in a tight curve
- Trailer is not connected

NOTE:

For the system to detect the driver's hands on the steering wheel, the wheel must be gripped on the outside. Gripping the inside areas of the steering wheel will not satisfy the hands-on condition to engage the system.



Do Not Grip Inside Of Steering Wheel

System Deactivation

The system will be deactivated in any of the following situations:

- The system initiates a Stop-In-Lane maneuver to stop the vehicle due to driver inattentiveness. The Stop-In-Lane maneuver can be overridden by placing hands on the steering wheel and applying the accelerator or brake pedal. Refer to “Indications On The Display” in the next section for further information

- If lane markings are no longer detected or poor road conditions are experienced
- If the brake pedal is pressed or ACC system is deactivated
- If a turn signal is used (unless a target is in the blind spot zone on the same side the turn signal is being applied)
- If the driver performs an evasive maneuver, applying high torque to the steering wheel for a short duration
- If the driver's seat belt is unbuckled
- If the vehicle speed exceeds 90 mph (145 km/h)
- If the Active Driving Assist on/off button is pushed again (ADA will turn off)
- If the driver steers out of the lane and crosses a lane marking
- If the Forward Collision Warning (FCW) system becomes active and is providing warnings/braking

NOTE:

- ADA will not enable if the system detects a trailer is connected to the vehicle.
- Pushing the Active Driving Assist on/off button or deactivating ACC will turn the system off. All other deactivation conditions will place the system back into the "enabled" state with the steering wheel indicator displayed in white until all engagement conditions are met again.
- When the system is deactivated, Active Lane Management will return to its previous state, and ACC will disable or remain engaged pending system conditions.

Indications On The Display

The Active Driving Assist system status will be shown in the following locations:

- In the center of the instrument cluster display by selecting the Driver Assist menu.
- In the heads up display by selecting Advanced Layout.
- In the Home tile display by selecting the Driver Assist Tile.

The ADA status will be shown as an indicator light around the cluster.

As the system detects driver inattentiveness as previously described ➞ page 169, the system status indicator lights will change from off, to yellow, to red. The following indicators will change in color as warnings to the driver escalate:

- Active Driving Assist Indicator (steering wheel icon in the instrument cluster display or Head Up Display [if equipped])
- Glow effect of the instrument cluster display

If driver's hands are not returned to the steering wheel, the system will deactivate.

Active Driving Assist Indicators (Steering Wheel Icon Only) Is Green

- System is actively steering and providing speed control for the vehicle and the system detects driver is attentive.

Active Driving Assist Indicators Are Yellow

- Driver inattentiveness has been detected, warning the driver to place hands on the steering wheel and look back toward the road.

Active Driving Assist Indicators Are Red

- Driver inattentiveness is still being detected, or driver take-over is required. The driver must return their hands to the steering wheel. Upon driver take-over request, the driver must return their hands to the steering wheel, eyes to the road and (if requested), press the accelerator or brake pedal.



Active Driving Assist Canceled Message

NOTE:

For both Base ADA and Hands-Free ADA (if equipped), the driver **MUST** replace hands on the steering wheel and take control of the vehicle when the system is deactivated.

System Status

Along with changes in the system's indicator lights (yellow, and red), the system can also issue several accompanying warnings intended to provide the driver with enough time to react, avoid or mitigate a potential collision.

Active Driving Assist System

- One haptic brake jerk warnings will be issued (red warning light is issued).
- A steering wheel vibration warning (if enabled) will occur if the vehicle crosses a lane marker, for example, when driving on a tight curve. The steering wheel vibration feature can be turned on or off within the Uconnect system ➞ page 115.

The driver can take control of the vehicle at anytime to override the warnings by pressing the accelerator or brake pedal, moving the steering wheel, and being attentive to the road.

System Operation/Limitations

WARNING!

Active Driving Assist is an SAE Level 2 Driver Assist feature, requiring driver attention at all times. To prevent serious injury or death:

- Always remember that the Active Driving Assist system is a convenience system that cannot accurately detect all situations. Complete attention is always required while driving, even when using the Active Driving Assist system.

(Continued)

WARNING!

- Always remain alert and be ready to take control of the vehicle in the event that the Active Driving Assist system deactivates, or otherwise lacks full functionality as described further before and after this statement.
- Always keep your eyes on the road and hands on the steering wheel when the Base Active Driving Assist system is activated.
- Always keep your eyes on the road when the Hands-Free Active Driving Assist system is activated.
- Maintain a safe distance from other vehicles and pay attention to traffic conditions.
- Do not use a hand held device when either Base, or Hands-Free Active Driving Assist system is engaged.
- Always pay attention to the road when the Hands-Free Active Driving Assist system is engaged. The Active Driving Assist system will not steer to avoid safety hazards, construction zones, objects, or road impediments. You need to take control to steer and brake the vehicle in such situations, and when merging into traffic, exiting the highway, making a turn for crossing traffic, or stopping for traffic control devices.
- Do not place any objects on the steering wheel (e.g. steering wheel covers) which could interfere with the hand detection sensors.

The Base Active Driving Assist system **DOES NOT**:

- Warn or prevent collisions with other vehicles
- Steer your vehicle around stopped vehicles, slower vehicles, construction zones or equipment, pedestrians, or animals
- Respond to traffic lights or stop signs
- Merge onto highways or exit off ramps
- Change lanes
- React to cross traffic

NOTE:

Adaptive Cruise Control (ACC) is a core component of ADA. For ACC system limitations ➞ page 189 .

The Active Driving Assist system may have limited or reduced functionality when one of the following conditions occur:

- The vehicle's radar sensors and/or forward facing camera is damaged, covered, misaligned, or obstructed (e.g. by mud, ice, snow, etc.)
- If the suspension alignment is not correct, if the vehicle is modified (e.g. lifting or lowering the suspension, installing different sized wheels or tires) or if there has been damage due to road hazards
- Driving near highway toll booths

NOTE:

If damage to the windshield occurs, have the windshield replaced by an authorized dealer as soon as possible.

PARKING AND REVERSE OPERATIONS ASSISTANCE SYSTEM

ParkView Rear Back Up Camera

The ParkView Rear Back Up Camera allows you to see an on-screen image of the rear surroundings of your vehicle whenever the gear selector is put into REVERSE. The image will be displayed in the touchscreen display along with a caution note to “Check Entire Surroundings” across the top of the screen. After five seconds this note will disappear. The ParkView camera is located on the rear of the vehicle in the center of the spare tire.

When the vehicle is shifted out of REVERSE with Camera delay turned off, the rear Camera mode is exited and the previous screen appears again.

When the vehicle is shifted out of REVERSE with Camera delay turned on, the rear Camera image will be displayed for up to 10 seconds unless the vehicle speed exceeds 8 mph (13 km/h), the vehicle is shifted into PARK, the Start button is placed in the OFF position, or the touchscreen X button to disable display of the Rear View Camera image is pressed.

Manual Activation Of The Rear View Camera

1. Press the Vehicle Mode button located on the bottom of the Uconnect display. Then, select the Controls tab.
2. Press the Back Up Camera button to turn the Rear View Camera system on.

NOTE:

- If the vehicle speed remains below 8 mph (13 km/h), the Rear View Camera image will be displayed continuously until deactivated via the touchscreen X button, the transmission is shifted into PARK, or the vehicle is turned OFF.
- The touchscreen X button to disable display of the camera image is made available ONLY when the vehicle is not in REVERSE.
- Whenever the Rear View Camera image is activated through the Back Up Camera button in the Controls menu, and the vehicle speed is greater than, or equal to, 8 mph (13 km/h), a display timer for the image is initiated. The image will continue to be displayed until the display timer exceeds 10 seconds.

When enabled, active guidelines are overlaid on the image to illustrate the width of the vehicle and its projected back up path based on the steering wheel position. A dashed center line overlay indicates the center of the vehicle to assist with parking or aligning to a hitch/receiver.

Different colored zones indicate the distance to the rear of the vehicle.

The following table shows the approximate distances for each zone:

Zone	Distance To The Rear Of The Vehicle
Red	0 - 1 ft (0 - 30 cm)

Zone	Distance To The Rear Of The Vehicle
Yellow	1 ft - 6.5 ft (30 cm - 2 m)
Green	6.5 ft or greater (2 m or greater)

WARNING!

Drivers must be careful when backing up even when using the ParkView Rear Back Up Camera. Always check carefully behind your vehicle, and be sure to check for pedestrians, animals, other vehicles, obstructions, or blind spots before backing up. You are responsible for the safety of your surroundings and must continue to pay attention while backing up. Failure to do so can result in serious injury or death.

CAUTION!

- To avoid vehicle damage, ParkView should only be used as a parking aid. The ParkView camera is unable to view every obstacle or object in your drive path. You remain responsible at all times for parking safely while using the ParkView camera.
- To avoid vehicle damage, the vehicle must be driven slowly when using ParkView to be able to stop in time when an obstacle is seen. It is recommended that the driver look frequently over his/her shoulder when using ParkView.

NOTE:

If snow, ice, mud, or any foreign substance builds up on the camera lens, clean the lens, rinse with water, and dry with a soft cloth. Do not cover the lens.

Turn Signal Activated Blind Spot Assist — If Equipped

When enabled in the Uconnect system and a turn signal is activated, the corresponding side view mirror camera will display in the radio. The camera will continue to display as long as the turn signal is engaged. .

NOTE:

The Turn Signal Activated Blind Spot Assist can be enabled or disabled within the Uconnect settings. The Turn Signal Activated Blind Spot view will not time out unless the driver returns the turn signal stalk to the neutral position. The Blind Spot View can also be manually enabled from the Uconnect Surround View Camera Menu.

WARNING!

Blind Spot Assist is only an aid to help detect objects in the blind spot zones and may not provide alerts when changing lanes under all driving conditions. Even if your vehicle is equipped with the BSA system, always check your vehicle's mirrors, glance over your shoulder, and use turn signals before changing lanes. Failure to do so can result in serious injury or death.

TRAILCAM SYSTEM — IF EQUIPPED

Your vehicle may be equipped with a TrailCam that allows you to see an on-screen image of the front view

of your vehicle. The image will be displayed on the touchscreen display along with a caution note "Check Entire Surroundings" across the top of the screen.

When enabled, active dynamic tire lines are projected on the ground plane of the TrailCam view based on the steering wheel position.



Front View Camera

The TrailCam system has programmable settings that may be selected through the Uconnect system ➞ page 115.

Manual Activation Of The TrailCam

TrailCam view can be activated via these methods:

- Press the FWD Camera button on the controls screen within Vehicle Mode.
- Press the Forward Facing Camera button on the apps menu.
- Press the TrailCam button on the Off Road Pages.

When the vehicle is shifted out of REVERSE with Camera Delay turned off and TrailCam view is active,

the TrailCam mode is exited and the previous screen appears again.

When the vehicle is shifted out of REVERSE with Camera Delay turned on and the TrailCam view is active, the TrailCam image will be displayed for up to 10 seconds unless the vehicle speed exceeds 8 mph (13 km/h), the vehicle is shifted into PARK, the vehicle is placed in the OFF position, or the touchscreen X button to disable display of the TrailCam view is pressed.

Whenever the TrailCam image is activated through the Manual Activation Methods, and the vehicle speed is greater than or equal to 8 mph (13 km/h), a display timer for the image is initiated. The image will continue to be displayed until the display timer exceeds 10 seconds.

NOTE:

- If the vehicle speed remains below 8 mph (13 km/h), the TrailCam image will be displayed continuously until deactivated via the touchscreen X button, the vehicle is shifted into PARK, or the vehicle is turned OFF.
- The touchscreen X button to disable the display of the camera image is made available ONLY when the vehicle is not in REVERSE.

Cleaning The TrailCam

To clean the TrailCam camera, wash the front windshield. Washer fluid will stop when the button is released. In addition, if your vehicle is equipped with a rear washer system, when activated, washer fluid will also dispense to wash the TrailCam.

- The camera can be washed up to 20 seconds at a time while holding the button.
- The Clean Camera system is not available when windshield washing is in process.

SURROUND VIEW CAMERA SYSTEM

Your vehicle may be equipped with the Surround View Camera system that allows you to see an on-screen image of the surroundings and Top View of your vehicle whenever the gear selector is put into REVERSE or a different view is selected through the touchscreen buttons. The Top View of the vehicle will show which doors are open. The image will be displayed on the touchscreen display along with a caution note "Check Entire Surroundings" across the top of the screen. After five seconds, this note will disappear. The Surround View Camera system is comprised of four sequential cameras located in the front grille, rear swing gate and side mirrors.

NOTE:

The Surround View Camera system has programmable settings that may be selected through the Uconnect system → page 115.



Press this button on the touchscreen to enter the Surround View Camera menu in the Uconnect system.

When the vehicle is shifted into REVERSE, the Top View and Rear View is the default view of the system.

When the vehicle is shifted out of REVERSE with camera delay turned on, the camera image will continue to be displayed for up to 10 seconds unless the vehicle speed exceeds 8 mph (13 km/h), the vehicle is shifted into PARK or the vehicle is OFF. There

is a touchscreen X button to disable the display of the camera image.

When the vehicle is shifted out of REVERSE with camera delay turned off, the Surround View Camera mode is exited and the last known screen appears again.

When enabled, active guidelines are overlaid on the image to illustrate the width of the vehicle, including the side view mirrors and its projected back up path based on the steering wheel position.

Different colored zones indicate the distance to the rear of the vehicle.

The following table shows the approximate distances for each zone:

Zone	Distance To The Rear Of The Vehicle
Red	0 - 1 ft (0 - 30 cm)
Yellow	1 ft - 6.5 ft (30 cm - 2 m)
Green	6.5 ft or greater (2 m or greater)

Modes Of Operation

Manual activation of the Surround View Camera is selected by pressing the Surround View Camera button located in the Controls menu within the Uconnect system.

Top View

The Top View will show in the Uconnect system with Rear View or Front View in a split screen display. There is integrated ParkSense arcs in the image at the front, rear, and if equipped, the sides of the vehicle. The arcs will change color from yellow to red corresponding to the distance zones to the oncoming object.

NOTE:

- Front tires will be in image when the tires are turned.
- Due to wide angle cameras in the mirrors, the image may appear distorted.
- Top View will show which doors are open.
- Open front doors and/or swing gate will cancel outside image.

Top View Plus Front View



The Front View will show you what is immediately in front of the vehicle and is always paired with the Top View of the vehicle.

Top View Plus Rear View



This is the default view of the system in REVERSE and is always paired with the Top View of the vehicle with optional active guidelines for the projected path when enabled.

Front Cross Path View

Pressing the Front Cross Path View button will give the driver a wider angle view of the front camera system. The Top View will be disabled when this is selected.

Rear Cross Path View

The Rear Cross Path button will give the driver a wider angle view of the rear camera system. The Top View will be disabled when this is selected.

Rear View Camera

The Rear View Camera button will provide a full screen rear view with Zoom View.

Driver Curb View

Pressing the Driver Curb View Camera button will give the driver an image which shows the front driver side tire position with respect to the pavement. This aids the driver in parking scenarios where they need to park close to a curb, parking lane or any other object/boundary without touching the tire to it. The view will time out after 10 seconds or when the vehicle reaches a speed of 8 mph or greater.

Passenger Curb View

Pressing the Passenger Curb View Camera button will give the driver an image which shows the front passenger side tire position with respect to the pavement.

This aids the driver in parking scenarios where they need to park close to a curb, parking lane or any other object/boundary without touching the tire to it. The view will time out after 10 seconds or when the vehicle reaches a speed of 8 mph or greater.

Driver Blind Spot

Pressing the Driver Blind Spot button will give the driver a side-facing image which shows the driver's blind spot covering a distance of three driving lanes from the side of the vehicle.

Passenger Blind Spot

Pressing the Passenger Blind Spot button will give the driver a side-facing image which shows the driver's blind spot covering a distance of three driving lanes from the side of the vehicle.

Forward Facing Camera

Pressing the Forward Facing Camera View button will give the driver a forward-facing image with active dynamic tire lines projected on the ground.

NOTE:

If the Rear View Camera view was selected through the Surround View Camera menu, exiting out of the Rear

View screen will return to the Surround View Camera menu. If the Back Up Camera was manually activated through the Controls menu of the Uconnect system, exiting out of the display screen will return to the Controls menu.

Deactivation

The system can be deactivated under the following conditions:

- The speed of the vehicle is greater than 8 mph (13 km/h).
- The vehicle is shifted into PARK.
- The vehicle is in any gear other than REVERSE and the touchscreen X button is pressed.
- The camera delay system is turned off manually through Uconnect Settings ➞ page 115.

Camera Washers

When the rear window washer is activated, the rear Back Up and digital rearview mirror (if equipped) cameras are also washed ➞ page 74.

When the front window washer is activated, the front cameras will also be washed ➞ page 74.

NOTE:

- If snow, ice, mud, or any foreign substance builds up on the camera lenses, clean the lenses, rinse with water, and dry with a soft cloth. Do not cover the lenses.
- If a malfunction with the system has occurred, see an authorized dealer.

WARNING!

Drivers must be careful when backing up even when using the Surround View Camera. Always check carefully behind your vehicle, and be sure to check for pedestrians, animals, other vehicles, obstructions, or blind spots before backing up. You are responsible for the safety of your surroundings and must continue to pay attention while backing up. Failure to do so can result in serious injury or death.

CAUTION!

- To avoid vehicle damage, Surround View should only be used as a parking aid. The Surround View camera is unable to view every obstacle or object in your drive path.
- To avoid vehicle damage, the vehicle must be driven slowly when using Surround View to be able to stop in time when an obstacle is seen. It is recommended that the driver look frequently over his/her shoulder when using Surround View.

Zoom View

When the Rear View Camera image is being displayed, and the vehicle speed is below 8 mph (13 km/h) while in any gear selector position, Zoom View is available.



By pressing the “magnifying glass” icon in the upper left of the display screen, the image will zoom in to two times the standard view.



Pressing the icon a second time will return the view to the standard Back Up Camera display.

When Zoom View is selected while the vehicle is in REVERSE, then shifted to DRIVE, the camera delay view will display the standard Back Up Camera view. If the vehicle is then returned to REVERSE gear from DRIVE, the Zoom View selection will automatically resume.

Shifting to NEUTRAL from any gear will maintain the selected view (Zoom or Standard) as long as the vehicle is below 8 mph (13 km/h).

If the vehicle is in PARK, Zoom View is available until the gear selector is placed in DRIVE or REVERSE and speeds are at or above 8 mph (13 km/h).

NOTE:

- If the vehicle is in DRIVE, NEUTRAL, or REVERSE, and speed is greater than or equal to 8 mph (13 km/h), Zoom View is unavailable and the icon will appear gray.
- While in Zoom View, the guidelines will not be visible.

PARKSENSE FRONT/REAR PARK ASSIST SYSTEM W/STOP

The ParkSense Park Assist system provides visual and audible indications of the distance between the rear and the front fascia/bumper and a detected obstacle when backing up or moving forward (e.g. during a parking maneuver). The vehicle brakes may be automatically applied and released when performing a reverse parking maneuver if the system detects a possible collision with an obstacle.

NOTE:

- The driver can disable the automatic braking function by turning ParkSense off via the ParkSense switch. The driver can also override automatic braking by changing the gear or by pressing the accelerator over 90% of its capacity during the braking event.
- Automatic brakes will not be available if there is a faulted condition detected with the ParkSense Park Assist system or the Braking System Module.
- The automatic braking function may only be applied if the vehicle deceleration is not enough to avoid colliding with a detected obstacle.
- The automatic braking function may not be applied fast enough for obstacles that move toward the rear of the vehicle from the left and/or right sides.
- The automatic braking function can be enabled/disabled from the Customer Programmable Features section of the Uconnect system.
- ParkSense will retain its last known configuration state for the automatic braking function through key cycles.
- Automatic brakes will not be available if the park assist system is manually turned off.

The automatic braking function is intended to assist the driver in avoiding possible collisions with detected obstacles when backing up in REVERSE gear.

NOTE:

- The system is designed to assist the driver and not to substitute the driver.
- The driver must stay in full control of the vehicle's acceleration and braking and is responsible for the vehicle's movements.

For limitations of this system and recommendations, see ➞ page 183.

ParkSense will retain the last system state (enabled or disabled) from the last key cycle when the start button is changed to the ON/RUN position.

ParkSense can be active only when the gear selector is in REVERSE or DRIVE. If ParkSense is enabled at one of these gear selector positions, the system will remain active until the vehicle speed is increased to approximately 7 mph (11 km/h) or above. The system will become active again if the vehicle speed is decreased to less than approximately 6 mph (9 km/h). A display warning will appear in the instrument cluster display if the vehicle is in REVERSE and the speed exceeds 7 mph (11 km/h).

ParkSense Sensors

There are 12 Parksense sensors on the vehicle, 6 are located in the front and 6 in the rear fascia/

bumper. They are responsible for monitoring the area on the front and the rear respectively. If vehicle is not equipped with the Surround View Camera System, it will consist of 4 Parksense sensors providing warnings in the rear only.. The front sensors detect obstacles from approximately 12 inches (30 cm) up to 47 inches (120 cm) from the front fascia/bumper. The rear sensors can detect obstacles from approximately 12 inches (30 cm) up to 71 inches (180 cm) from the rear fascia/bumper. These distances depend on the location, type and orientation of the obstacle in the horizontal direction.

When an object is detected within 71 inches (180 cm) behind the rear bumper while the vehicle is in REVERSE, a warning will appear in the instrument cluster display.


ParkSense Display

The warning display will turn on in the cluster, indicating the system status when the vehicle is in REVERSE or

when the vehicle is in DRIVE and an obstacle has been detected.

The system will indicate a detected obstacle by showing relevant arcs in the left and/or right front or rear regions based on the object's distance and location relative to the vehicle.

If an object is detected in the left and/or right rear region, the display will show a single arc in the left and/or right rear region. As the vehicle moves closer to the object, the display will show the single arc moving closer to the vehicle and the tone will change from a single 1/2 second tone to slow, to fast, to continuous. If the detected object is in the vehicle driving path, an audible alert will also be given according to the following chime table:

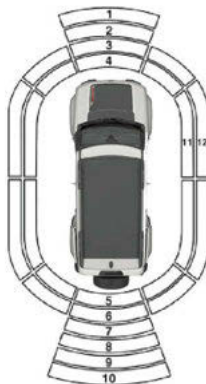

SB0601000479

Front/Rear/Side ParkSense Arcs

- 1 – No Tone/Solid Arc
- 2 – No Tone/Flashing Arc
- 3 – Fast Tone/Flashing Arc
- 4 – Continuous Tone/Flashing Arc
- 5 – Continuous Tone/Flashing Arc
- 6 – Fast Tone/Flashing Arc

- 7 – Fast Tone/Flashing Arc
- 8 – Slow Tone/Solid Arc
- 9 – Slow Tone/Solid Arc
- 10 – Single 1/2 Second Tone/Solid Arc
- 11 – Continuous Tone/Flashing Arcs
- 12 – Fast Tone/Flashing Arcs

The vehicle is close to the obstacle when the instrument cluster display shows one flashing arc and sounds a continuous tone. The following chart shows the warning alert operation when the system is detecting an obstacle:

WARNING ALERTS FOR REAR							
Rear Distance (in/cm)	> 71 in. (180 cm)	71-59 in. (180-150 cm)	59-47 in. (150-120 cm)	47-35 in. (120-90 cm)	35-24 in. (90-60 cm)	24-12 in. (60-30 cm)	< 12 in. (30 cm)
Audible Alert Chime	None	Single ½-Second Tone	Slow	Slow	Fast	Fast	Continuous
Arcs-Left	None	None	None	None	None	6th Flashing	5th Flashing
Arcs-Center	None	10th Solid	9th Solid	8th Solid	7th Flashing	6th Flashing	5th Flashing
Arcs-Right	None	None	None	None	None	6th Flashing	5th Flashing
Radio Volume Reduced	No	Yes	Yes	Yes	Yes	Yes	Yes

WARNING ALERTS FOR FRONT					
Front Distance (in/cm)	> 47 in. (120 cm)	47-35 in. (120-90 cm)	35-24 in. (90-60 cm)	24-12 in. (60-30 cm)	< 12 in. (30 cm)
Audible Alert Chime	None	None	None	Fast	Continuous
Arcs-Left	None	None	None	3rd Flashing	4th Flashing
Arcs-Center	None	1st Solid	2nd Flashing	3rd Flashing	4th Flashing
Arcs-Right	None	None	None	3rd Flashing	4th Flashing
Radio Volume Reduced	No	No	No	Yes	Yes

NOTE:

ParkSense will reduce the volume of the radio, if on, when the system is sounding an audio tone.

ParkSense Camera Activation

If the ParkSense system detects an obstacle, a camera image will display in the radio. The camera will continue to display as long as the ParkSense system continues to detect an object. This can be turned on or off in the Uconnect system ➞ page 115.

Front Park Assist Audible Alerts

ParkSense will turn off the Front Park Assist audible alert (chime) after approximately three seconds when an obstacle has been detected in the vehicle's path of travel, and the vehicle is stationary. If the vehicle's path of travel is changed such that the object is outside of the path, and then is brought back into the path, the three second chime will be restarted.

Adjustable Chime Volume Settings

Chime volume settings can be selected from the Uconnect system ➞ page 115.

The chime volume settings include low, medium, and high.

ParkSense will retain its last known configuration state through key cycles.

ParkSense Warning Display

The ParkSense Warning screen is located within the instrument cluster display ➞ page 96. It provides visual warnings to indicate the distance between the rear fascia/bumper and/or front fascia/bumper and the detected obstacle.

Enabling And Disabling ParkSense



ParkSense can be enabled and disabled with the ParkSense switch located on the switch panel below the Uconnect display.

When the ParkSense switch is pushed to enable the system, the instrument cluster will display the system state.

When the ParkSense switch is pushed to disable the system, the instrument cluster will display the "PARKSENSE OFF" message for approximately two seconds. When the gear selector is moved to REVERSE and the system is disabled, the instrument cluster display will display the "PARKSENSE OFF" message for as long as the vehicle is in REVERSE.

NOTE:

When ParkSense is disabled and the gear selector is moved to the DRIVE position, no warning message will be displayed.

The ParkSense switch LED will be on when ParkSense is disabled or requires service. The ParkSense switch LED will be off when the system is enabled. If the ParkSense switch is pushed, and the system requires service, the ParkSense switch LED will blink momentarily, and then the LED will be on.

Service The ParkSense Park Assist System

During vehicle start-up, when the ParkSense System has detected a faulted condition, the instrument cluster will actuate a single chime, once per key cycle, and it will display a pop-up. The pop-up will include up to two faults. Possible fault messages

are "ParkSense Unavailable Wipe Rear Sensors", "ParkSense Unavailable Wipe Front Sensors", or "ParkSense Unavailable Service Required." The pop-up message will display for five seconds.

When the gear selector is moved to REVERSE and the system has detected a faulted condition, the instrument cluster display will display a "ParkSense Unavailable Wipe Rear Sensors", "ParkSense Unavailable Wipe Front Sensors" or "ParkSense Unavailable Service Required" pop-up message for five seconds. After five seconds, a vehicle graphic will be displayed with "Service Wipe Off" at either the front or rear sensor location depending on where the fault is detected. The system will continue to provide arc alerts for the side that is functioning properly. These arc alerts will interrupt the "ParkSense Unavailable Wipe Rear Sensors", "ParkSense Unavailable Wipe Front Sensors", or "ParkSense Unavailable Service Required" messages if an object is detected within the five second pop-up duration. The vehicle graphic will remain displayed for as long as the vehicle is in REVERSE.

If "ParkSense Unavailable Wipe Rear Sensors" or "ParkSense Unavailable Wipe Front Sensors" appears in the instrument cluster display make sure the outer surface and the underside of the rear fascia/bumper and/or front fascia/bumper is clean and clear of snow, ice, mud, dirt or other obstructions and then cycle the start button. If the message continues to appear, see an authorized dealer.

If the "ParkSense Unavailable Service Required" message appears in the instrument cluster display, see an authorized dealer.

Cleaning The ParkSense System

Clean the ParkSense sensors with water, car wash soap and a soft cloth. Do not use rough or hard cloths. Do not scratch or poke the sensors.

ParkSense System Usage Precautions

NOTE:

- Ensure that the front and rear fascias/bumpers are free of snow, ice, mud, dirt and debris to keep the ParkSense system operating properly.
- Jackhammers, large trucks, carwash and other vibrations could affect the performance of ParkSense.
- When you turn ParkSense off, the instrument cluster will display "Parksense Off." Furthermore, once you turn ParkSense off, it remains off until you turn it on again, even if you cycle the start button.
- When you move the gear selector to the REVERSE position and ParkSense is turned off, the instrument cluster will display "Parksense Off" for as long as the vehicle is in REVERSE.
- ParkSense, when on, will reduce the volume of the radio when it is sounding a tone.
- Clean the ParkSense sensors regularly, taking care not to scratch or damage them. The sensors must not be covered with ice, snow, slush, mud, dirt or debris. Failure to do so can result in the system not working properly. The ParkSense system might not detect an obstacle behind or in front of the fascia/bumper, or it could provide a false indication that an obstacle is behind or in front of the fascia/bumper.
- Use the ParkSense switch to turn the ParkSense system off if objects such as bicycle carriers, trailer

hitches, etc. are placed within 12 inches (30 cm) of the rear fascia/bumper. Failure to do so can result in the system misinterpreting a close object as a sensor problem, causing the "Parksense Unavailable Service Required" message to be displayed in the instrument cluster.

- ParkSense should be disabled when the tailgate is in the open position. An opened tailgate could provide a false indication that an obstacle is behind the vehicle

WARNING!

- Drivers must be careful when backing up even when using ParkSense. Always check carefully behind your vehicle, look behind you, and be sure to check for pedestrians, animals, other vehicles, obstructions, and blind spots before backing up. You are responsible for safety and must continue to pay attention to your surroundings. Failure to do so can result in serious injury or death.
- Before using ParkSense, it is strongly recommended that the ball mount and hitch ball assembly be disconnected from the vehicle when the vehicle is not used for towing. Failure to do so can result in injury or damage to vehicles or obstacles because the hitch ball will be much closer to the obstacle than the rear fascia/bumper when the vehicle sounds the continuous tone. Also, the sensors could detect the ball mount and hitch ball assembly, depending on its size and shape, giving a false indication that an obstacle is behind the vehicle.

CAUTION!

- ParkSense is only a parking aid and it is unable to recognize every obstacle, including small obstacles. Parking curbs might be temporarily detected or not detected at all. Obstacles located above or below the sensors will not be detected when they are in close proximity.
- The vehicle must be driven slowly when using ParkSense in order to be able to stop in time when an obstacle is detected. It is recommended that the driver looks over his/her shoulder when using ParkSense.

Side Distance Warning System — If Equipped

The Side Distance Warning system detects the presence of side obstacles near the vehicle using the parking sensors located in the front and rear fascias/bumpers if an object comes in the way of the vehicle's trajectory/path of collision.

SIDE DISTANCE WARNING DISPLAY

The system warns the driver with an acoustic signal and with visual indications on the instrument cluster display.

NOTE:

The Side Distance Warning volume/chime will match the ParkSense volume and chime type.

WARNING ALERTS		
Distance (inches/cm)	Less than 12 inches (30 cm)	12 – 24 inches (30 – 60 cm)
Arcs-Left	11th Flashing	12th Flashing
Arcs-Right	11th Flashing	12th Flashing
Audible Alert Chime	Continuous	Fast audible chime as the objects get close to the vehicle
Radio Volume Reduced	Yes	Yes

NOTE:

- ParkSense will reduce the volume of the radio if on when the system is sounding an audible tone. An audible tone will only sound if a collision is possible.
- The system will provide an audible warning only when the vehicle is on course for a collision. If an object on the side is not going to impact the vehicle, visual alerts will be seen on the cluster but the chimes will be suppressed.

ACTIVATION/DEACTIVATION

The system can operate only after driving a short distance and if the vehicle speed is between 0 and 7 mph (0 and 11 km/h). The system can be activated/deactivated via the ParkSense Active Park Assist

switch. If the ParkSense System is deactivated via the ParkSense hard switch then the Side Distance Warning system will automatically be deactivated.

Message on the display for Side Distance Warning feature:

“Wipe Sensors” — This message is displayed in the case of a failure of the Side Distance Warning system sensors. Free the bumpers of any obstacles, ensure that the front and rear fascia/bumper are free of snow, ice, mud, dirt and debris to keep the ParkSense system operating properly.

“System Not Available” — This message is displayed if the Side Distance Warning system is not available. The failed operation of the system might be due to the insufficient voltage from the battery or other failures on the electrical system. Contact an authorized dealer as soon as possible to have the electrical system checked.

SIDE DISTANCE WARNING USAGE PRECAUTIONS

Some conditions may influence the performance of the Side Distance Warning system:

NOTE:

- Ensure that the front and rear fascia/bumper are free of snow, ice, mud, dirt and debris to keep the ParkSense system operating properly.
- Construction equipment, large trucks, car wash and other vibrations could affect the performance of ParkSense.
- When you turn ParkSense off, the message to appear in the instrument cluster display will read “PARKSENSE OFF.” Furthermore, once you turn

ParkSense off, it remains off until you turn it on again, even if you cycle the start button.

- ParkSense, when on, will reduce the volume of the radio when it is sounding a tone.
- Clean the ParkSense sensors regularly, taking care not to scratch or damage them. The sensors must not be covered with ice, snow, slush, mud, dirt or debris. Failure to do so can result in the system not working properly. The ParkSense system might not detect an obstacle behind or in front of the fascia/bumper, or it could provide a false indication that an obstacle is behind or in front of the fascia/bumper.
- The presence of a hitch ball without a trailer may interfere with the correct operation of the parking sensors. Before using the ParkSense system, it is recommended to remove the hitch ball assembly and any attachments from the vehicle when it is not used for towing.
- Side distance warning uses the four lateral side sensors to detect obstacles as the vehicle passes them. Once the object is on the side of the vehicle, its location is inferred based on its last known location relative to the vehicles current location. If an object is moved away from the vehicle after it has been placed in a side warning zone, the system will continue to alert for said object until the front/rear lateral sensors can confirm the object has departed.

WARNING!
● Drivers must be careful when backing up even when using ParkSense. Always check carefully behind your vehicle, look behind you, and be sure

(Continued)

WARNING!

to check for pedestrians, animals, other vehicles, obstructions, and blind spots before backing up. You are responsible for safety and must continue to pay attention to your surroundings. Failure to do so can result in serious injury or death.

- Before using ParkSense, it is strongly recommended that the ball mount and hitch ball assembly be disconnected from the vehicle when the vehicle is not used for towing. Failure to do so can result in injury or damage to vehicles or obstacles because the hitch ball will be much closer to the obstacle than the rear fascia/bumper when the vehicle sounds the continuous tone. Also, the sensors could detect the ball mount and hitch ball assembly, depending on its size and shape, giving a false indication that an obstacle is behind the vehicle.

CAUTION!

- ParkSense is only a parking aid and it is unable to recognize every obstacle, including small obstacles. Parking curbs might be temporarily detected or not detected at all. Obstacles located above or below the sensors will not be detected when they are in close proximity.
- The vehicle must be driven slowly when using ParkSense in order to be able to stop in time when an obstacle is detected. It is recommended that the driver looks over his/her shoulder when using ParkSense.

ParkSense Active Park Assist System — If Equipped

The ParkSense Active Park Assist system is intended to assist the driver during parallel and perpendicular parking maneuvers. The system works by identifying a proper parking space, providing audible/visual instructions, and controlling the steering wheel only, or the accelerator, gear selector, brakes, and the steering wheel. Depending on the driver's parking maneuver selection, the ParkSense Active Park Assist system is capable of maneuvering a vehicle into a parallel or a perpendicular parking space on either side (i.e., driver side or passenger side).

ParkSense Automated Parking

The automated system detects a vacant parking spot between two consecutive parking lines, two parked vehicles, or one line and one vehicle, and controls the accelerator, gear selector, brakes, and steering wheel. The system also provides obstacle detection by providing visual and audible warnings and automatic braking to avoid a collision. Press the brake pedal during the maneuver to pause parking. The system will resume maneuvering into the space once the brake pedal is released.

NOTE:

- The driver is always responsible for controlling the vehicle, responsible for any surrounding objects, and must intervene as required.
- The system is designed to assist the driver and not to substitute the driver.
- During an automated maneuver, if the driver touches the steering wheel after being instructed to remove

their hands from the steering wheel, the system will cancel, and the driver will be required to manually complete the parking maneuver.

- The system may not work in all conditions (e.g. environmental conditions such as heavy rain, snow, etc., or if searching for a parking space that has surfaces that will absorb the ultrasonic sensor waves).
- New vehicles from an authorized dealership must have at least 30 miles (48 km) accumulated before the ParkSense Active Park Assist system is fully calibrated and performs accurately. This is due to the system's dynamic vehicle calibration to improve the performance of the feature. The system will also continuously perform the dynamic vehicle calibration to account for differences such as over or under inflated tires and new tires.
- If the vehicle cameras are blinded or obstructed, line detection and line parking performance may be degraded or not work at all. If the vehicle doors are removed, the line detection capabilities will not work anymore (since the cameras are off the car). Vehicle-only spot detection remains functional.

Enabling And Disabling The ParkSense Active Park Assist System



The ParkSense Active Park Assist system can be enabled and disabled with the ParkSense Active Park Assist switch, located on the switch panel below the

Uconnect display.

To enable the ParkSense Active Park Assist system, push the ParkSense Active Park Assist switch once

(LED turns on). Pushing the switch a second time will disable the system (LED turns off).

The ParkSense Active Park Assist system will turn off automatically for any of the following conditions:

- Parking maneuver is completed
- Vehicle speed is greater than 28 mph (45 km/h) when searching for a parking space during an automated maneuver
- Vehicle speed is greater than 5 mph (7 km/h) active steering guidance into the parking space
- Steering wheel is touched during active steering guidance into the parking space
- ParkSense Front and Rear Park Assist switch is pushed
- Any of the doors are opened during an automated maneuver
- Swing gate is opened
- A trailer is connected
- Cruise Control, Adaptive Cruise Control, or Active Driving Assist systems are engaged
- Electronic Stability Control/Anti-Lock Braking System intervention

The ParkSense Active Park Assist system allows a maximum number of shifts between DRIVE and REVERSE. If the maneuver cannot be completed within the maximum amount of shifts, the system will cancel and the instrument cluster display will instruct the driver to complete the maneuver manually.

The ParkSense Active Park Assist system will only operate and search for a parking space when the following conditions are present:

- Gear selector is in DRIVE
- Start button is in the RUN position
- ParkSense Active Park Assist switch is activated
- All of the doors are closed
- Tailgate is closed
- Vehicle speed is less than 25 mph (40 km/h) during an automated maneuver
- The outer surface and the underside of the front and rear fascias/bumpers are clean and clear of snow, ice, mud, dirt or other obstructions.

NOTE:

During the automated parking seeking phase, if the vehicle is driven above approximately 25 mph (40 km/h), the instrument cluster display will instruct the driver to slow down. If the vehicle is driven above approximately 28 mph (45 km/h), the system will cancel. The driver must then reactivate the system by pushing the ParkSense Active Park Assist switch.

When pushed, the LED on the ParkSense Active Park Assist switch will illuminate and remain illuminated until turned off or the parking procedure is completed. If the system is faulted or unavailable, when the button is pressed, the LED on the ParkSense Active Park Assist switch will blink momentarily.

When the ParkSense Active Park Assist system is enabled, you can select between Park or Exit in the Uconnect system. From there, you can select a parallel or perpendicular maneuver.

ParkSense Automatic Park Assist

PARALLEL/PERPENDICULAR PARKING SPACE ASSISTANCE OPERATION

When the ParkSense Active Park Assist system is enabled, the driver must press "Park" on the Uconnect display. The system will begin searching for valid parallel and perpendicular parking spaces on either side of the vehicle.

NOTE:

- The driver needs to make sure that the selected parking space for the maneuver remains free and clear of any obstructions (e.g. pedestrians, bicycles, etc.).
- The driver is responsible to ensure that the selected parking space is suitable for the maneuver and free/clear of anything that may be overhanging or protruding into the parking space (e.g., ladders, tailgates, etc. from surrounding objects/vehicles).
- When searching for a parking space, the driver should drive as parallel or perpendicular (depending on the type of maneuver) to other vehicles as possible.
- While the vehicle is in DRIVE, there will be a full screen image in the Uconnect display. If the driver shifts to REVERSE while searching for a parking space, a camera image will appear in the Uconnect display with a "Shift To Drive" message.

Both types of valid spaces (parallel and perpendicular) will be displayed in the Uconnect display as they are found. The available spaces will update in real time.

The automated system will detect a vacant parking spot between two consecutive parking lines, two parked vehicles, or between one parking line and one vehicle.

When valid parking spaces have been found, the driver will be prompted to stop the vehicle.



Select A Space

The driver can then select a parking space by pressing the desired space on the Uconnect display.

NOTE:

If a space selection is attempted before the vehicle is stopped, a warning screen will appear in the Uconnect display with instructions to stop the vehicle to make a selection.

If the driver selects a perpendicular parking space, the system will prompt the driver to choose a Forward or Reverse parking method.



Choose Perpendicular Parking Method

NOTE:

You can press the "Back" button on the display to return to the parking space selection screen and select a different space.

Once the parallel or perpendicular parking maneuver selection has been made, a message will appear in the display with instructions to press the brake pedal and hold down the Active Park Assist switch. This conditions must be met in order to begin the parking maneuver. The message also instructs the driver to hold the Active Park Assist switch down for the entire maneuver.

The system will then instruct the driver to remove hands from the steering wheel and feet from the pedals. This screen will be shown for a minimum of two seconds, or until the driver releases the brake pedal.

When the parking sequence is initiated by the driver after the previously described conditions are met, the Uconnect system will display a Top View along with either a rear camera view (if the vehicle is placed in REVERSE) or a forward camera view (if the vehicle is placed in DRIVE).

The Top View will have integrated ParkSense arcs in the image at the front and rear of the vehicle. The arcs will change color from yellow to red corresponding the distance zones to the oncoming object.

The system will then perform the parking maneuver. Once the maneuver is complete, the vehicle will automatically shift into PARK.

The system will display a "Complete!" message and instruct the driver to release the Active Park Assist switch.

Once the Active Park Assist switch is released, a chime will sound and the LED on the switch will turn off. After approximately five seconds, the previous Uconnect screen will display.

NOTE:

- It is the driver's responsibility to use the brake and stop the vehicle. The driver should check their surroundings and be prepared to stop the vehicle either when instructed to, or when driver intervention is required.
- When the system instructs the driver to remove their hands from the steering wheel, the driver should check their surroundings and begin to back up slowly.
- The system will cancel the maneuver if the vehicle speed exceeds 4 mph (7 km/h) during operation into the parking space. The driver is then responsible for completing the maneuver if the system is canceled.
- If the system is canceled during the maneuver for any reason, the driver must take control of the vehicle.

WARNING!

- Drivers must be careful when performing parallel or perpendicular parking maneuvers even when using the ParkSense Active Park Assist system. Always check carefully behind and in front of your vehicle, look behind and in front of you, and be sure to check for pedestrians, animals, other vehicles, obstructions, and blind spots before backing up and moving forward. You are responsible for safety and must continue to pay attention to your surroundings. Failure to do so can result in serious injury or death.
- Before using the ParkSense Active Park Assist system, it is strongly recommended that the ball mount and hitch ball assembly be disconnected from the vehicle when the vehicle is not used for towing. Failure to do so can result in injury or damage to vehicles or obstacles because the hitch ball will be much closer to the obstacle than the rear fascia/bumper when the vehicle sounds the continuous tone. Also, the sensors could detect the ball mount and hitch ball assembly, depending on its size and shape, giving a false indication that an obstacle is behind the vehicle.

CAUTION!

- The ParkSense Active Park Assist system is only a parking aid and it is unable to recognize every obstacle, including small obstacles. Parking curbs might be temporarily detected or not detected at all. Obstacles located above or below the sensors

(Continued)

CAUTION!

- will not be detected when they are in close proximity.
- The vehicle must be driven slowly when using the ParkSense Active Park Assist system in order to be able to stop in time when an obstacle is detected. It is recommended that the driver looks over his/her shoulder when using the ParkSense Active Park Assist system.


EXITING A PARKING SPACE

Enable the ParkSense Active Park Assist system by pressing the ParkSense Active Park Assist switch. To initiate a parking space exit maneuver, the vehicle must be stopped, and the driver must press “Exit” on the Uconnect display.

NOTE:

If the system detects that it is unsafe to perform an exit maneuver on either side, such as when the vehicle is positioned too close to a curb or a wall, the exit side selection will be greyed out. If exit procedures are unavailable on both sides, the exit button will also be greyed out.

The exit method options for parallel parking are Forward Left and Forward Right.

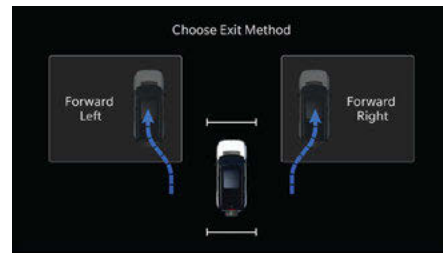

Choose Exit Method – Parallel Parking

NOTE:

If an exit method selection is attempted before the vehicle is stopped, the driver will be instructed to stop the vehicle to make a selection.

After the driver chooses a parallel exit side, a message appears in the Uconnect display with instructions to hold the brake pedal and hold down the Active Park Assist switch. Both of these conditions must be met before the maneuver can begin.

When the Active Park Assist switch is held down, the turn signal for the chosen exit side will turn on automatically.

The system will then instruct the driver to remove hands from the steering wheel and feet from the pedals. This screen will be shown for a minimum of two seconds, or until the driver releases the brake pedal.

When the exit sequence is initiated by the driver after the previously described conditions are met, the Uconnect system will display a Top View along with either a rear camera view (if the vehicle is placed in

REVERSE) or a forward camera view (if the vehicle is placed in DRIVE), and the exit maneuver will begin.

The Top View will have integrated ParkSense arcs in the image at the front and rear of the vehicle. The arcs will change color from yellow to red corresponding the distance zones to the oncoming object.

The automatic maneuver ends when the vehicle is clear of the parking space, and the display shows the message of a completed maneuver. The vehicle will be in DRIVE and held hydraulically by the brakes until the driver presses the accelerator pedal. The system gives vehicle control back to the driver.

Once the driver regains control of the vehicle, a chime will sound and the LED on the switch will turn off. After approximately five seconds, the previous Uconnect screen will display.

PARKING MANEUVER PAUSED/CANCELED

Certain conditions can pause or cancel a Fully Automated park or exit maneuver.

The ParkSense Automated Parking system can be paused due to the driver's finger being removed from the Active Park Assist switch, pressing the brake pedal, or an object being in the vehicle's path during a parking maneuver.

If one or more of these scenarios occur, automatic braking will bring the vehicle to a stop and hold the vehicle hydraulically by the brakes.

The driver will be instructed to hold the Active Park Assist switch to continue the park or exit maneuver. If the driver does not resume holding the switch down, the maneuver will cancel.

If the maneuver is paused due to an object in the vehicle's path, a message will appear in the Uconnect display. The maneuver will remain paused until the object is no longer in the vehicle's path.

The system can also be paused before the Active Park Assist switch is held down if the driver shifts into REVERSE.

The driver will be instructed to shift to DRIVE to continue the maneuver. If the vehicle is shifted into DRIVE, the process will continue on to the seek/maneuver selection phase.

INTERIOR CAMERA SYSTEM — IF EQUIPPED

The Interior Camera system consists of an interior monitoring camera mounted on the headliner that allows the driver to view cargo/passengers in the rear interior of the vehicle through the Uconnect screen.

To activate the feature, press the Interior Camera button in the Controls tab of the Vehicle menu. The Interior Camera feature can also be accessed from the App Drawer, or the status bar at the top of the Uconnect display.

The display will show the entire view inside the vehicle on the left side of the screen, and will show a zoomed-in view of the selected seat on the right side of the screen.

To change the seat shown in the zoomed-in view, press a different seat location on the left side of the display. The zoomed-in view will then show the new seat location. By default, the second row driver's side seat will be displayed in the zoomed-in view.

The display will appear in color in well lit conditions and will appear black and white in low light conditions.

If the driver shifts into REVERSE or presses the touchscreen X button, the view will close. Otherwise, the Interior Camera view will remain on the display.

NOTE:

When the Interior Camera is turned off, the selected seat in the zoomed-in view on the right side of the display will be retained. The next time the feature is activated, the same seat will be shown in the zoomed-in view.

DRIVER ATTENTION ASSISTANCE SYSTEM

DROWSY DRIVER DETECTION (DDD) — IF EQUIPPED



DDD detects when the driver is feeling fatigued and warns the driver to pull over and take a break.

To Activate/Deactivate

DDD can be activated and deactivated through the Uconnect system by selecting the following in order:

1. "Safety & Driving Assistance"
2. "Drowsy Driver Detection"

WARNING!

The DDD system is an aid for driving and does not relieve the driver of the responsibility of driving the vehicle. If you experience fatigue while driving, pull over safely for a break without waiting for the DDD to intervene. Only return to the road when you are in the right physical and mental condition to prevent endangering yourself and other drivers.

System Intervention

Using feedback obtained from the driver's steering patterns, any buttons/switches that are pressed, and from the front camera, the system implements two operating logics:

- The first operating logic takes the driving style into account, observing the road and detecting to what extent the driver can continue driving with few lane crossing events.
- The second operating logic measures the time spent behind the wheel with the vehicle speed above 40 mph (60 km/h) and below 100 mph (160 km/h).

If the driving style indicates that the driver is unable to follow the road trajectory and respect the horizontal lane markings while within the operating speed range of the system, a pop-up will display on the instrument cluster display suggesting the driver stop for a break. An audible signal will also sound.

If the driver **accepts** the suggestion provided by the system by pushing the "OK" button on the left side of the steering wheel, the message will disappear from the display.

If the driver **does not acknowledge** the warning will remain active, until the drivers pushes the "OK" button.

NOTE:

In the event of a DDD system failure, a dedicated message will appear in the instrument cluster display.

SPEED CONTROL ASSISTANCE SYSTEM

CRUISE CONTROL SYSTEM

Your vehicle is equipped with the Adaptive Cruise Control (ACC) system which will adjust the vehicle speed up to the preset speed to maintain a distance with the vehicle ahead.

Adaptive Cruise Control (ACC)

Adaptive Cruise Control (ACC) increases the driving convenience provided by Cruise Control while traveling on highways and major roadways. However, it is not a safety system and not designed to prevent collisions.

ACC will allow you to keep Cruise Control engaged in light to moderate traffic conditions without the constant need to reset your Cruise Control. ACC utilizes a radar sensor and a forward facing camera designed to detect a vehicle directly ahead of you.

NOTE:

- If the ACC sensor detects a vehicle ahead, ACC will apply limited braking or acceleration (not to exceed the original set speed) automatically to maintain a preset following distance, while matching the speed of the vehicle ahead.
- Any chassis/suspension or tire size modifications to the vehicle will affect the performance of

the Adaptive Cruise Control and Forward Collision Warning system.

WARNING!

- Adaptive Cruise Control (ACC) is a convenience system. It is not a substitute for active driver involvement. It is always the driver's responsibility to be attentive of road, traffic, and weather conditions, vehicle speed, distance to the vehicle ahead and, most importantly, brake operation to ensure safe operation of the vehicle under all road conditions. Your complete attention is always required while driving to maintain safe control of your vehicle. Failure to follow these warnings can result in a collision and death or serious personal injury.
- The ACC system:
 - Does not react to pedestrians, oncoming vehicles, and stationary objects (e.g., a stopped vehicle in a traffic jam or a disabled vehicle).
 - Cannot take street, traffic, and weather conditions into account, and may be limited upon adverse sight distance conditions.
 - Does not always fully recognize complex driving conditions, which can result in wrong or missing distance warnings.
 - Will bring the vehicle to a complete stop and hold the vehicle in the stop position for approximately 10 minutes when following a vehicle ahead. If the vehicle ahead does not start moving within 10 minutes, the parking

(Continued)

WARNING!

brake will be activated, and the ACC system will be canceled.

You should switch off the ACC system:

- When driving in fog, heavy rain, heavy snow, sleet, heavy traffic, and complex driving situations (i.e., in highway construction zones).
- When entering a turn lane or highway off-ramp; when driving on roads that are winding, icy, snow-covered, slippery, or have steep uphill or downhill slopes.
- When towing a trailer up or down steep slopes.
- When circumstances do not allow safe driving at a constant speed.

ADAPTIVE CRUISE CONTROL (ACC) OPERATION

The buttons on the right side of the steering wheel operate the ACC system.



Adaptive Cruise Control Buttons

- 1 — Distance Setting Increase
- 2 — Adaptive Cruise Control (ACC) On/Off
- 3 — CANCEL/Cancel
- 4 — Distance Setting Decrease
- 5 — SET (+)/Accel
- 6 — RES/Resume
- 7 — Advanced Driving Assist (ADA) Button
- 8 — SET (-)/Decel

ADAPTIVE CRUISE CONTROL (ACC) MENU

The instrument cluster display will show the current system settings for Adaptive Cruise Control (ACC), Active Lane Management (ALM), and the Active Driving Assist (ADA) systems. The information it displays depends on ACC, ALM, and ADA system statuses.

Pushing the Adaptive Cruise Control (ACC) buttons will display one of the following messages in the instrument cluster display:

Adaptive Cruise Control Ready

When ACC is activated but the vehicle speed setting has not been selected, the display will read "Adaptive Cruise Control Ready."

Adaptive Cruise Control Set

When the SET (+) or the SET (-) button is pushed, the display will read "ACC: XX mph (km/h)".

When ACC is set, the set speed will show in the instrument cluster display.

The ACC screen may display once again if any of the following ACC activity occurs:

- System Cancel
- Driver Override
- System Off
- ACC Proximity Warning
- ACC Unavailable Warning

Adaptive Cruise Control Off

When ACC is deactivated, the display will read "Adaptive Cruise Control Off".

The instrument cluster display will return to the last display selected after five seconds of no ACC display activity.

ACTIVATING ADAPTIVE CRUISE CONTROL (ACC)

The minimum set speed for the ACC system is 20 mph (32 km/h).

The maximum set speed is 100 mph (160 km/h).

When the system is turned on and in the ready state, the instrument cluster displays "ACC Ready."

When the system is off, the instrument cluster display will read "Adaptive Cruise Control (ACC) Off."

NOTE:

You cannot engage ACC under the following conditions:

- When the brakes are applied
- When the parking brake is applied
- When the gear box is in PARK, REVERSE or NEUTRAL
- When the vehicle speed is below the minimum speed range
- When the brakes are overheated
- When the driver's door is open at low speeds
- When the driver's seat belt is unbuckled at low speeds
- When there is a stationary vehicle in front of your vehicle in close proximity

TO ACTIVATE/DEACTIVATE

Push and release the Adaptive Cruise Control (ACC) on/off button. The ACC menu in the instrument cluster displays "ACC Ready."

To turn the system off, push and release the Adaptive Cruise Control (ACC) on/off button again. At this time,

the system will turn off and the instrument cluster displays "Adaptive Cruise Control (ACC) Off."

WARNING!

Leaving the Adaptive Cruise Control (ACC) system on when not in use is dangerous. You could accidentally set the system or cause it to go faster than you want. You could lose control and have a collision. Always leave the system off when you are not using it.

TO SET A DESIRED SPEED

When the vehicle reaches the speed desired, push the SET (+) button or the SET (-) button and release. The instrument cluster display will show the set speed.

While the accelerator pedal is pressed: a dedicated graphic with the symbol flashing will appear on the display for a few seconds; the system will not be able to control the distance between the car and the vehicle ahead. In this case the speed will be determined only by the position of the accelerator pedal.

TO CANCEL

NOTE:

Pressing the Cancel button will disengage the ACC system. It will not turn the ACC system off entirely. Press the Resume button will re-engage ACC.

The following conditions cancel the ACC or Fixed Speed Cruise Control systems:

- The brake pedal is applied
- The CANC (cancel) button is pushed
- The Anti-Lock Brake System (ABS) activates

- The gear selector is removed from the DRIVE position
- The Electronic Stability Control/Traction Control System (ESC/TCS) activates
- The vehicle parking brake is applied
- The braking temperature exceeds normal range (overheated)

The following conditions will only cancel the ACC system:

- Driver seat belt is unbuckled at low speeds
- Driver door is opened at low speeds

TO TURN OFF

The system will turn off and erase the set speed in memory if:

- The Adaptive Cruise Control (ACC) on/off button is pushed
- The vehicle is placed in the OFF position
- The Active Driving Assist (ADA) system (if equipped) is enabled/engaged and the ADA button is pressed

NOTE:

If ADA is not enabled/engaged and the ADA button is pressed, the ACC system will remain on or turn on, depending on the state of ACC at the time of the ADA button press.

TO RESUME

If there is a set speed in memory, push the RES (resume) button and remove your foot from the

accelerator pedal. The instrument cluster display will show the last set speed.

Resume can be used at any speed above 20 mph (32 km/h) when only Fixed Speed Cruise Control is being used.

Resume can be used at or above any speed above 0 mph (0 km/h) when ACC is active.

NOTE:

- While in ACC mode, when the vehicle comes to a complete stop longer than two seconds, the system will cancel. The driver will have to apply the brakes to keep the vehicle at a standstill.
- ACC cannot be resumed if there is a stationary vehicle in front of your vehicle in close proximity.

WARNING!

The Resume function should only be used if traffic and road conditions permit. Resuming a set speed that is too high or too low for prevailing traffic and road conditions could cause the vehicle to accelerate or decelerate too sharply for safe operation. Failure to follow these warnings can result in a collision and death or serious personal injury.

TO VARY THE SPEED SETTING

To Increase Or Decrease The Set Speed

After setting a speed, you can increase the set speed by pushing the SET (+) button, or decrease speed by pushing the SET (-) button.

U.S. Speed (mph)

- Pushing the SET (+), or SET (-) button once will result in a 1 mph speed adjustment. Each subsequent tap of the button results in an adjustment of 1 mph.
- If the button is continually pushed, the set speed will continue to adjust in 5 mph increments until the button is released. The new set speed is reflected in the instrument cluster display.

Metric Speed (km/h)

- Pushing the SET (+), or SET (-) button once will result in a 1 km/h speed adjustment. Each subsequent tap of the button results in an adjustment of 1 km/h.
- If the button is continually pushed, the set speed will continue to adjust in 10 km/h increments until the button is released. The new set speed is reflected in the instrument cluster display.

NOTE:

When you override and push the SET (+) button or SET (-) button, the new set speed will be the current speed of the vehicle.


When ACC Is Active:

- When you use the SET (-) button to decelerate, if the electric motor's braking power does not slow the vehicle sufficiently to reach the set speed, the brake system will automatically slow the vehicle.
- The ACC system applies the brake down to a full stop when following the vehicle in front. If your vehicle follows the vehicle in front to a standstill, your vehicle will release the brakes two seconds after coming to a full stop.

- The ACC system maintains set speed when driving uphill and downhill. However, a slight speed change on moderate hills is normal. In addition, downshifting may occur while climbing uphill or descending downhill. This is normal operation and necessary to maintain set speed. When driving uphill and downhill, the ACC system will cancel if the braking temperature exceeds normal range (overheated).

SETTING THE FOLLOWING DISTANCE IN ACC

The specified following distance for ACC can be set by varying the distance setting between three bars (long), two bars (medium) and one bar (short). Using this distance setting and the vehicle speed, ACC calculates and sets the distance to the vehicle ahead. This distance setting appears in the instrument cluster display.

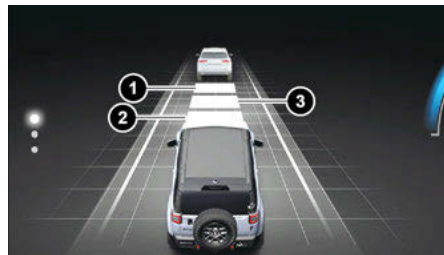

Distance Settings

- 1 — Long Distance Setting (Three Bars)
- 2 — Short Distance Setting (One Bar)
- 3 — Medium Distance Setting (Two Bars)

To increase the distance setting, push the Distance Setting Increase button and release. Each time the button is pushed, the distance setting increases by one bar (longer).

To decrease the distance setting, push the Distance Setting Decrease button and release. Each time the button is pushed, the distance setting decreases by one bar (shorter).

If there is no vehicle ahead, the vehicle will maintain the set speed. If a slower moving vehicle is detected in the same lane, the instrument cluster display will show the ACC Set With Target Detected Indicator Light, and the system will adjust the vehicle speed automatically to maintain the distance setting, regardless of the set speed.

The vehicle will then maintain the set distance until:

- The vehicle ahead accelerates to a speed above the set speed.
- The vehicle ahead moves out of your lane or view of the sensor.
- The distance setting is changed.
- The system disengages ➡ page 191.

The maximum braking applied by ACC is limited; however, the driver can always apply the brakes manually, if necessary.

NOTE:

The brake lights will illuminate whenever the ACC system applies the brakes.

A Proximity Warning will alert the driver if ACC predicts that its maximum braking level is not sufficient to maintain the set distance. If this occurs, a visual alert

“BRAKE!” will flash in the instrument cluster display and a chime will sound while ACC continues to apply its maximum braking capacity.

NOTE:

The “BRAKE!” screen in the instrument cluster display is a warning for the driver to take action and does not necessarily mean that the Forward Collision Warning system is applying the brakes autonomously.

OVERTAKE AID

When driving with Adaptive Cruise Control (ACC) engaged and following a vehicle, the system will provide an additional acceleration up to the ACC set speed to assist in passing the vehicle. This additional acceleration is triggered when the driver utilizes the left turn signal and will only be active when passing on the left hand side.

ACC OPERATION AT STOP

If the ACC system brings your vehicle to a standstill while following a vehicle ahead, your vehicle will resume motion, without any driver interaction, if the vehicle ahead starts moving within two seconds of your vehicle coming to a standstill.

If the vehicle in front does not start moving within two seconds of your vehicle coming to a standstill, the driver will either have to push the RES (resume) button, or apply the accelerator pedal to reengage the ACC to the existing set speed.

NOTE:

- If your vehicle is at a standstill for longer than two seconds, the system will hold brake pressure for up to 10 minutes. If no driver action is taken after the

10 minutes, the Electric Park Brake will be applied and the ACC system will cancel.

- While ACC is holding your vehicle at a standstill (or the vehicle is traveling below 3 mph (5 km/h), and the driver seat belt is unbuckled or the driver door is opened, the Electric Park Brake will be applied and the ACC system will cancel.

WARNING!

When the ACC system is resumed, the driver must ensure that there are no pedestrians, vehicles or objects in the path of the vehicle. Failure to follow these warnings can result in a collision and death or serious personal injury.

DISPLAY WARNINGS AND MAINTENANCE

“Wipe Front Radar Sensor In Front Of Vehicle” Warning

The “ACC/FCW Unavailable Wipe Front Radar Sensor” warning will display and a chime will sound when conditions temporarily limit system performance.

This most often occurs at times of poor visibility, such as in snow or heavy rain. The ACC system may also become temporarily blinded due to obstructions, such as mud, dirt or ice. In these cases, the instrument cluster display will display the above message and the system will deactivate.

This message can sometimes be displayed while driving in highly reflective areas (i.e. ice and snow, or tunnels with reflective tiles). The ACC system will recover after the vehicle has left these areas. Under rare conditions, when the radar is not tracking any vehicles or objects in its path this warning may temporarily occur.

If weather conditions are not a factor, the driver should examine the sensor. It may require cleaning or removal of an obstruction. The sensor is located in the center of the vehicle behind the lower grille.



Front Radar Sensor

To keep the ACC System operating properly, it is important to note the following maintenance items:

- Always keep the sensor cover clean. Carefully wipe the sensor lens with a soft cloth. Be cautious not to damage the sensor lens.
- Do not remove any screws from the sensor. Doing so could cause an ACC system malfunction or failure and require a sensor realignment.
- If the sensor or front end of the vehicle is damaged due to a collision, see an authorized dealer for service.
- Do not attach or install any accessories near the sensor, including transparent material or aftermarket grilles. Doing so could cause an ACC system failure or malfunction.

When the condition that deactivated the system is no longer present, the system will return to the “Adaptive Cruise Control Off” state and will resume function by simply reactivating it.

NOTE:

- If the “ACC/FCW Unavailable Wipe Front Radar Sensor” message occurs frequently (e.g. more than once on every trip) without any snow, rain, mud, or other obstruction, have the radar sensor realigned at an authorized dealer.
- Installing a snowplow, front-end protector, an aftermarket grille or modifying the grille is not recommended. Doing so may block the sensor and inhibit ACC/FCW operation.

“Clean Front Windshield” Warning

The “ACC/FCW Limited Functionality Clean Front Windshield” warning will display and a chime will sound when conditions temporarily limit system performance. This most often occurs at times of poor visibility, such as in snow or heavy rain and fog. The ACC system may also become temporarily blinded due to obstructions, such as mud, dirt, or ice on windshield and fog on the inside of glass. In these cases, the instrument cluster display will display “ACC/FCW Limited Functionality Clean Front Windshield” and the system will have degraded performance.

This message can sometimes be displayed while driving in adverse weather conditions. The ACC/FCW system will recover after the vehicle has left these areas. Under rare conditions, when the camera is not tracking any vehicles or objects in its path this warning may temporarily occur.

If weather conditions are not a factor, the driver should examine the windshield and the camera located on the back side of the inside rearview mirror. They may require cleaning or removal of an obstruction.

When the condition that created limited functionality is no longer present, the system will return to full functionality.

NOTE:

If the “ACC/FCW Limited Functionality Clean Front Windshield” message occurs frequently (e.g. more than once on every trip) without any snow, rain, mud, or other obstruction, have the windshield and forward facing camera inspected at an authorized dealer.

Service ACC/FCW Warning

If the system turns off, and the instrument cluster displays “ACC/FCW Unavailable Service Required” or “Cruise/FCW Unavailable Service Required”, there may be an internal system fault or a temporary malfunction that limits ACC functionality. Although the vehicle is still drivable under normal conditions, ACC will be temporarily unavailable. If this occurs, try activating ACC again later, following an key cycle. If the problem persists, see an authorized dealer.

PRECAUTIONS WHILE DRIVING WITH ACC

In certain driving situations, ACC may have detection issues. In these cases, ACC may brake late or unexpectedly. The driver needs to stay alert and may


need to intervene. The following are examples of these types of situations:

Towing A Trailer

ACC while towing a trailer is recommended only with an Integrated Trailer Brake Controller. Aftermarket trailer brake controllers will not activate the trailer brakes when ACC is braking.

Offset Driving

ACC may not detect a vehicle in the same lane that is offset from your direct line of travel, or a vehicle merging in from a side lane. There may not be sufficient distance to the vehicle ahead. The offset vehicle may move in and out of the line of travel, which can cause your vehicle to brake or accelerate unexpectedly.

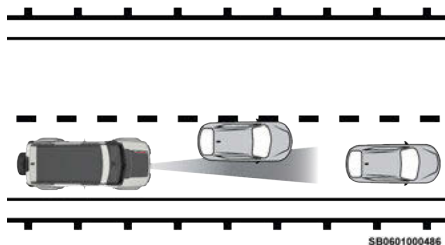

Offset Driving Condition Example

Turns And Bends

When driving on a curve with ACC engaged, the system may increase or decrease the vehicle speed for stability, with no vehicle ahead detected. Once the vehicle is out of the curve, the system will resume your


original set speed. This is a part of normal ACC system functionality.

NOTE:

On tight turns ACC performance may be limited.

Using ACC On Hills


ACC performance may be limited when driving on hills. ACC may not detect a vehicle in your lane depending on the speed, vehicle load, traffic conditions, and the steepness of the hill.

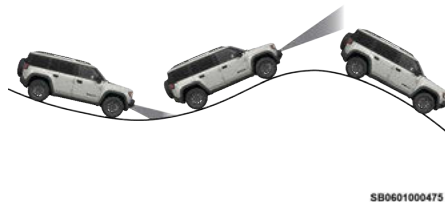

ACC Hill Example

Lane Changing


ACC may not detect a vehicle until it is completely in the lane in which you are traveling. In the following lane changing example, ACC has not yet detected the vehicle changing lanes and it may not detect the vehicle until it's too late for the ACC system to take action. ACC may not detect a vehicle until it is completely in the lane. There may not be sufficient distance to the lane-changing vehicle. Always be attentive and ready to apply the brakes if necessary.

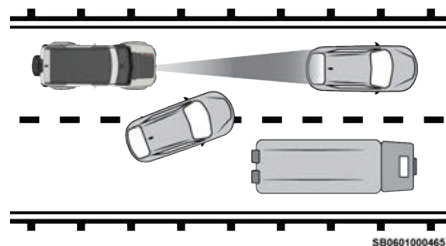

Lane Changing Example

Narrow Vehicles


Some narrow vehicles traveling near the outer edges of the lane or edging into the lane are not detected until they have moved fully into the lane. There may not be sufficient distance to the vehicle ahead.

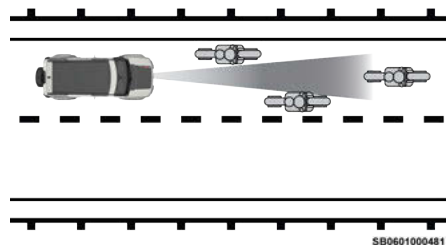

Narrow Vehicle Example

Stationary Objects And Vehicles

ACC does not react to stationary objects or vehicles. For example, ACC will not react in situations where the vehicle you are following exits your lane and the vehicle ahead is stopped in your lane. It will consider this stopped vehicle a stationary object as it did not previously detect movement from it. Always be attentive and ready to apply the brakes if necessary.

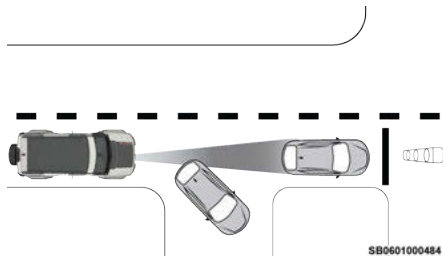

Stationary Object And Stationary Vehicle Example

Rough Road Cruise Control (RRCC) — If Equipped


Your vehicle may be equipped with Rough Road Cruise Control (RRCC) which is a 4-High feature intended to fill the gap between Adaptive Cruise Control (ACC) and Selec-Speed Control (SSC). The minimum set speed is 5 mph (8 km/h). The maximum set speed is 20 mph (32 km/h).

NOTE:

Once RRCC is activated, other cruise functions are not possible such as Active Driving Assist (ADA), Active Lane Management (ALM), and Adaptive Cruise Control (ACC).

ROUGH ROAD CRUISE CONTROL (RRCC) OPERATION

Rough Road Cruise Control is turned on/off by pushing the Selec-Speed Control button located above your rotary electronic gear selector. Once pushed, an LED light will illuminate.

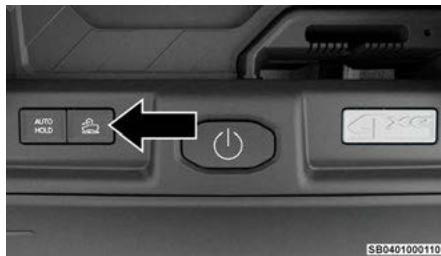

Selec-Speed Control Button

To Activate/Deactivate

Push and release the Selec-Speed Control button. The Rough Road Cruise Control menu in the instrument cluster displays "Rough Road Cruise Control Ready."

To turn the system off, push and release the Selec-Speed Control button again. At this time, the system will turn off and the instrument cluster displays "Rough Road Cruise Control Off."

To Set A Desired Speed

When the vehicle reaches the speed desired, push the SET (+) button or the SET (-) button and release. The instrument cluster display will show the set speed. If RRCC is set when the vehicle speed is below 5 mph (8 km/h) the set speed will default to 5 mph (8 km/h). If RRCC is set when the vehicle speed is above 5 mph (8 km/h) and below 20 mph (32 km/h), the set speed will be the current speed of the vehicle.

NOTE:

The minimum speed for Rough Road Cruise Control is 5 mph (8 km/h).

NOTE:

Rough Road Cruise Control cannot be set above 20 mph (32 km/h).

To Cancel

The following conditions cancel the Rough Road Cruise Control system:

- The brake pedal is applied
- The CANCEL (cancel) button is pushed
- Speed exceeds 30 mph (48 km/h) for 70 seconds or immediately if vehicle speed exceeds 45 mph (72 km/h) due to driver override
- The gear selector is removed from the DRIVE position
- The vehicle parking brake is applied
- The Trailer Sway Control (TSC) activates
- The braking temperature exceeds normal range (overheated)

To Resume

If the Selec-Speed Control button is still activated, push the RES (resume) button and remove your foot from the accelerator pedal. The instrument cluster display will show the last set speed.

Resume can be used at any speed between 5 mph (8 km/h) and 20 mph (32 km/h).

WARNING!

The Resume function should only be used if traffic and road conditions permit. Resuming a set speed that is too high or too low for prevailing traffic and road conditions could cause the vehicle to accelerate or decelerate too sharply for safe operation. Failure to follow these warnings can result in a collision and death or serious personal injury.

OFF ROAD AND LOW-RANGE OPERATIONS ASSISTANCE SYSTEM

HILL START ASSIST (HSA)

The HSA system is designed to mitigate roll back from a complete stop while on an incline. If the driver releases the brake while stopped on an incline, HSA will continue to hold the brake pressure for a short period. If the driver does not apply the throttle before this time expires, the system will release brake pressure and the vehicle will roll down the hill as normal.

The following conditions must be met in order for HSA to activate:

- The feature must be enabled.
- The vehicle must be stopped.
- The parking brake must be off.
- The driver door must be closed. (If the doors are attached, then the door must be closed. If the doors are detached then the driver's seat belt must be buckled.)
- The vehicle must be on a sufficient grade.
- The gear selection must match vehicle uphill direction (i.e., vehicle facing uphill is in forward gear; vehicle backing uphill is in REVERSE gear).
- HSA will work in REVERSE gear and all forward gears. The system will not activate if the vehicle is in PARK or NEUTRAL.

WARNING!

There may be situations where the Hill Start Assist (HSA) will not activate and slight rolling may occur, such as on minor hills or with a loaded vehicle, or while pulling a trailer. HSA is not a substitute for active driving involvement. It is always the driver's responsibility to be attentive to distance to other vehicles, people, and objects, and most importantly brake operation to ensure safe operation of the vehicle under all road conditions. Your complete attention is always required while driving to maintain safe control of your vehicle. Failure to follow these warnings can result in a collision or serious personal injury.

Disabling And Enabling HSA

This feature can be turned on or turned off. To change the current setting, refer to ⇨ page 115 for further information.

Towing With HSA

HSA will also provide assistance to mitigate roll back while towing a trailer.

WARNING!

- If you use a trailer brake controller with your trailer, the trailer brakes may be activated and deactivated with the brake switch. If so, there may not be enough brake pressure to hold both the vehicle and the trailer on a hill when the brake pedal is released. In order to avoid rolling down an incline while resuming acceleration, manually activate the trailer brake or apply more vehicle brake pressure prior to releasing the brake pedal.
- HSA is not a parking brake. Always apply the parking brake fully when exiting your vehicle. Also, be certain to place the vehicle in PARK (P).
- Failure to follow these warnings can result in a collision or serious personal injury.

UTILITY FEATURES ASSISTANCE SYSTEM

TRAFFIC SIGN ASSIST SYSTEM

The Traffic Sign Assist (TSA) system fuses traffic signs detected by a forward facing camera with map data from the vehicle's navigation to display the best

available information about the current applicable speed limits. Displayed information includes:

- Unconditional speed limit
- Conditional speed limit
- No passing zones

NOTE:

The TSA system will automatically display the detected road sign using the unit of measurement (mph or km/h) selected within Uconnect Settings, or within the instrument cluster display.

Activation/Deactivation

The TSA System can be enabled/disabled within the Uconnect system through the Safety/Driver Assistance menu. System ON is signaled by road signs shown on the instrument cluster display.

Traffic Sign Assist Modes

TSA has three selectable modes of operation that are available through the Uconnect Settings within the Safety & Driving Assistance menu ➡ page 115.

TSA Off

When the TSA system is turned off, the system will not show any traffic signs and no alerts will be issued to the driver.

TSA Warning Off

When TSA Warning is set to Off while the TSA system is on, indications on the cluster will appear but no visual or audible chime will notify the driver when the detected speed limit is exceeded.

Visual

When Visual is selected, the system will alert the driver when the current speed of the vehicle exceeds the detected speed limit by showing a graphic in the instrument cluster display. The speed limit will be highlighted in red for as long as the speed limit plus offset is exceeded.

Visual + Chime

When Visual + Chime is selected, the system will alert the driver when the current speed of the vehicle exceeds the detected speed limit by highlighting the speed limit in red and by sounding a single chime. The speed limit will remain highlighted as long as vehicle speed exceeds the speed limit plus selected offset.

New Speed Zone Indication

This setting enables you to receive notifications when the speed limit changes in your current area. These settings can be changed in the Uconnect Settings within the Safety & Driving Assistance menu.

There are three available settings:

- Off
- Visual
- Visual + Chime

Off

When New Speed Zone Indication is set to Off while the TSA system is on, no visual or audible chime will notify the driver when a newly detected speed limit is detected.

Visual

When Visual is selected, the system will provide an animation or flash briefly the new speed limit.

Visual + Chime

When Visual + Chime is selected, the system will provide an animation or flash briefly the new speed limit as well as provide an audible alert.

Indications On The Display

Detected traffic signs are shown in the instrument cluster display, and can display any combination of signs at one time (e.g. speed limit, speed limit and supplemental info, and "Do Not Pass" signs) depending on what information is available.

When a newly detected speed limit is lower than the current speed limit, the system will alert.

NOTE:

Up or down arrows will be displayed for up to five seconds.



Traffic Signs Recognized

- 1 — Current Speed Limit With Supplemental Information (School Zone)
- 2 — Next Speed Limit Detected
- 3 — No Passing Zone Detected

Supplemental Information

Supplemental information may be displayed, along with a newly detected speed limit, indicating special circumstances of which the driver should be aware. Available supplemental information includes:

- School
- Construction

Speed Limit Exceeded

When Visual + Chime is selected and the vehicle's speed exceeds the displayed speed limit by 1 mph (1 km/h), the speed limit sign on the instrument cluster display will show a red outline to alert the driver.

CAUTION!

- Traffic Sign Assist is designed to assist the driver and not to substitute the driver. It is the driver's responsibility to continue to monitor the vehicle speed.
- Functionality may be limited or the system may not work if the sensor is obstructed.
- The system may have limited operation or not work at all in weather conditions such as heavy rain, hail, and thick fog. Strong light contrasts can influence the recognition capability of the sensor.
- The area surrounding the sensor must not be covered with stickers or any other object.
- Do not tamper or perform any operations in the area of the windshield glass directly surrounding the sensor.
- Clean foreign matters such as bird droppings, insects, snow or ice on the windshield.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

The Tire Pressure Monitoring System (TPMS) will warn the driver of a low tire pressure based on the vehicle recommended cold placard pressure.

NOTE:

The alert warning on the cluster will stay on until the tire is inflated to the placard pressure.

The tire pressure will vary with temperature by approximately 1 psi (7 kPa) for every 12°F (6.5°C). This means that when the outside temperature decreases,

the tire pressure will decrease. Tire pressure should always be set based on cold inflation tire pressure. This is defined as the tire pressure after the vehicle has not been driven for at least three hours, or driven less than 1 mile (1.6 km) after a three hour period. The cold tire inflation pressure must not exceed the maximum inflation pressure molded into the tire sidewall. The tire pressure will also increase as the vehicle is driven. This is normal and there should be no adjustment for this increased pressure.

See ➞ page 238 on how to properly inflate the vehicle's tires.

The TPMS will warn the driver of a low tire pressure if the tire pressure falls below the low-pressure warning limit for any reason, including low temperature effects and natural pressure loss through the tire.

The TPMS will continue to warn the driver of low tire pressure as long as the condition exists, and will not turn off until the tire pressure is at or above the recommended cold placard pressure. Once the low tire pressure warning (Tire Pressure Monitoring System Warning Light) illuminates, you must increase the tire pressure to the recommended cold placard pressure in order for the TPMS Warning Light to turn off.

NOTE:

When filling warm tires, the tire pressure may need to be increased up to an additional 4 psi (28 kPa) above the recommended cold placard pressure in order to turn the TPMS Warning Light off.

The system will automatically update and the TPMS Warning Light will turn off once the system receives the updated tire pressures. The vehicle may need to be

driven for up to 20 minutes above 15 mph (24 km/h) in order for the TPMS to receive this information.

For example, your vehicle may have a recommended cold (parked for more than three hours) placard pressure of 33 psi (227 kPa). If the ambient temperature is 68°F (20°C) and the measured tire pressure is 28 psi (193 kPa), a temperature drop to 20°F (-7°C) will decrease the tire pressure to approximately 24 psi (165 kPa). This tire pressure is low enough to turn on the TPMS Warning Light. Driving the vehicle may cause the tire pressure to rise to approximately 28 psi (193 kPa), but the TPMS Warning Light will still be on. In this situation, the TPMS Warning Light will turn off only after the tires are inflated to the vehicle's recommended cold placard pressure value ➞ page 238.

NOTE:

When filling warm tires, the tire pressure may need to be increased up to an additional 4 psi (28 kPa) above the recommended cold placard pressure in order to turn the TPMS Warning Light off.

CAUTION!

- The TPMS has been optimized for the original equipment tires and wheels. TPMS pressures and warning have been established for the tire size equipped on your vehicle. Undesirable system operation or sensor damage may result when using replacement equipment that is not of the same size, type, and/or style. The TPMS sensor is not designed for use on aftermarket wheels, and may contribute to a poor overall system

(Continued)

CAUTION!

performance. Customers are encouraged to use Original Equipment Manufacturer (OEM) wheels to ensure TPMS feature operation.

- Using aftermarket tire sealants may cause the Tire Pressure Monitoring System (TPMS) sensor to become inoperable. After using an aftermarket tire sealant it is recommended that you take your vehicle to an authorized dealer to have your sensor function checked.
- After inspecting or adjusting the tire pressure always reinstall the valve stem cap. This will prevent moisture and dirt from entering the valve stem, which could damage the TPMS sensor.

NOTE:

- The TPMS is not intended to replace normal tire care and maintenance, or to provide warning of a tire failure or condition.
- The TPMS should not be used as a tire pressure gauge while adjusting your tire pressure, unless your vehicle is equipped with a Tire Fill Alert or Selectable Tire Fill Alert feature.
- Driving on a significantly underinflated tire causes the tire to overheat and can lead to tire failure. Underinflation also reduces vehicle range and tire tread life, and may affect the vehicle's handling and stopping ability.
- The TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure using an accurate tire pressure gauge, even if underinflation has not reached the level to trigger illumination of the TPMS Warning Light.

- Seasonal temperature changes will affect tire pressure, and the TPMS will monitor the actual tire pressure in the tire.

System Operation

The Tire Pressure Monitoring System (TPMS) uses wireless technology with wheel rim mounted electronic sensors to monitor tire pressure levels. Sensors, mounted to each wheel as part of the valve stem, transmit tire pressure readings to the receiver module.



Tire Pressure Monitoring System Display

NOTE:

It is particularly important for you to check the tire pressure in all of the tires on your vehicle monthly and to maintain the proper pressure.

The TPMS consists of the following components:

- Receiver module
- Four Tire Pressure Monitoring System sensors
- Various Tire Pressure Monitoring System messages, which display in the instrument cluster
- Tire Pressure Monitoring System Warning Light

TIRE PRESSURE MONITORING SYSTEM LOW PRESSURE WARNINGS



The TPMS Warning Light will illuminate in the instrument cluster and a chime will sound when tire pressure is low in one or more of the four active road tires. In

addition, the instrument cluster will display a "Tire Low" message for a minimum of five seconds, an "Inflate to XX" message and a graphic showing the pressure values of each tire with the low tire pressure values in a different color.



Tire Pressure Monitoring System Low Pressure Warning

Should this occur, you should stop as soon as possible and inflate the tires with low pressure (those in a different color in the instrument cluster graphic) to the vehicle's recommended cold placard pressure value as shown in the "Inflate to XX" message. Once the system receives the updated tire pressures, the system will automatically update, the pressure values in the

graphic display in the instrument cluster will return to their original color, and the TPMS Warning Light will turn off.

NOTE:

When filling warm tires, the tire pressure may need to be increased up to an additional 4 psi (28 kPa) above the recommended cold placard pressure in order to turn the TPMS Warning Light off.

The vehicle may need to be driven for up to 20 minutes above 15 mph (24 km/h) in order for the TPMS to receive this information.

SERVICE TPMS WARNING

When a system fault is detected, the TPMS Warning Light will flash on and off for 75 seconds and then remain on solid. The system fault will also sound a chime. In addition, the instrument cluster will display a "SERVICE TIRE PRESSURE SYSTEM" message for a minimum of five seconds and then display dashes (–) in place of the pressure value to indicate which sensor is not being received.

If the ignition is cycled, this sequence will repeat, providing the system fault still exists. If the system fault no longer exists, the TPMS Warning Light will no longer flash, and the "SERVICE TIRE PRESSURE SYSTEM" message will no longer display, and a pressure value will display in place of the dashes. A system fault can occur due to any of the following:

- Jamming due to electronic devices or driving next to facilities emitting the same radio frequencies as the TPMS sensors
- Installing some form of aftermarket window tinting that affects radio wave signals

- Lots of snow or ice around the wheels or wheel housings
- Using tire chains on the vehicle
- Using wheels/tires not equipped with TPMS sensors

Vehicles With A Full-Size Matching Spare

1. If your vehicle is equipped with a matching full-size spare wheel and tire assembly, it has a Tire Pressure Monitoring System sensor, and can be monitored by the Tire Pressure Monitoring System (TPMS) when swapped with a low pressure road tire.
2. In the event that the matching full-size spare tire is swapped with a low pressure road tire, the next ignition switch cycle will still show the TPMS Warning Light to be on, a chime to sound, an Inflate to XX message to appear in the instrument cluster, and the graphic display will still show the low tire pressure value in a different color.
3. Driving the vehicle for up to 20 minutes above 15 mph (24 km/h) will turn off the TPMS Warning Light as long as none of road tires are below the low pressure warning threshold.

TPMS DEACTIVATION — IF EQUIPPED

The TPMS can be deactivated if replacing all four wheel and tire assemblies (road tires) with wheel and tire assemblies that do not have TPMS sensors, such as when installing winter wheel and tire assemblies on your vehicle.

To deactivate the TPMS, first replace all four wheel and tire assemblies (road tires) with tires not equipped with Tire Pressure Monitoring System sensors. Then, drive

the vehicle for 20 minutes above 15 mph (24 km/h).

The TPMS will chime, the TPMS Warning Light will flash on and off for 75 seconds and then remain on. The instrument cluster will display the "SERVICE TIRE PRESSURE SYSTEM" message and then display dashes (–) in place of the pressure values.

Beginning with the next ignition cycle, the TPMS will no longer chime or display the "SERVICE TIRE PRESSURE SYSTEM" message in the instrument cluster but dashes (–) will remain in place of the pressure values.

To reactivate the TPMS, replace all four wheel and tire assemblies (road tires) with tires equipped with TPMS sensors. Then, drive the vehicle for up to 20 minutes above 15 mph (24 km/h). The TPMS will chime, the TPMS Warning Light will flash on and off for 75 seconds and then turn off. The instrument cluster will display the "SERVICE TIRE PRESSURE SYSTEM" message and then display pressure values in place of the dashes. On the next ignition cycle the "SERVICE TIRE PRESSURE SYSTEM" message will no longer be displayed as long as no system fault exists.

TIRE FILL ALERT

This feature notifies the user when the placard tire pressure is attained while inflating or deflating the tire.

The customer may choose to disable or enable the Tire Fill Alert feature in the customer settings menu of the Uconnect system.

NOTE:

- Only one tire can be filled at a time when using the Tire Fill Alert system.
- The Tire Fill Alert feature cannot be entered if an existing TPMS fault is set to "active" or if the system is in deactivation mode (if equipped).

The system will be activated when the system detects an increase in tire pressure while filling the tire. The start button must be in the ON/RUN mode with the vehicle in PARK.

The hazard lamps will come on to confirm the vehicle is in Tire Fill Alert mode. If the hazard lamps do not come on while inflating the tire, the Tire Pressure Monitoring System sensor may be in an inoperative position, preventing the TPMS sensor signal from being received. In this case, the vehicle may need to be moved slightly forward or backward.

When Tire Fill Alert mode is entered, the tire pressure display screen will be displayed in the instrument cluster.

Operation:

- The horn will chirp once to let the user know when to stop filling the tire, when it reaches recommended pressure.
- The horn will chirp three times if the tire is overfilled and will continue to chirp every five seconds if the user continues to inflate the tire.
- The horn will chirp once again when enough air is let out to reach proper inflation level.
- The horn will also chirp three times if the tire is then underinflated and will continue to chirp every five seconds if the user continues to deflate the tire.

NOTE:

The Tire Fill Alert feature is set to "Disabled" every time the ignition is turned to "OFF". To re-enable the Tire Fill Alert feature at the "RUN" state, the customer must re-enable the feature through use of the customer settings in the radio.

SELECTABLE TIRE FILL ALERT (STFA) – IF EQUIPPED

The STFA system is an optional feature that is included as part of the normal Tire Fill Alert system. The system is designed to allow you to select a pressure to inflate or deflate the vehicle's front and rear axle tires to, and to provide feedback while inflating or deflating the vehicle's tires.

NOTE:

To use the STFA feature, the Tire Fill Alert feature must be enabled through use of the customer settings in the radio.

In the Selectable Tire Fill Alert application, which is located in the apps menu of the Uconnect system, you will be able to select a pressure setting for both the front and rear axle tire pressures by scrolling through a pressure range from XX to 15 psi in 1 psi increments for each axle setting.

XX = the vehicle's cold placard pressure values for the front and rear axles as shown on the vehicle placard pressure label.

You may also store pressure values chosen for each axle in the Uconnect system application as preset pressure values. Up to two sets of preset pressure values can be stored in the Uconnect system for the front and rear axle. Once you select the tire pressures

for the front and rear axles that you want to inflate or deflate to, you can begin inflating or deflating one tire at a time.

NOTE:

The STFA system will only support inflating or deflating one tire at a time.

The system will be activated when the TPMS receiver module detects a change in tire pressure. The vehicle must be in the ON/RUN mode, and in PARK. The hazard lamps will come on to confirm the vehicle is in Tire Fill Alert mode.

When Tire Fill Alert mode is entered, the tire pressure screen will be displayed in the instrument cluster. If the hazard lamps do not come on while inflating or deflating the tire, the Tire Pressure Monitoring System sensor may be in an inoperative position, preventing the TPMS sensor signal from being received. In this case, the vehicle may need to be moved slightly forward or backward.

Horn chirps will indicate STFA status as tires are inflated/deflated. The horn will chirp under the following STFA states:

1. The horn will chirp once when the selected pressure is reached to let you know when to stop inflating or deflating the tire.
2. The horn will chirp three times if the tire is overinflated or over-deflated.
3. The horn will chirp once again when enough air is added or removed to reach proper selected pressure level.

IN CASE OF EMERGENCY

HAZARD WARNING FLASHERS

DESCRIPTION

The Hazard Warning Flashers button is located on the instrument panel below the touch screen.



Push the button to turn on the Hazard Warning Flashers. When the button is activated, all directional turn signals will flash on and off to warn oncoming traffic of an emergency. Push the button a second time to turn off the Hazard Warning Flashers.

This is an emergency warning system and it should not be used when the vehicle is in motion. Use it only when your vehicle is disabled or signaling a safety hazard warning for other motorists.

When you must leave the vehicle to seek assistance, the Hazard Warning Flashers will continue to operate even though the start button is placed in the OFF position.

NOTE:

With extended use the Hazard Warning Flashers may wear down your battery.

ASSIST AND SOS — IF EQUIPPED

DESCRIPTION



ASSIST And SOS Buttons

- 1 — ASSIST Button
- 2 — SOS Button

If equipped, the overhead console contains an ASSIST and an SOS button.

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features

WARNING!

and applications when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber.
- The ASSIST and SOS buttons will only function if you are connected to an operable LTE (voice/data) or 4G (data) network, which comes as a built-in function. Other Uconnect services will only be operable if your SiriusXM Guardian™ service is active and you are connected to an operable LTE (voice/data) or 4G (data) network.

ASSIST Call

The ASSIST Button is used to automatically connect you to any one of the following support centers:

- Roadside Assistance – If you get a flat tire, or need a tow, just push the ASSIST button and you'll be connected to someone who can help. Roadside Assistance will know what vehicle you're driving and its location. Additional fees may apply for roadside assistance.
- SiriusXM Guardian™ Customer Care – In-vehicle support for SiriusXM Guardian™.

(Continued)

- Vehicle Customer Care – Total support for all other vehicle issues.
- Uconnect Customer Care - Total support for Radio, Phone and NAV issues.

SOS Call

1. Push the SOS Call button on the overhead console.

NOTE:

In case the SOS Call button is pushed in error, there will be a 10 second delay before the SOS Call system initiates a call to an SOS operator. To cancel the SOS Call connection, push the SOS call button on the overhead console or press the cancellation button on the Device Screen. Termination of the SOS Call will turn off the green LED light on the overhead console.

2. The LED light located within the ASSIST and SOS buttons on the overhead console will turn green once a connection to an SOS operator has been made.
3. Once a connection between the vehicle and an SOS operator is made, the SOS Call system may transmit the following important vehicle information to an SOS operator:
 - Indication that the occupant placed an SOS Call
 - The vehicle brand
 - The last known GPS coordinates of the vehicle
4. You should be able to speak with the SOS operator through the vehicle audio system to determine if additional help is needed.

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features and applications when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber.
 - Once a connection is made between the vehicle's SOS Call system and the SOS operator, the SOS operator may be able to open a voice connection with the vehicle to determine if additional help is needed. Once the SOS operator opens a voice connection with the vehicle's SOS Call system, the operator should be able to speak with you or other vehicle occupants and hear sounds occurring in the vehicle. The vehicle's SOS Call system will attempt to remain connected with the SOS operator until the SOS operator terminates the connection.
5. The SOS operator may attempt to contact appropriate emergency responders and provide them with important vehicle information and GPS coordinates.

WARNING!

- If anyone in the vehicle could be in danger (e.g., fire or smoke is visible, dangerous road conditions or location), do not wait for voice contact from an Emergency Services Agent. All occupants should exit the vehicle immediately and move to a safe location.
- Never place anything on or near the vehicle's operable network and GPS antennas. You could prevent operable network and GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable network and GPS signal reception is required for the SOS Call system to function properly.
- The SOS Call system is embedded into the vehicle's electrical system. Do not add aftermarket electrical equipment to the vehicle's electrical system. This may prevent your vehicle from sending a signal to initiate an emergency call. To avoid interference that can cause the SOS Call system to fail, never add aftermarket equipment (e.g., two-way mobile radio, CB radio, data recorder, etc.) to your vehicle's electrical system or modify the antennas on your vehicle. IF YOUR VEHICLE LOSES BATTERY POWER FOR ANY REASON (INCLUDING DURING OR AFTER AN ACCIDENT), THE UCONNECT FEATURES, APPS AND SERVICES, AMONG OTHERS, WILL NOT OPERATE.
- Modifications to any part of the SOS Call system could cause the air bag system to fail when you need it. You could be injured if the air bag system is not there to help protect you.

SOS Call System Limitations

Vehicles sold in Mexico **DO NOT** have SOS Call system capabilities.

SOS or other emergency line operators in Mexico may not answer or respond to SOS system calls.

If the SOS Call system detects a malfunction, any of the following may occur at the time the malfunction is detected, and at the beginning of each start button cycle:

- The light located within the ASSIST and SOS buttons will continuously illuminate red.
- The Device Screen will display the following message “Vehicle device requires service. Please contact an authorized dealer.”
- An In-Vehicle Audio message will state “Vehicle device requires service. Please contact an authorized dealer.”

WARNING!

- Ignoring the Rearview Mirror light could mean you will not have SOS Call services. If the Rearview Mirror light is illuminated, have an authorized dealer service the SOS Call system immediately.
- The Occupant Restraint Control module turns on the air bag Warning Light on the instrument panel if a malfunction in any part of the system is detected. If the Air Bag Warning Light is illuminated, have an authorized dealer service the Occupant Restraint Control system immediately.

Even if the SOS Call system is fully functional, factors beyond FCA US LLC's control may prevent or stop the SOS Call system operation. These include, but are not limited to, the following factors:

- The vehicle is in the OFF position
- The vehicle's electrical systems are not intact
- The SOS Call system software and/or hardware are damaged during a crash
- The vehicle battery loses power or becomes disconnected during a vehicle crash
- LTE (voice/data) or 4G (data) network and/or Global Positioning Satellite signals are unavailable or obstructed
- Equipment malfunction at the SOS operator facility
- Operator error by the SOS operator
- LTE (voice/data) or 4G (data) network congestion
- Weather
- Buildings, structures, geographic terrain, or tunnels

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features and applications when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

CAUTION!

To avoid damage to the mirror during cleaning, never spray any cleaning solution directly onto the mirror. Apply the solution onto a clean cloth and wipe the mirror clean.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber.
- Never place anything on or near the vehicle's LTE (voice/data) or 4G (data) and GPS antennas. You could prevent LTE (voice/data) or 4G (data) and GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable LTE (voice/data) or 4G (data) network connection and a GPS signal is required for the SOS Call system to function properly.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Automatic SOS — If Equipped

Automatic SOS is a hands-free safety service that can immediately connect you with help in the event that your vehicle's airbags deploy. Please refer to your provided radio supplement for complete information.

JACKING THE VEHICLE AND WHEEL CHANGING — IF EQUIPPED

DESCRIPTION

Scan this QR code to learn more about Jacking and Tire Changing.



WARNING!

- Do not attempt to change a tire on the side of the vehicle close to moving traffic. Pull far enough off the road to avoid the danger of being hit when operating the jack or changing the wheel.
- Being under a jacked-up vehicle is dangerous. The vehicle could slip off the jack and fall on you. You could be crushed. Never put any part of your body under a vehicle that is on a jack. If you need to get under a raised vehicle, take it to a service center where it can be raised on a lift.
- Never start or run the vehicle while the vehicle is on a jack.
- The jack is designed to be used as a tool for changing tires only. The jack should not be used to lift the vehicle for service purposes. The vehicle should be jacked on a firm level surface only. Avoid ice or slippery areas.


PREPARATIONS FOR JACKING

- Park on a firm, level surface. Avoid ice or slippery areas.

WARNING!

Do not attempt to change a tire on the side of the vehicle close to moving traffic. Pull far enough off the road to avoid being hit when operating the jack or changing the wheel.

- Turn on the Hazard Warning Flashers.
- Apply the parking brake.
- Shift the gear box into PARK (P).
- Turn the Start button OFF.
- Block both the front and rear of the wheel diagonally opposite of the jacking position. For example, if the driver's front wheel is being changed, block the passenger's rear wheel.

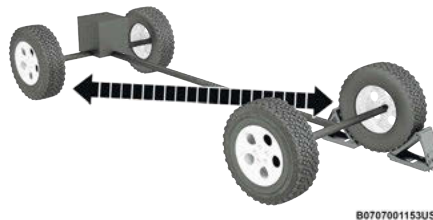

Wheel Blocked Example

NOTE:

Passengers should not remain in the vehicle when the vehicle is being lifted or raised.

JACK LOCATION

The jack and lug wrench are located under the load floor in the frunk.



SPARE TIRE REMOVAL

- Remove the Rear Camera Cover by turning the lock bolt counterclockwise with the appropriate tool or the vehicle key.



SB0701000513

Rear Camera Location

- Remove the lug nuts with the lug wrench turning them counterclockwise. If equipped, remove the locking lug nut with the lock key (located in the glove box) turning it counterclockwise.



SB0701000217

Spare Tire Removal

JACKING INSTRUCTIONS

WARNING!

Carefully follow these tire changing warnings to help prevent personal injury or damage to your vehicle:

- Always park on a firm, level surface as far from the edge of the roadway as possible before raising the vehicle.
- Turn on the Hazard Warning Flashers.
- Apply the parking brake firmly and shift the automatic gearbox into PARK.
- Block the wheel diagonally opposite the wheel to be raised.
- Never start or run the vehicle with the vehicle on a jack.
- Do not let anyone sit in the vehicle when it is on a jack.
- Do not get under the vehicle when it is on a jack. If you need to get under a raised vehicle, take it to a service center where it can be raised on a lift.
- Only use the jack in the positions indicated and for lifting this vehicle during a tire change.
- If working on or near a roadway, be extremely careful of motor traffic.
- To assure that spare tires, flat or inflated, are securely stowed, spares must be stowed with the valve stem facing the ground.



040600714

Jack Warning Label

- Remove the spare tire, jack and tools from the stored location.
- Loosen (but do not remove) the wheel lug nuts by turning them to the left one turn while the wheel is still on the ground.
- Assemble the jack and jacking tools.
- Remove the lift point covers.
- Place the jack underneath the lift point that is closest to the flat tire. Turn the jack screw clockwise to firmly engage the jack saddle with the lift point.

NOTE:

Keep the jack and tools aligned while raising the vehicle to prevent tool damage.

CAUTION!

Do not attempt to raise the vehicle by jacking on locations other than those indicated.



SB0691000511

Front Jacking Location



SB0691000512

Rear Jacking Location

6. Raise the vehicle by turning the jack screw clockwise. Raise the vehicle only until the tire just clears the surface and enough clearance is obtained to install the spare tire. Minimum tire lift provides maximum stability.

WARNING!

Raising the vehicle higher than necessary can make the vehicle less stable. It could slip off the jack and hurt someone near it. Raise the vehicle only enough to change the tire.

7. Remove the lug nuts and wheel.
8. Mount the spare tire on the axle.
9. Install the lug nuts with the cone-shaped end toward the wheel. Lightly tighten the lug nuts clockwise.

WARNING!

To avoid the risk of forcing the vehicle off the jack, do not tighten the wheel nuts fully until the vehicle has been lowered. Failure to follow this warning may result in serious injury.

10. Lower the vehicle by turning the jack screw to the counterclockwise, and remove the jack.
11. Finish tightening the wheel bolts. Push down on the wrench while at the end of the handle for increased leverage. Tighten the wheel bolts in a star pattern until each wheel bolt has been tightened twice. If in doubt about the correct tightness, have them checked with a torque wrench by an authorized dealer or at a service station.
12. After 25 miles (40 km), check the lug nut torque with a torque wrench to ensure that all lug nuts are properly seated against the wheel.
13. Remove the jack assembly.

14. Secure the jack and tools in their proper locations.
15. Secure the damaged wheel/tire on the spare tire carrier. Torque down lug nuts and locking lug nut.
16. Return the lock bolt to the lock position on the camera cover by turning the lock clockwise. Then, reinstall the camera cover by slipping it over the camera/tire carrier until it snaps into place.

WARNING!

A loose tire or jack thrown forward in a collision or hard stop, could endanger the occupants of the vehicle. Always stow the jack parts and the spare tire in the places provided.

JUMP STARTING

DESCRIPTION

If your vehicle has a discharged battery, it can be jump started using a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack. Jump starting can be dangerous if done improperly, so please follow the procedures in this section carefully.

NOTE:

When using a portable battery booster pack, follow the manufacturer's operating instructions and precautions.

The vehicle requires its 12 Volt battery power to turn on the vehicle's high voltage battery. The high voltage battery is used to charge the 12 Volt battery, provide electric vehicle operation. If the 12 Volt battery has been discharged, the vehicle can be jump started using

a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack.

If the vehicle's high voltage battery has also been discharged, it will need to be recharged to a minimum operating State Of Charge (SOC) before the vehicle can be operated:

- If the vehicle can be connected to a Level 1 or Level 2 charger where it is currently parked, the vehicle will still require a jump start to allow the vehicle to begin the battery charging process. Once the vehicle charging has begun (indicated by the charge status indicator on top of the vehicle's instrument panel), the jumper cables can be removed from the vehicle jump posts.
- If the vehicle cannot be connected to a Level 1 or Level 2 charger where it is currently parked, the vehicle can be moved by connecting 12 Volt power to the vehicle's jump posts and then shifting the vehicle from PARK (P) into NEUTRAL (N). Power provided by the jumper cables will also allow the Electric Park Brake to be released. Carefully move the vehicle to a Level 1 or Level 2 charge location. While the vehicle is being moved, the external 12 Volt power must remain connected to the vehicle jump posts.

NOTE:

Be careful when moving the vehicle - ensure that control of the vehicle is maintained. Also, ensure that vehicle is secured to prevent unintentional movement during and after moving the vehicle. If the external 12 Volt power becomes disconnected from the vehicle jump posts or there is an interruption of the 12 Volt power while moving the vehicle, the vehicle may shift into PARK. Do not allow the jumper cables to come in

contact with each other or to the vehicle, this will result in a short.

When the vehicle is at the charging location, shift the vehicle back to PARK, apply the Electric Park Brake, and start the high voltage battery charging. Once the vehicle has been secured against unintentional movement and high voltage battery charging has been initiated, the jumper cables can be removed from the vehicle jump posts.

WARNING!

Do not attempt jump starting if the battery is frozen. It could rupture or explode and cause personal injury.

CAUTION!

Do not use a portable battery booster pack or any other booster source with a system voltage greater than 12 Volts or damage to the battery or electrical system may occur.

PREPARATIONS FOR JUMP START

The vehicle's remote jump starting post is located under the hood on the driver's side under a protective plastic cover. Remove the protective cover.

The remote positive (+) post is covered with a protective cap located on left side of the fuse box.



Remote Positive (+) Post

See the following steps to prepare for jump starting:

1. Apply the parking brake, shift the vehicle into PARK (P) and make sure the vehicle is OFF.
2. Turn off the heater, radio, and all electrical accessories.
3. Pull upward and remove the protective cap over the remote positive (+) battery post.
4. If using another vehicle to jump start the 12 Volt electrical system, park the vehicle within the reach of the jumper cables, apply the parking brake and make sure the vehicle is OFF.

WARNING!

- Do not allow vehicles to touch each other as this could establish a ground connection and personal injury could result.
- Take care to avoid the radiator cooling fan whenever the hood is raised. It can start anytime

(Continued)

WARNING!

the vehicle is switched ON. You can be injured by moving fan blades.

- Remove any metal jewelry such as rings, watch bands and bracelets that could make an inadvertent electrical contact. You could be seriously injured.
- Batteries contain sulfuric acid that can burn your skin or eyes and generate hydrogen gas which is flammable and explosive. Keep open flames or sparks away from the battery.

JUMP STARTING PROCEDURE**WARNING!**

Failure to follow this jump starting procedure could result in personal injury or property damage due to battery explosion.

CAUTION!

Failure to follow these procedures could result in damage to the charging system of the booster vehicle or the discharged vehicle.

Connecting The Jumper Cables

1. Connect the positive (+) end of the jumper cable to the remote positive (+) post of the discharged vehicle.

NOTE:

The remote positive (+) post is located in the frunk on the driver's side under the cover on left side of the fuse box.

2. Connect the opposite end of the positive (+) jumper cable to the positive (+) post of the booster battery.
3. Connect the negative (-) end of the jumper cable to the negative (-) post of the booster battery.
4. Connect the opposite end of the negative (-) jumper cable to the good ground of the discharged vehicle. A "ground" is an exposed metallic/unpainted part of the frame or chassis, such as an accessory bracket or large bolt. The ground must be away from the battery.

WARNING!

Do not connect the jumper cable to the negative (-) post of the discharged battery. The resulting electrical spark could cause the battery to explode and could result in personal injury.

5. Start the engine in the vehicle that has the booster battery, let the engine idle a few minutes and then cycle the ignition to ON/RUN in the vehicle with the discharged battery.
6. After a couple minutes (depending on the level of 12 Volt battery discharge), attempt to start the vehicle. Once the vehicle starts, follow the disconnecting procedure.

Disconnecting The Jumper Cables

1. Disconnect the negative (-) end of the jumper cable from the good ground of the vehicle with the discharged battery.
2. Disconnect the opposite end of the negative (-) jumper cable from the negative (-) post of the booster battery.
3. Disconnect the positive (+) end of the jumper cable from the positive (+) post of the booster battery.
4. Disconnect the opposite end of the positive (+) jumper cable from the remote positive (+) post of the discharged vehicle, and reinstall the protective cap.
5. Close the cover of the Front Power Distribution Center.

If frequent jump starting is required to start your vehicle you should have the battery and charging system inspected at an authorized dealer.

CAUTION!

Accessories plugged into the vehicle power outlets draw power from the vehicle's battery, even when not in use (i.e., cellular devices, etc.). Eventually, if plugged in long enough without vehicle operation, the vehicle's battery will discharge sufficiently to degrade battery life and/or prevent the vehicle from starting.

FREEING A STUCK VEHICLE

DESCRIPTION

If your vehicle becomes stuck in mud, sand or snow, it can often be moved using a rocking motion. Turn the steering wheel right and left to clear the area around the front wheels. Push and hold the lock button on the gear selector. Then, shift back and forth between DRIVE (D) and REVERSE (R) while gently pressing the accelerator.

NOTE:

Shifts between DRIVE (D) and REVERSE (R) can only be achieved at wheel speeds of 5 mph (8 km/h) or less. Whenever the vehicle remains in NEUTRAL (N) for more than two seconds, you must press the brake pedal to engage DRIVE (D) or REVERSE (R).

Use the least amount of accelerator pedal pressure that will maintain the rocking motion without spinning the wheels.

NOTE:

Push the ESC OFF button to place the Electronic Stability Control (ESC) system in "Partial OFF" mode, before rocking the vehicle. Once the vehicle has been freed, push the ESC OFF button again to restore "ESC On" mode.

WARNING!

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause damage, or even failure, of the axle and tires. A

(Continued)

WARNING!

tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) or for longer than 30 seconds continuously without stopping when you are stuck and do not let anyone near a spinning wheel, no matter what the speed.

CAUTION!

- Spinning the wheels may lead to gear box overheating and failure. Allow the vehicle to rest with the gear box in NEUTRAL for at least one minute after every five rocking-motion cycles. This will minimize overheating and reduce the risk of gear box failure during prolonged efforts to free a stuck vehicle.
- When "rocking" a stuck vehicle by shifting between DRIVE and REVERSE, do not spin the wheels faster than 15 mph (24 km/h), or drivetrain damage may result.
- Spinning the wheels too fast may lead to gear box overheating and failure. It can also damage the tires. Do not spin the wheels above 30 mph (48 km/h) while in gear (no gear box shifting occurring).

TOWING A DISABLED VEHICLE

DESCRIPTION

This section describes procedures for towing a disabled vehicle using a commercial towing service.

Towing Condition	Wheels OFF The Ground	Single Speed Gear Box
Flat Tow	NONE	NOT ALLOWED
Wheel Lift Or Dolly Tow	Front	NOT ALLOWED
	Rear	NOT ALLOWED
Flatbed	ALL	ONLY METHOD

Proper towing or lifting equipment is required to prevent damage to your vehicle. Use only tow bars and other equipment designed for this purpose, following equipment manufacturer's instructions. Use of safety chains is mandatory. Attach a tow bar or other towing device to main structural members of the vehicle, not to fascia/bumpers or associated brackets. State and local laws regarding vehicles under tow must be observed.

If you must use the accessories (wipers, defrosters, etc.) while being towed, the Start button must be in the ON/RUN mode.

CAUTION!

- Do not use sling type equipment when towing. Vehicle damage may occur.
- When securing the vehicle to a flatbed truck, do not attach to front or rear suspension components. Damage to your vehicle may result from improper towing.

(Continued)

CAUTION!

- FCA does not recommend towing this vehicle using a tow dolly. Vehicle damage may occur.
- If the vehicle being towed requires steering, the vehicle must be in the ACC or ON/RUN mode, not in the LOCK/OFF mode.

WITHOUT THE KEY FOB

Special care must be taken when the vehicle is towed with the Start button in the OFF mode. The only approved method of towing without the key fob is with a flatbed truck. Proper towing equipment is necessary to prevent damage to the vehicle.

EMERGENCY TOW HOOKS — IF EQUIPPED

If your vehicle is equipped with tow hooks, they are mounted in the front and the rear fascia/bumpers.

NOTE:

For off-road recovery, it is recommended to use both of the front tow hooks to minimize the risk of damage to the vehicle. Always use an appropriately rated tow strap.

**Front Tow Hooks****Rear Tow Hook****WARNING!**

- Stand clear of vehicles when pulling with tow hooks. Tow straps may become disengaged, causing serious injury.

*(Continued)***WARNING!**

- Do not use a chain for freeing a stuck vehicle. Chains may break, causing serious injury or death.
- Failure to follow proper tow hook usage may cause components to break resulting in serious injury or death.

CAUTION!

- Tow hooks are for emergency use only, to rescue a vehicle stranded off road. Tow straps are recommended when towing the vehicle, chains may cause vehicle damage.
- The tow hooks must not be used to move the vehicle off the road or where there are obstacles.
- Do not use the tow hooks for tow truck hookup or highway towing.
- Do not use the tow hooks to pull a vehicle onto a flatbed truck.
- Do not use the tow hooks to free a stuck vehicle ➞ page 212.
- Damage to your vehicle may occur if these guidelines are not followed ➞ page 212.

ENHANCED ACCIDENT RESPONSE SYSTEM (EARS)

This vehicle is equipped with an Enhanced Accident Response System.

This feature is a communication network that takes effect in the event of an impact. ➡ page 61

EVENT DATA RECORDER (EDR)

This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record data that will assist in understanding how a vehicle's systems performed under certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle.

MAINTENANCE AND VEHICLE CARE

SAFETY TIPS

TRANSPORTING PASSENGERS

NEVER TRANSPORT PASSENGERS IN THE CARGO AREA.

WARNING!

- Do not leave children or animals inside parked vehicles in hot weather. Interior heat buildup may cause serious injury or death.
- It is extremely dangerous to ride in a cargo area, inside or outside of a vehicle. In a collision, people riding in these areas are more likely to be seriously injured or killed.
- Do not allow people to ride in any area of your vehicle that is not equipped with seats and seat belts.
- Be sure everyone in your vehicle is in a seat and using a seat belt properly.

TRANSPORTING PETS

Air Bags deploying in the front seat could harm your pet. An unrestrained pet will be thrown about and possibly injured, or injure a passenger during panic braking or in a collision.

Pets should be restrained in the rear seat (if equipped) in pet harnesses or pet carriers that are secured by seat belts.

CONNECTED VEHICLES

Privacy of any wireless and wired communications cannot be ensured. Third parties may unlawfully intercept information and private communications without your consent. For further information, refer to “Data Collection & Privacy” in your Uconnect Radio Instruction Manual or “Onboard Diagnostic System (OBD II) Cybersecurity”.

WARNING!

It is not possible to know or to predict all of the possible outcomes if your vehicle's systems are breached. It may be possible that vehicle systems, including safety related systems, could be impaired or a loss of vehicle control could occur that may result in an accident involving serious injury or death.

SAFETY CHECKS YOU SHOULD MAKE INSIDE THE VEHICLE

Seat Belts

Inspect the seat belt system periodically, checking for cuts, frays, and loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the system.

If your vehicle is involved in a collision, or if you have questions regarding seat belt or retractor conditions, take your vehicle to an authorized FCA dealer or authorized FCA Certified Collision Care Program facility for inspection.

Air Bag Warning Light



The Air Bag Warning Light will turn on for two to eight seconds as a bulb check when the ignition switch is first placed in the ON/RUN position. If the light is either not on during starting, stays on, or turns on while driving, have the system inspected at an authorized dealer as soon as possible. This light will illuminate with a single chime when a fault with the Air Bag Warning Light has been detected, it will stay on until the fault is removed. If the light comes on intermittently or remains on while driving, have an authorized dealer service the vehicle immediately. See ➞ page 45 for further information.

Defroster

Check operation by selecting the defrost mode and place the blower control on high speed. You should be able to feel the air directed against the windshield. See an authorized dealer for service if your defroster is inoperable.

Floor Mat Safety Information

Always use floor mats designed to fit your vehicle. Only use a floor mat that does not interfere with the

operation of the pedal assemblies. Only use a floor mat that is securely attached using the floor mat fasteners so it cannot slip out of position and interfere with the pedal assemblies or impair safe operation of your vehicle in other ways.

WARNING!

An improperly attached, damaged, folded, or stacked floor mat, or damaged floor mat fasteners may cause your floor mat to interfere with the accelerator, brake, or clutch pedals and cause a loss of vehicle control. To prevent **SERIOUS INJURY** or **DEATH**:

-  ALWAYS securely attach your floor mat using the floor mat fasteners. **DO NOT** install your floor mat upside down or turn your floor mat over. Lightly pull to confirm mat is secured using the floor mat fasteners on a regular basis.
-  ALWAYS REMOVE THE EXISTING FLOOR MAT FROM THE VEHICLE before installing any other floor mat. NEVER install or stack an additional floor mat on top of an existing floor mat.
- ONLY install floor mats designed to fit your vehicle. NEVER install a floor mat that cannot be properly attached and secured to your vehicle. If a floor mat needs to be replaced, only use a FCA approved floor mat for the specific make, model, and year of your vehicle.
- ONLY use the driver's side floor mat on the driver's side floor area. To check for interference, with the vehicle properly parked with the vehicle off, fully

(Continued)

WARNING!

depress the accelerator and the brake to check for interference. If your floor mat interferes with the operation of any pedal, or is not secure to the floor, remove the floor mat from the vehicle and place the floor mat in your trunk.

- ONLY use the passenger's side floor mat on the passenger's side floor area.
- ALWAYS make sure objects cannot fall or slide into the driver's side floor area when the vehicle is moving. Objects can become trapped under accelerator, brake, or clutch pedals and could cause a loss of vehicle control.
- NEVER place any objects under the floor mat (e.g., towels, keys, etc.). These objects could change the position of the floor mat and may cause interference with the accelerator, brake, or clutch pedals.
- If the vehicle carpet has been removed and re-installed, always properly attach carpet to the floor and check the floor mat fasteners are secure to the vehicle carpet. Fully depress each pedal to check for interference with the accelerator, brake, or clutch pedals then re-install the floor mats.
- It is recommended to only use mild soap and water to clean your floor mats. After cleaning, always check your floor mat has been properly installed and is secured to your vehicle using the floor mat fasteners by lightly pulling mat.

PERIODIC SAFETY CHECKS YOU SHOULD MAKE OUTSIDE THE VEHICLE

Tires

Examine tires for excessive tread wear and uneven wear patterns. Check for stones, nails, glass, or other objects lodged in the tread or sidewall. Inspect the tread for cuts and cracks. Inspect sidewalls for cuts, cracks, and bulges. Check the lug nut/bolt torque for tightness. Check the tires (including spare) for proper cold inflation pressure.

Lights

Have someone observe the operation of brake lights and exterior lights while you work the controls. Check turn signal and high beam indicator lights on the instrument panel.

Door Latches

Check for proper closing, latching, and locking.

Fluid Leaks

Check area under vehicle after overnight parking for fluid leaks. If fluid leaks are detected, the cause should be located and corrected immediately.

SCHEDULED MAINTENANCE

DESCRIPTION

The Scheduled Maintenance services listed in this manual must be done at the times or mileages specified to protect the vehicle warranty and ensure the

best vehicle performance and reliability. More frequent maintenance may be needed for vehicles in severe operating conditions, such as dusty areas and very short trip driving. Inspection and service should also be done anytime a malfunction is suspected.

Once A Month Or Before A Long Trip:

- Check the operation of the interior and exterior lights

- Check the 12V battery terminals, cables and connections
- Check the brake pads, rotors, brake operation and fluid level
- Check the steering, suspension, chassis components and axle boots

- Check the wiper and washer operation, wiper blades and reservoir
- Check the tire pressure
- Check the coolant fluid reservoirs

MAINTENANCE PLAN

Refer to the Maintenance Plan for the required maintenance intervals.

Mileage Or Time Passed (Whichever Comes First)	10,000	20,000	30,000	40,000	50,000	60,000	70,000	80,000	90,000	100,000	110,000	120,000	130,000	140,000	150,000
Or Years:	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Or Kilometers:	16,000	32,000	48,000	64,000	80,000	96,000	112,000	128,000	144,000	160,000	176,000	192,000	208,000	224,000	240,000
Additional Inspections															
Rotate the tires every 10,000 or if tread depth difference is 2/32" (1.5 mm) or greater, whichever comes first.	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Inspect the CV/Universal joints.	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Inspect front suspension, tie rod ends, and replace if necessary.		X		X		X		X		X		X		X	
Inspect the brake linings, parking brake function.		X		X		X		X		X		X		X	

Mileage Or Time Passed (Whichever Comes First)	10,000	20,000	30,000	40,000	50,000	60,000	70,000	80,000	90,000	100,000	110,000	120,000	130,000	140,000	150,000
Or Years:	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Or Kilometers:	16,000	32,000	48,000	64,000	80,000	96,000	112,000	128,000	144,000	160,000	176,000	192,000	208,000	224,000	240,000
Additional Maintenance															
Replace the cabin air filter.	To be replaced every 12,000 miles (19,000 km).														
Flush and replace the coolant at 10 years or 150,000 miles (240,000 km) whichever comes first.										X					X
Drain and replace the Electric Drive Module (EDM) oil.															X

WARNING!

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and affect vehicle handling and performance. This could cause an accident.

UNDERHOOD COMPARTMENT

EV COMPARTMENT



- 1 – Windshield Washer Bottle
- 2 – Coolant Surge Tank and Pressure Cap

- 3 – Brake Master Cylinder Fluid
- 4 – Power Distribution Center (Fuses)

ADDING WASHER FLUID

The instrument cluster display will indicate when the washer fluid level is low. When the sensor detects a low fluid level, the Low Washer Fluid Warning Light will turn on and the "Washer Fluid Low" message will be displayed.

The fluid reservoir for the windshield washers and the rear window washer is shared. The fluid reservoir is located in the underhood compartment, be sure to check the fluid level at regular intervals. Fill the reservoir with windshield washer solvent only (not radiator antifreeze). When refilling the washer fluid reservoir, take some washer fluid and apply it to a cloth or towel and wipe clean the wiper blades, this will help blade performance. To prevent freeze-up of your windshield washer system in cold weather, select a solution or mixture that meets or exceeds the temperature range of your climate. This rating information can be found on most washer fluid containers.

NOTE:

Only use Mopar® or commercial windshield solvent to fill the washer reservoir.

WARNING!

Commercially available windshield washer solvents are flammable. They could ignite and burn you. Care must be exercised when filling or working around the washer solution.

CAUTION!

- Avoid using washer solvents that contain rain repellents as they may affect the performance of the washer level sensor and cause permanent damage to the sensor. Rain repellent washer fluids and glass coatings can also affect the performance of your wiper blades that can cause streaking, hazing/smearing, chatter and other noises.
- Do not use vinegar-and-water mixtures as windshield washer fluid. Vinegar is acidic and can damage the seals and internal components of the washer system, leading to reduced performance or clogging.

MAINTENANCE-FREE BATTERY

Your vehicle is equipped with a maintenance-free battery. Water will never have to be added, and periodic maintenance is not required.

WARNING!

- Battery fluid is a corrosive acid solution and can burn or even blind you. Do not allow battery fluid to contact your eyes, skin, or clothing. Do not lean over a battery when attaching clamps. If acid splashes in eyes or on skin, flush the area immediately with large amounts of water. Refer to Jump Starting Procedure.
- Battery gas is flammable and explosive. Keep flame or sparks away from the battery. Do not

(Continued)

WARNING!

- use a booster battery or any other booster source with an output greater than 12 Volts. Do not allow cable clamps to touch each other.
- Battery posts, terminals, and related accessories contain lead and lead compounds. Wash hands after handling.

CAUTION!

- It is essential when replacing the cables on the battery that the positive cable is attached to the positive post and the negative cable is attached to the negative post. Battery posts are marked positive (+) and negative (-) and are identified on the battery case. Cable clamps should be tight on the terminal posts and free of corrosion.
- If a "fast charger" is used while the battery is in the vehicle, disconnect both vehicle battery cables before connecting the charger to the battery. Do not use a "fast charger" to provide starting voltage.

PRESSURE WASHING

Cleaning the underhood compartment with a high pressure washer is not recommended.

CAUTION!

Precautions have been taken to safeguard all parts and connections however, the pressures generated by these machines is such that complete protection against water ingress cannot be guaranteed.

VEHICLE MAINTENANCE

DESCRIPTION

An authorized dealer has the qualified service personnel, special tools, and equipment to perform all service operations in an expert manner. Service Manuals are available which include detailed service information for your vehicle. Refer to these Service Manuals before attempting any procedure yourself.

NOTE:

Intentional tampering with emissions control systems may void your warranty and could result in civil penalties being assessed against you.

WARNING!

You can be badly injured working on or around a motor vehicle. Only do service work for which you have the knowledge and the proper equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.

AIR CONDITIONER MAINTENANCE

For best possible performance, your air conditioner should be checked and serviced by an authorized dealer at the start of each warm season. This service should include cleaning of the condenser fins and a performance test.

WARNING!

- Use only refrigerants and compressor lubricants approved by the manufacturer for your air conditioning system. Some unapproved refrigerants are flammable and can explode, injuring you. Other unapproved refrigerants or lubricants can cause the system to fail, requiring costly repairs. Refer to Warranty Information Book, located in your owner's information kit, for further warranty information.
- The air conditioning system contains refrigerant under high pressure. To avoid risk of personal injury or damage to the system, adding refrigerant or any repair requiring lines to be disconnected should be done by an experienced technician.

CAUTION!

Do not use chemical flushes in your air conditioning system as the chemicals can damage your air conditioning components. Such damage is not covered by the New Vehicle Limited Warranty.

Refrigerant Recovery And Recycling — R-1234yf

R-1234yf Air Conditioning Refrigerant is a Hydrofluoroolefin (HFO) that is endorsed by the Environmental Protection Agency and is an ozone-friendly substance with a low global-warming potential. The manufacturer recommends that air conditioning service be performed by an authorized dealer using recovery and recycling equipment.


NOTE:

Use only the manufacturer approved A/C system PAG compressor oil, and refrigerants.

Cabin Air Filter Replacement

The cabin air filter is located in the fresh air inlet behind the glove compartment. Perform the following procedure to replace the filter:

- Open the glove compartment and remove all contents.
- With the glove compartment door open, remove the glove compartment tension tether and tether clip by sliding the clip toward the face of the glove compartment door. Lift the clip out of glove compartment door and release into dash panel.

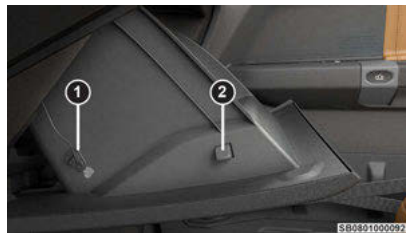

Left Side Of Glove Compartment


- 1 — Tension Tether
- 2 — Glove Compartment Door Travel Stop

- Pull the right hand side of the glove compartment door toward the rear of the vehicle to disengage the glove compartment door from its hinges.

NOTE:


When disengaging the glove compartment door from its hinges, there will be some resistance.

4. There are glove compartment travel stops on both sides of the glove compartment door, angle the glove compartment in order to allow each side travel stop to release the glove compartment from the dash panel.

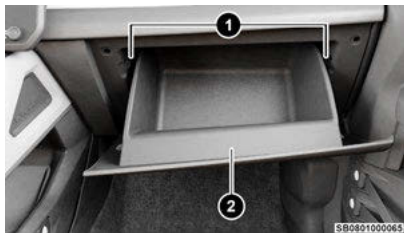**Glove Compartment**

- 1 — Glove Compartment Travel Stops
- 2 — Glove Compartment Door

5. On the right side of cover pull the tab forward to release the cover, then slide to the right to remove the cabin air filter cover from the HVAC housing.

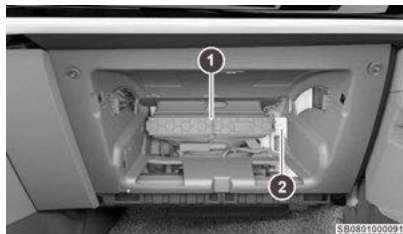**Cabin Air Filter Cover**

- 1 — Cabin Air Filter Cover
- 2 — Retaining Tab

6. Remove the cabin air filter by pulling it straight out of the housing.

**Cabin Air Filter**

- 1 — Cabin Air Filter

7. Install the cabin air filter with the arrow on the filter pointing toward the floor. When installing the filter cover, make sure the retaining tabs fully engage into the HVAC housing.

CAUTION!

The cabin air filter is identified with an arrow to indicate airflow direction through the filter. Failure to properly install the filter will result in the need to replace it more often.

8. Align the lower tabs on the access panel and then push the top in to lock it securely back into the dash panel.
9. Angle the door to get the glove compartment travel stops back inside the dash panel.
10. Reinstall the glove compartment door on the door hinge.
11. Reattach the glove compartment tension tether by inserting the tether clip in the glove compartment and sliding the clip away from the face of the glove compartment door.

NOTE:

Ensure the glove compartment door hinges and glove compartment travel stops are fully engaged.

BODY LUBRICATION

Locks and all body pivot points, including such items as seat tracks, door hinge pivot points and rollers, liftgate, tailgate, decklid, sliding doors and hood hinges, should be lubricated periodically with a lithium based grease, such as Mopar® Spray White Lube to ensure quiet, easy operation and to protect against rust and wear. Prior to the application of any lubricant, the parts concerned should be wiped clean to remove dust and grit; after lubricating excess oil and grease should be removed. Particular attention should also be given to

hood latching components to ensure proper function. When performing other underhood services, the hood latch release mechanism, and safety catch should be cleaned and lubricated.

The external lock cylinders should be lubricated twice a year, preferably in the Fall and Spring. Apply a small amount of a high quality lubricant, such as Mopar® Lock Cylinder Lubricant directly into the lock cylinder.

WINDSHIELD WIPER BLADES

Clean the rubber edges of the wiper blades and the windshield periodically with a sponge or soft cloth and a mild nonabrasive cleaner. This will remove accumulations of salt or road film.

Operation of the wipers on dry glass for long periods may cause deterioration of the wiper blades. Always use washer fluid when using the wipers to remove salt or dirt from a dry windshield.

Avoid using the wiper blades to remove frost or ice from the windshield. Keep the blade rubber out of contact with petroleum products such as engine oil, gasoline, etc.

NOTE:

Life expectancy of wiper blades varies depending on geographical area and frequency of use. Poor performance of blades may be present with chattering, marks, water lines or wet spots. If any of these conditions are present, clean the wiper blades or replace as necessary.

The wiper blades and wiper arms should be inspected periodically, not just when wiper performance problems are experienced. This inspection should include the following points:

- Wear or uneven edges
- Foreign material
- Hardening or cracking
- Deformation or fatigue

If a wiper blade or wiper arm is damaged, replace the affected wiper arm or blade with a new unit. Do not attempt to repair a wiper arm or blade that is damaged.

Wiper Blade Removal/Installation

CAUTION!

Do not allow the wiper arm to spring back against the glass without the wiper blade in place or the glass may be damaged.

1. Lift the wiper arm to raise the wiper blade off of the glass, until the wiper arm is in the full up position.



Wiper Blade With Release Tab In Locked Position

- 1 — Wiper Blade
- 2 — Wiper Arm
- 3 — Release Tab

2. To disengage the wiper blade from the wiper arm, push the release tab on the wiper blade and while holding the wiper arm with one hand, slide the wiper blade down towards the base of the wiper arm.



B0804000314US

Wiper Blade With Release Tab In Unlocked Position

- 1 — Wiper Blade
- 2 — Wiper Arm J Hook
- 3 — J Hook Retainer

3. With the wiper blade disengaged, remove the wiper blade from the wiper arm.
4. Gently lower the wiper arm onto the glass.

Installing The Front Wipers

1. Lift the wiper arm off of the glass, until the wiper arm is in the full up position.
2. Position the wiper blade near the hook on the tip of the wiper arm.

- Slide the wiper blade up into the hook on the wiper arm, latch engagement will be accompanied by an audible click.
- Gently lower the wiper blade onto the glass.


Rear Wiper Blade Removal/Installation

- Lift the wiper arm to raise the wiper blade from the vehicle.



Rear Wiper Assembly

- To disengage the wiper blade from the wiper arm, push the release tab on the wiper blade and while holding the wiper arm with one hand, slide the wiper blade down towards the base of the wiper arm.

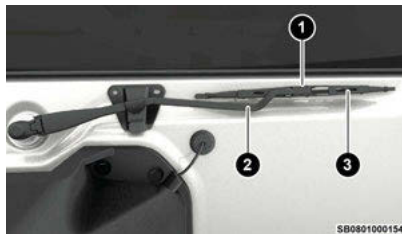

Wiper Blade And Wiper Arm

- Release Tab
- Wiper Arm
- Wiper Blade

- Gently set the arm onto the vehicle.

Installing The Rear Wiper

- Lift the wiper arm off of the vehicle.
- Position the wiper blade near the hook on the tip of the wiper arm.
- Slide the wiper blade up into the hook on the wiper arm, latch engagement will be accompanied by an audible click.
- Gently lower the wiper blade onto the vehicle.

COOLING SYSTEM

WARNING!

- Continued loss of coolant can cause damage to the high voltage battery. Damage to the high

(Continued)

WARNING!

voltage battery can create a risk of fire that could result to property damage, serious injury or death. If the cooling system requires service, see your authorized dealer.

- You or others can be badly burned by hot coolant (antifreeze) or steam from your radiator. If you see or hear steam coming from under the hood, do not open the hood until the radiator has had time to cool. Never open a cooling system pressure cap when the radiator or coolant bottle is hot.
- Some areas under the hood remain very hot for a while after driving or charging and may cause serious burns if touched.
- Keep hands, tools, clothing, and jewelry away from the radiator cooling fan when the hood is raised. The cooling fan may start operating at any time, including during charging. Hands or clothing caught in a rotating fan may cause serious injury.
- When working near the radiator cooling fan, disconnect the fan motor lead and place the start button in the OFF mode. The fan is temperature controlled and can start at any time the start button is ON.

Coolant Checks

Check the coolant (antifreeze) protection every 12 months (before the onset of freezing weather, where applicable). If the coolant is dirty or rusty in appearance, the system should be drained, flushed and refilled with fresh OAT coolant (conforming to MS.90032) by an authorized dealer. Check the front of the A/C condenser (if equipped) or radiator for any

accumulation of bugs, leaves, etc. If dirty, clean by gently spraying water from a garden hose vertically down the face of the A/C condenser (if equipped) or the back of the radiator core.

Check the cooling system hoses for brittle rubber, cracking, tears, cuts, and tightness of the connection at the coolant recovery bottle and radiator. Inspect the entire system for leaks. **DO NOT REMOVE THE COOLANT PRESSURE CAP WHEN THE COOLING SYSTEM IS HOT.**

Cooling System — Drain, Flush And Refill

NOTE:

Some vehicles require special tools to add coolant properly. Failure to fill these systems properly could lead to severe high voltage battery damage. If any coolant is needed to be added to the system please contact an authorized dealer.

If the coolant (antifreeze) is dirty or contains visible sediment, have an authorized dealer clean and flush with OAT coolant (conforming to MS.90032).

For the proper maintenance intervals, see  page 216.

Electric/Battery Coolant System

These coolant systems must be serviced by an authorized dealer. If the coolant level is below what is specified on the reservoir, contact an authorized dealer for service.

These systems require the use of high purity water, such as deionized, or distilled water, when mixing the water and coolant (antifreeze) solution. The use of lower quality water will reduce the amount of corrosion protection in the cooling systems. If the coolant level

of the battery coolant system is low, the Hybrid Electric Vehicle System Service Light will be illuminated on the instrument cluster.

Selection Of Coolant

NOTE:

- Mixing of coolant (antifreeze) other than specified Organic Additive Technology (OAT) coolant, may result in vehicle damage and may decrease corrosion protection. OAT coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) coolant or any “globally compatible” coolant. If a non-OAT coolant is introduced into the cooling system in an emergency, the cooling system will need to be drained, flushed, and refilled with fresh OAT coolant (conforming to MS.90032), by an authorized dealer as soon as possible.
- Do not use water alone or alcohol-based coolant (antifreeze) products. Do not use additional rust inhibitors or anti-rust products, as they may not be compatible with the radiator coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based coolant. Use of propylene glycol-based coolant is not recommended.
- Some vehicles require special tools to add coolant properly. Failure to fill these systems properly could lead to severe internal high voltage battery damage. If any coolant is needed to be added to the system please contact an authorized dealer.

Adding Coolant

Your vehicle has been built with an improved coolant (OAT coolant conforming to MS.90032) that allows extended maintenance intervals. This coolant (antifreeze) can be used up to 10 years or 150,000 miles (240,000 km) before replacement. To prevent reducing this extended maintenance period, it is important to use the same coolant (OAT coolant conforming to MS.90032) throughout the life of your vehicle.

Please review these recommendations for using Organic Additive Technology (OAT) coolant that meets the requirements of the manufacturer Material Standard MS.90032. When adding coolant (antifreeze):

- We recommend using Mopar® Antifreeze/Coolant 10 Year/150,000 Mile (240,000 km) Formula OAT (Organic Additive Technology) that meets the requirements of the manufacturer Material Standard MS.90032.
- Mix a minimum solution of 50% OAT coolant that meets the requirements of the manufacturer Material Standard MS.90032 and distilled water. Use higher concentrations (not to exceed 70%) if temperatures below -34°F (-37°C) are anticipated. Please contact an authorized dealer for assistance.
- Use only high purity water such as distilled or deionized water when mixing the water/coolant solution. The use of lower quality water will reduce the amount of corrosion protection in the cooling system.

NOTE:

- It is the owner's responsibility to maintain the proper level of protection against freezing according to the temperatures occurring in the area where the vehicle is operated.
- Use care when filling under hood fluids such as washer fluid, antifreeze, etc., to minimize spillage into the underhood compartment. Any excess fluid that is spilled into the underhood compartment should be removed using compressed air or an absorbent cloth.
- Some vehicles require special tools to add coolant properly. Failure to fill these systems properly could lead to severe internal high voltage battery damage. If any coolant is needed to be added to the system, please contact an authorized dealer.
- Mixing coolant types is not recommended and can result in cooling system damage. If HOAT and OAT coolant are mixed in an emergency, have an authorized dealer drain, flush, and refill with OAT coolant (conforming to MS.90032) as soon as possible.

Cooling System Pressure Cap

The cap must be fully tightened to prevent loss of coolant (antifreeze), and to ensure that coolant will return to the radiator from the coolant expansion bottle/recovery tank if so equipped.

The cap should be inspected and cleaned if there is any accumulation of foreign material on the sealing surfaces.

WARNING!

- Do not open hot cooling system. Never add coolant (antifreeze) when the vehicle is overheated. Do not loosen or remove the cap to cool an overheated vehicle. Heat causes pressure to build up in the cooling system. To prevent scalding or injury, do not remove the pressure cap while the system is hot or under pressure.
- Do not use a pressure cap other than the one specified for your vehicle. Personal injury or vehicle damage may result.

Disposal Of Used Coolant

Used ethylene glycol-based coolant (antifreeze) OAT or HOAT, is a regulated substance requiring proper disposal. Check with your local authorities to determine the disposal rules for your community. To prevent ingestion by animals or children, do not store ethylene glycol-based coolant in open containers or allow it to remain in puddles on the ground, clean up any ground spills immediately. If ingested, seek emergency assistance immediately.

Coolant Level

The coolant bottle provides a quick visual method for determining that the coolant level is adequate. With the start button OFF and cold, the level of the coolant (antifreeze) in the bottle should be between the ranges indicated on the bottle.

The radiator normally remains completely full, so there is no need to remove the radiator/coolant pressure cap unless checking for coolant freeze point or replacing

coolant. Advise your service attendant of this. As long as the operating temperature is satisfactory, the coolant bottle need only be checked once a month.

When additional coolant is needed to maintain the proper level, only OAT coolant that meets the requirements of the manufacturer Material Standard MS.90032 should be added to the coolant bottle. Do not overfill.

Cooling System Notes

NOTE:

When the vehicle is stopped after a few miles/kilometers of operation, you may observe vapor coming from the underhood compartment. This is normally a result of moisture from rain, snow, or high humidity accumulating on the radiator and being vaporized.

If an examination of your underhood compartment shows no evidence of radiator or hose leaks, the vehicle may be safely driven. The vapor will soon dissipate.

- Do not overfill the coolant expansion bottle.
- Check the coolant freeze point in the radiator and in the coolant expansion bottle. If coolant needs to be added, the contents of the coolant expansion bottle must also be protected against freezing.
- If frequent coolant additions are required, the cooling system should be pressure tested for leaks.
- Maintain coolant concentration at a minimum of 50% OAT coolant (conforming to MS.90032) and distilled water for proper corrosion protection of your cooling system.

- Make sure that the coolant expansion bottle overflow hoses are not kinked or obstructed.
- Keep the front of the radiator clean. If your vehicle is equipped with air conditioning, keep the front of the condenser clean.

BRAKE SYSTEM

In order to ensure brake system performance, all brake system components should be inspected periodically. For the proper maintenance intervals ➞ page 216.

WARNING!

Riding the brakes can lead to brake failure and possibly a collision. Driving with your foot resting or riding on the brake pedal can result in abnormally high brake temperatures, excessive lining wear, and possible brake damage. You would not have your full braking capacity in an emergency.

Fluid Level Check — Brake Master Cylinder

The fluid level of the master cylinder should be checked whenever the vehicle is serviced, or immediately if the Brake System Warning Light is on. If necessary, add fluid to bring level within the designated marks on the side of the reservoir of the brake master cylinder. Be sure to clean the top of the master cylinder area before removing cap. With disc brakes, fluid level can be expected to fall as the brake pads wear. Brake fluid level should be checked when pads are replaced. If the brake fluid is abnormally low, check the system for leaks ➞ page 258.

WARNING!

- Use only the manufacturer recommended brake fluid ➞ page 258. Using the wrong type of brake fluid can severely damage your brake system and/or impair its performance. The proper type of brake fluid for your vehicle is also identified on the original factory installed hydraulic master cylinder reservoir.
- To avoid contamination from foreign matter or moisture, use only new brake fluid or fluid that has been in a tightly closed container. Keep the master cylinder reservoir cap secured at all times. Brake fluid in an open container absorbs moisture from the air resulting in a lower boiling point. This may cause it to boil unexpectedly during hard or prolonged braking, resulting in sudden brake failure. This could result in a collision.
- Overfilling the brake fluid reservoir can result in spilling brake fluid on hot underhood parts, causing the brake fluid to catch fire. Brake fluid can also damage painted and vinyl surfaces, care should be taken to avoid its contact with these surfaces.
- Do not allow petroleum-based fluid to contaminate the brake fluid. Brake seal components could be damaged, causing partial or complete brake failure. This could result in a collision.

FRONT/REAR AXLE FLUID

For normal service, periodic fluid level checks are not required. When the vehicle is serviced for other reasons the exterior surfaces of the axle assembly should be

inspected. If gear oil leakage is suspected inspect the fluid level.

Fluid Level Check

Lubricant should be approximately 1/8 inch (3 mm) below the bottom edge of the oil fill hole.

NOTE:

Make sure that the vehicle is level and supported by the axles.

Adding Fluid

Add lubricant only at the fill hole and only to the level specified.

Selection Of Lubricant

Use only manufacturer recommended fluid ➞ page 258.

FUSES

GENERAL INFORMATION

NOTE:


- When replacing a blown fuse, always use an appropriate replacement fuse with the same amp rating as the original fuse. Never replace a fuse with another fuse of higher amp rating. Never replace a blown fuse with metal wires or any other material. Do not place a fuse inside a circuit breaker cavity or vice versa. Failure to use proper fuses may result in serious personal injury, fire and/or property damage.

- Before replacing a fuse, make sure that the start button is off and that all the other services are switched off and/or disengaged.
- If the replaced fuse blows again, contact an authorized dealer.
- If a general protection fuse for safety systems (air bag system, braking system), power unit systems, (propulsion system, transmission system) steering system or Body Control Module (BCM) blows, contact an authorized dealer.

The fuses protect electrical systems against excessive current.

When a device does not work, you must check the fuse element inside the blade fuse for a break/melt.

Also, please be aware that using power outlets for extended periods of time with the start button off may result in vehicle battery discharge.

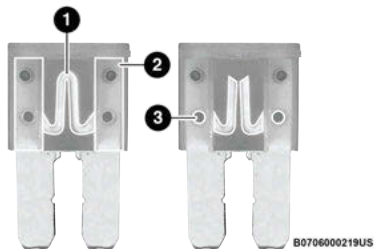

Blade Fuses


- 1 — Fuse Element
- 2 — Blade Fuse with a good/functional fuse element
- 3 — Blade Fuse with a bad/not functional fuse element (blown fuse)

POWER DISTRIBUTION CENTER

The Power Distribution Centers (PDC) are located in the underhood compartment. This center contains cartridge fuses, mini fuses, and relays. The PDC top cover is labeled with each serviceable fuse/relay location, function, and size.

CAUTION!


When installing the power distribution center cover, it is important to ensure the cover is properly positioned and fully latched. Failure to do so may allow water to get into the power distribution center and possibly result in an electrical system failure.

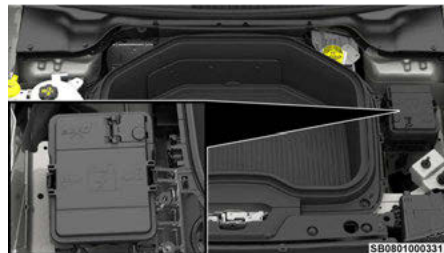

Power Distribution Center Location

To access the Power Distribution Center the closeout panel has to be removed.

Remove the closeout by pushing on the release pins. Lift to unsnap the closeout at the inboard side of the storage bin.

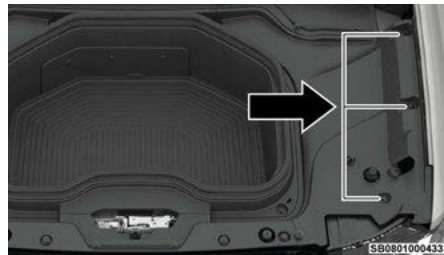

Closeout Push Pins

Fuse Number	Type	Rating	Description
F01	FUSE ARRAY	SHUNT	CRANK BATTERY / FEED FROM rPDC
F02	FUSE ARRAY	80 Amp	ELECTRIC POWER STEERING MODULE (EPS) #1
F03	-	-	NOT POPULATED
F04	FUSE ARRAY	250 Amp 300 Amp	IDCM
F05	FUSE ARRAY	80 Amp	ELECTRIC POWER STEERING MODULE (EPS) #2
F06	FUSE ARRAY	SHUNT	AUX BATTERY
F07	FUSE ARRAY LOWER COVER	100 Amp	(w/o L2) + : RAD FAN
F08	-	-	NOT POPULATED
F09	-	-	NOT POPULATED
F10	-	-	NOT POPULATED
F11	-	-	NOT POPULATED
F12	-	-	NOT POPULATED
F13	-	-	NOT POPULATED
F14	-	-	NOT POPULATED
F15	-	-	NOT POPULATED - ROUTED PARALLEL WITH F16
F16	-	-	NOT POPULATED
F17	20 Amp Yellow	-	ELECTRIC OIL PUMP - EDM FRONT (400V)
F18	-	-	NOT POPULATED
F19	50 Amp Red	-	BSM VALVE
F20	-	-	NOT POPULATED
F21	-	-	NOT POPULATED
F22	-	-	NOT POPULATED
F23	-	10 Amp Red	(BEV) CHARGE PORT INDICATOR (CPIM) / ELECTRIC AC COMPRESSOR (IOD)

Fuse Number	Type	Rating	Description
F24	–	10 Amp Red	(BEV) AHP (AUX HEATER PUMP)
F25	–	5 Amp Tan	ELECTRIC AC COMPRESSOR / ELECTRIC EXPANSION VALVE MODULE (EEXV)
F26	–	20 Amp Yellow	SLM FEED_LT
F27	–	–	NOT POPULATED
F28	–	15 Amp Blue	COOLANT PROPORTIONING VALVE / HTL & LTR BYPASS VALVE
F29	–	–	NOT POPULATED
F30	–	–	NOT POPULATED
F31	–	–	NOT POPULATED
F32	–	5 Amp Tan	AUTOMATIC GEARBOX SHIFTER MODULE (AGSM/GSM)
F33	–	5 Amp Tan	ELECTRIC COOLANT HEATER (ECH) (BEV)
F34	–	20 Amp Yellow	HORN
F35	–	20 Amp Yellow	PECP (POWER ELECTRONICS COOLANT PUMP)
F36	–	–	NOT POPULATED
F37	–	20 Amp Yellow	(BEV) BATTERY COOLANT PUMP (BCP)
F38	–	–	NOT POPULATED
F39	–	10 Amp Red	ELECTRIC POWER STEERING (EPS) #1
F40	–	20 Amp Yellow	ELECTRIC POWER STEERING (EPS) #2 / BRAKE SYSTEM MODULE (BSM) #2 / ESCL
F41	–	10 Amp Red	BSM #1 / MOD_SLM / GRILL / BADGE LAMP
F42	–	10 Amp Red	LONG RANGE RADAR FRONT – IF EQUIPPED
F43	20 Amp Yellow	–	RR POWER OUTLET (12V APO)
F44	–	–	NOT POPULATED
F45	–	–	NOT POPULATED
F46	–	–	NOT POPULATED
F47	–	–	NOT POPULATED
F48	–	–	NOT POPULATED
F49	20 Amp Blue	–	FRONT DE-ICER
F50	40 Amp Green	–	ECC (HVAC) BLOWER

Fuse Number	Type	Rating	Description
F51	–	–	NOT POPULATED
F52	–	–	NOT POPULATED
F53	–	20 Amp Yellow	RADIO (CMCM)
F54	–	20 Amp Yellow	SLM FEED_RT
F55	–	–	NOT POPULATED
F56	–	–	NOT POPULATED
F57	–	20 Amp Yellow	CAMERA WASHER - FRONT
F58	–	10 Amp Red	PORT DIAGNOSTICS
F59	–	–	NOT POPULATED
F60	–	20 Amp Yellow	(BEV) PECP-2 (B+)
F61	–	5 Amp Tan	MID RANGE RADAR REAR L&R / MID RANGE RADAR FRONT L&R
F62	–	–	NOT POPULATED
F63	–	10 Amp Red	STEERING COLUMN CONTROL MODULE (SCCM)
F64	–	10 Amp Red	OUTSIDE HEAT EXCHANGE EXPANSION VALVE MODULE (OEXV) / CHILLER EXPANSION VALVE MODULE (CEXV)
F65	–	7.5 Amp Brown	HEATED WINDSHIELD NOZZLE
F66	–	15 Amp Blue	ACTIVE SWAY BAR SYSTEM (ASBS) / ELECTRONIC STEERING COLUMN LOCK (ESCL) / GRILL / BADGE LAMP
F67	–	15 Amp Blue	INSTRUMENT PANEL CLUSTER (IPC) – IF EQUIPPED
F68	–	–	NOT POPULATED
F69	–	10 Amp Red	MOD_DCSD / TRANSFERCASE_SW / UCI +USB PORT / ACTIVE GRILL SHUTTER-LOWER / ACTIVE GRILL SHUTTER (AGS) / HRLS
F70	–	–	NOT POPULATED
F71	–	–	NOT POPULATED
F72	–	10 Amp Red	MOD_CVADAS – IF EQUIPPED
F73	–	10 Amp Red	ADCAM
F74	–	–	NOT POPULATED
F75	–	–	NOT POPULATED
F76	–	–	NOT POPULATED

Fuse Number	Type	Rating	Description
F77	–	–	NOT POPULATED
F78	–	–	NOT POPULATED
F79	30 Amp Pink	–	REAR DEFROSTER (EBL)
F80	40 Amp Green	–	BCM FEED 4
F81	–	–	NOT POPULATED
F82	30 Amp Pink	–	FRT WIPER FUSE
F83	50 Amp Red	–	BCM FEED 1
F84	–	–	NOT POPULATED
F85	50 Amp Red	–	BSM PUMP


Customer can select to switch the Cargo Power Outlet from F43 battery fed power to this position F45 which is fed when the ignition is ON.

REAR POWER DISTRIBUTION CENTER

The Rear Power Distribution Center is located behind a trim cover of the rear driver's side quarter panel. This center contains cartridge fuses, micro fuses, relays, and circuit breakers. The following chart corresponds to the fuses inside.



Rear Power Distribution Center Location

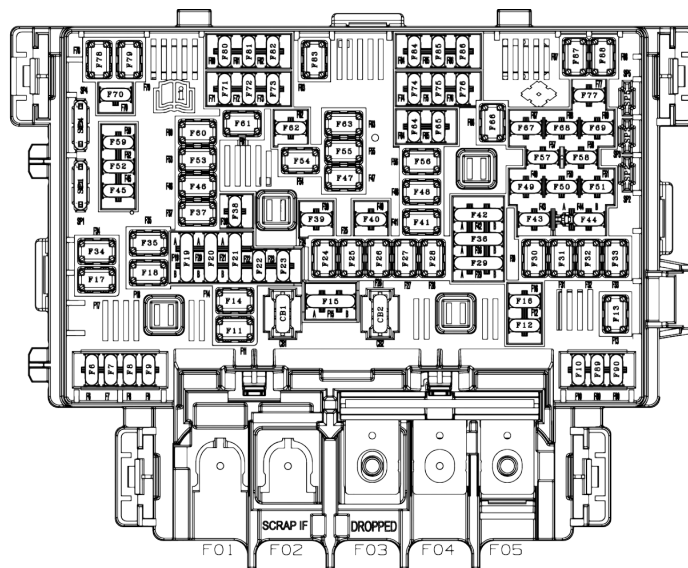

SB0801000056

Fuse Mapping

Cavity	Cartridge Fuse	Micro Fuse	Description
* If Equipped			
F03	-	-	SHUNT FOR FEED FROM MAIN BATTERY
F05	-	-	250A FOR FEED TO UNDERHOOD PDC
F06	-	-	NOT POPULATED
F07	-	-	NOT POPULATED

Cavity	Cartridge Fuse	Micro Fuse	Description
* If Equipped			
F08	-	-	NOT POPULATED
F09	-	-	NOT POPULATED
F10	-	-	NOT POPULATED
F11	50 Amp Red	-	MOD_BCM FEED #2
F12	-	5 Amp Tan	INTELLIGENT BATTERY SENSOR (IBS) - 1 (PF)
F13	-	-	NOT POPULATED
F14	20 Amp Blue	-	MOD DOOR MUX_PASSENGER REAR OR SMART MOTOR
F15A	-	10 Amp Red	INTELLIGENT EVENT BASE LIGHTING MODULE / ANIMATION LIGHTING - LIFTGATE TAILLAMP
F15B	-	10 Amp Red	OCCUPANT RESTRAINT CONTROLLER (ORC)
F16	-	10 Amp Red	IDCM
F17	-	-	NOT POPULATED
F18	20 Amp Blue	-	400V: (BEV) ELECTRIC OIL PUMP - EDM REAR
F19A	-	10 Amp Red	EVCU - 2_FEED #2 (BEV)
F19B	-	10 Amp Red	REAR WINDOW SWITCHES / DIGITAL TV (DTV-CHINA / JAPAN) / ASSY_OVERHEAD_CONSOLE-OHC W SUNSHADE
F20A	-	10 Amp Red	ELECTRIC DRIVE MOTOR FEED #1 - FRONT (BEV)
F20B	-	10 Amp Red	ELECTRIC DRIVE MOTOR FEED #2 - FRONT (BEV)
F21A	-	10 Amp Red	MOD_ICS_SWITCH BANK_RR (FT CONSOLE) / SW_BANK_UPPER / MOD_HVAC_CTRL_FT
F21B	-	10 Amp Red	KEYLESS IGNITION NODE MOD (KNM) / RADIO FREQUENCY HUB (RFHM) / BRAKE PEDAL SWITCH - NORMALLY OPEN / ELECTRIC PARK BRAKE SWITCH (EPB)
F22	-	-	NOT POPULATED
F23	-	5 Amp Tan	NFC DOOR HANDLE_SWING GATE
F24	-	-	NOT POPULATED
F25	-	-	NOT POPULATED
F26	20 Amp Blue	-	ELECTRIC DRIVE MOTOR FEED #2 - REAR (BEV ONLY)

Cavity	Cartridge Fuse	Micro Fuse	Description
* If Equipped			
F27	-	-	NOT POPULATED
F28	-	-	NOT POPULATED
F29A	-	15 Amp Blue	INSTRUMENT PANEL CLUSTER (IPC) / DRIVER ASSISTANCE SYSTEM MODULE (DASM) / EVCU-2 / HVAC_CTRL_FT / MOD_DPDM
F29B	-	-	NOT POPULATED
F30	30 Amp Pink	-	MOD MEMORY / POWER SEAT-PASS FRT
F31	-	-	NOT POPULATED
F32	-	-	NOT POPULATED
F33	-	-	NOT POPULATED
F34	-	-	NOT POPULATED
F35	-	-	NOT POPULATED
F36A	-	-	NOT POPULATED
F36B	-	10 Amp Red	QUIET VEHICLE PEDESTRIAN MODULE (QVPM) / ANIMATION LIGHT-ING - RR RT/LIFTGATE TAILLAMP
F37	30 Amp Pink	-	TRAILER TOW ELECTRIC BRAKE_AFTERMARKET
F38	-	10 Amp Red	HVIL - MAIN POWER FEED / HVIL - REDUNDANT POWER FEED
F39	-	20 Amp Yellow	MODULE SEAT HEATER FRT (PASS)
F40	-	30 Amp Green	MOD AUDIO AMPLIFIER #1A
F41	30 Amp Pink	-	MOD DOOR MUX_DRIVER
F42A	-	-	NOT POPULATED
F42B	-	10 Amp Red	DIGITAL REAR VIEW MIRROR (DRVM)
F43	-	-	NOT POPULATED
F44A	-	20 Amp Yellow	12V POWER OUTLET - CARGO AREA - IGN
F44B	-	20 Amp Yellow	12V POWER OUTLET - CARGO AREA - BATTERY
F45	-	15 Amp Blue	PORT_UCI_DUAL-USB-REAR / WIRELESS CHARGING PAD -FT CONSOLE / WIRELESS CHARGING PAD - RR OF FT CONSOLE
F46	30 Amp Pink	-	MOD_MEMORY / POWER SEAT - DRIVER FT
F47	20 Amp Blue	-	EVCU - 2_FEED #3 (BEV)

Cavity	Cartridge Fuse	Micro Fuse	Description
* If Equipped			
F48	30 Amp Pink	-	MOD DOOR MUX_PASSENGER
F49	-	-	NOT POPULATED
F50	-	10 Amp Red	OCCUPANT RESTRAINT CONTROLLER (ORC)
F51	-	20 Amp Yellow	MPAD - 1 / MID RANGE RADAR ECU
F52	-	10 Amp Red	ANIMATION LIGHTING - RR LT
F53	20 Amp Blue	-	EVCU - 2 FEED #4 (BEV)
F54	20 Amp Blue	-	MOD DOOR MUX_DRIVER REAR OR SMART MOTOR
F55	25 Amp Clear	-	TRAILER TOW MODULE #2
F56	30 Amp Pink	-	SUNROOF
F57	-	20 Amp Yellow	HAPTIC LANE FEEDBACK MODULE (HaLF) / PARKTRONICS SYSTEM MODULE (PTS) / OCCUPANT CLASSIFICATION MODULE (OCM) / TRAILER TOW MODULE (TTM) / MOD_SECURITY GATEWAY (SGW) / HEADLAMP LEVELING - MOTOR FEED / HEADLAMP LEVELING - REFERENCE SIGNAL TO SWITCH / AUXILIARY GATEWAY MODULE (AGW)
F58	-	15 Amp Blue	BATTERY PACK CONTROL MODULE (BPCM) (BEV)
F59	-	15 Amp Blue	TELEMATICS BOX MODULE (TBM) / GATEWAY SECURITY MOD / ALARM SIREN UNIT (ASU) / ULTRA-SONIC ALARM MODULE (UAM, AKA UNTRUSION MODULE) / AUXILIARY GATEWAY MODULE (AGWM)
F60	20 Amp Blue	-	POWER RETRACTABLE TOP
F61	30 Amp Pink	-	ASSY_TRAILIER_TOW_RECEPTACLE FUSE B+
F62	-	20 Amp Yellow	MODULE SEAT HEATER FRT (DRIVER)
F63	25 Amp Clear	-	TRAILER TOW MODULE #1
F64	-	5 Amp Tan	NFC DOOR HANDLE #2
F65	-	10 Amp Red	ANIMATION LIGHTING - RR RT
F66	-	-	NOT POPULATED
F67	-	20 Amp Yellow	MOD_CRSM (HEAT SEAT RR LT)
F68	-	15 Amp Blue	PORT_PWR_OR_USB_CH_ONLY/APO - ILLUMINATION / DIGITAL TV (DTV - CHINA/JAPAN) / SUNROOF

Cavity	Cartridge Fuse	Micro Fuse	Description
		* If Equipped	
F69	-	15 Amp Blue	LUMBAR SUPPORT DRIVER & PASSENGER SW
F70	-	10 Amp Red	EVCU - 2_FEED #1 (BEV) / E-STOP SWITCH FEED (VP ONLY)
F71	-	15 Amp Blue	BATTERY PACK CONTROL MODULE (BPCM) -REDUNDANT (BEV)
F72	-	10 Amp Red	HEATED SEAT SWITCH - RR RT & RR LT / INTERIOR MONITORING CAMERA (PF) / ANIMATION LIGHTING - RR LT
F73	-	15 Amp Blue	DRIVER ALERT LIGHTING MODULE (DALM) / ADAS_E_STOP / DMSM / EVCU-2 (BEV)
F74	-	20 Amp Yellow	REAR WIPER
F75	-	5 Amp Tan	NFC DOOR HANDLE #3
F76	-	5 Amp Tan	NFC DOOR HANDLE #4
F77	-	20 Amp Yellow	MOD_CRSM (HEAR SEAT RR RT)
F78	40 Amp Green	-	MOD_BCM FEED #3
F79	-	-	NOT POPULATED
F80	-	10 Amp Red	ELECTRIC DRIVE MOTOR FEED #1 - REAR
F81	-	5 Amp Tan	DIRECT CURRENT BOOST CONVERTER (DCBC)
F82	-	15 Amp Blue	MOD_COMFORT STEERING WHEEL SURFACE
F83	-	-	NOT POPULATED
F84	-	10 Amp Red	MID RANGE SENSOR REAR LEFT (MRSRL) / MID RANGE SENSOR REAR RIGHT (MRSRR)
F85	-	15 Amp Blue	UWB_SNSR (1-7)
F86	-	5 Amp Tan	NFC DOOR HANDLE #1
F87	-	-	NOT POPULATED
F88	30 Amp Pink	-	MOD_INVERTER 115V/230V
CB1	-	-	NOT POPULATED
CB2	-	10 Amp Red	MOD_SPAAK

LIGHT REPLACEMENT

DESCRIPTION

NOTE:

See an authorized dealer for LED bulb replacement.

Interior Bulbs	
Bulb Name	Bulb Number
Transmission Indicator Lamp	LED
Heater Control Lamps (2)	LED
Rocker Switch Indicator Lamp (Rear Window Defogger, and Rear Wash/Wipe)	**
Soundbar Dome Lamp	LED
** Bulbs only available from an authorized dealer.	

Exterior Bulbs	
Bulb Name	Bulb Number
Premium Head Lamps	LED
Premium Front Park/Turn Signal Lamps (2)	LED

Exterior Bulbs	
Bulb Name	Bulb Number
Front Side Marker Lamps (2)	LED
Premium Fog Lamps	LED
Rear Premium LED Tail Lamps	LED
Rear Base Tail Lamp Side Marker	LED
Center High Mounted Stop Lamp (CHMSL)	LED
License Lamp	LED
NOTE: If a bulb needs to be replaced, visit an authorized dealer or refer to the applicable Service Manual.	

TIRES AND WHEELS


TIRE SAFETY INFORMATION

Tire safety information will cover aspects of the following information: Tire Markings, Tire Identification Numbers, Tire Terminology and Definitions, Tire Pressures, and Tire Loading.

NOTE:

If your vehicle is equipped with bead-lock wheels, please refer to your vehicles bead-lock specific part number for additional information and instructions on mopar.com or by contacting an authorized dealer.

Tire Markings

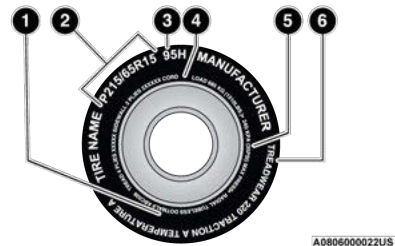

Tire Markings

- 1 – US DOT Safety Standards Code (TIN)
- 2 – Size Designation
- 3 – Load Index/Speed Rating
- 4 – Maximum Load
- 5 – Maximum Pressure
- 6 – Treadwear, Traction and Temperature Grades

NOTE:

- P (Passenger) — Metric tire sizing is based on US design standards. P-Metric tires have the letter "P" molded into the sidewall preceding the size designation. Example: P215/65R15 95H.
- European — Metric tire sizing is based on European design standards. Tires designed to this standard have the tire size molded into the sidewall beginning with the section width. The letter "P" is absent from this tire size designation. Example: 215/65R15 96H.
- LT (Light Truck) — Metric tire sizing is based on US design standards. The size designation for LT-Metric tires is the same as for P-Metric tires except for the letters "LT" that are molded into the sidewall preceding the size designation. Example: LT235/85R16.
- Temporary spare tires are designed for temporary emergency use only. Temporary high pressure compact spare tires have the letter "T" or "S" molded into the sidewall preceding the size designation. Example: T145/80D18 103M.
- High flotation tire sizing is based on US design standards and it begins with the tire diameter molded into the sidewall. Example: 31x10.5 R15 LT.

TIRE SIZING CHART

EXAMPLE:
Example Size Designation: P215/65R15XL 95H, 215/65R15 96H, LT235/85R16C, T145/80D18 103M, 31x10.5 R15 LT
P = Passenger car tire size based on US design standards, or "....blank...." = Passenger car tire based on European design standards, or LT = Light truck tire based on US design standards, or T or S = Temporary spare tire or 31 = Overall diameter in inches (in) 215, 235, 145 = Section width in millimeters (mm) 65, 85, 80 = Aspect ratio in percent (%) ● Ratio of section height to section width of tire, or 10.5 = Section width in inches (in)

EXAMPLE:
R = Construction code ● "R" means radial construction, or ● "D" means diagonal or bias construction
15, 16, 18 = Rim diameter in inches (in)
Service Description:
95 = Load Index ● A numerical code associated with the maximum load a tire can carry
H = Speed Symbol ● A symbol indicating the range of speeds at which a tire can carry a load corresponding to its load index under certain operating conditions ● The maximum speed corresponding to the speed symbol should only be achieved under specified operating conditions (i.e., tire pressure, vehicle loading, road conditions, and posted speed limits)
Load Identification: Absence of the following load identification symbols on the sidewall of the tire indicates a Standard Load (SL) tire: ● XL = Extra load (or reinforced) tire, or ● LL = Light load tire or ● C, D, E, F, G = Load range associated with the maximum load a tire can carry at a specified pressure
Maximum Load – Maximum load indicates the maximum load this tire is designed to carry
Maximum Pressure – Maximum pressure indicates the maximum permissible cold tire inflation pressure for this tire

Tire Identification Number (TIN)

The TIN may be found on one or both sides of the tire; however, the date code may only be on one side. Tires with white sidewalls will have the full TIN, including the date code, located on the white sidewall side of the tire. Look for the TIN on the outboard side of black sidewall tires as mounted on the vehicle. If the TIN is not found on the outboard side, then you will find it on the inboard side of the tire.

EXAMPLE:
DOT MA L9 ABCD 0301
DOT = Department of Transportation This symbol certifies that the tire is in compliance with the US Department of Transportation tire safety standards and is approved for highway use
MA = Code representing the tire manufacturing location (two digits)
L9 = Code representing the tire size (two digits)
ABCD = Code used by the tire manufacturer (one to four digits)
03 = Number representing the week in which the tire was manufactured (two digits) 03 means the 3rd week
01 = Number representing the year in which the tire was manufactured (two digits) 01 means the year 2001 - Prior to July 2000, tire manufacturers were only required to have one number to represent the year in which the tire was manufactured. Example: 031 could represent the 3rd week of 1981 or 1991

Tire Terminology And Definitions


Term	Definition
B-pillar	The vehicle B-pillar is the structural member of the body located behind the front door.
Cold Tire Inflation Pressure	Cold tire inflation pressure is defined as the tire pressure after the vehicle has not been driven for at least three hours, or driven less than 1 mile (1.6 km) after sitting for a minimum of three hours. Inflation pressure is measured in units of psi (pounds per square inch) or kPa (kilopascals).
Maximum Inflation Pressure	The maximum inflation pressure is the maximum permissible cold tire inflation pressure for this tire. The maximum inflation pressure is molded into the sidewall.
Recommended Cold Tire Inflation Pressure	Vehicle manufacturer's recommended cold tire inflation pressure as shown on the tire placard.
Tire Placard	A label permanently attached to the vehicle describing the vehicle's loading capacity, the original equipment tire sizes and the recommended cold tire inflation pressures.

Tire Loading And Tire Pressure


NOTE:

The proper cold tire inflation pressure is listed on the driver's side B-pillar or the rear edge of the driver's side door.

Check the inflation pressure of each tire, including the spare tire (if equipped), at least monthly and inflate to the recommended pressure for your vehicle.

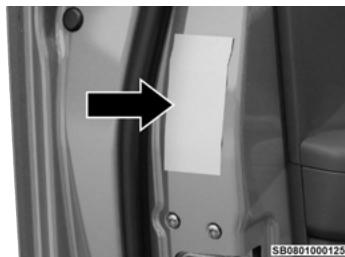


Example Tire Placard Location (Door)

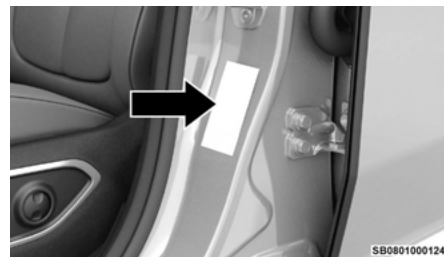

Example Tire Placard Location (B-pillar)

Tire And Loading Information Placard

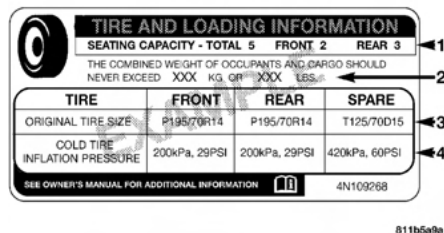

Tire And Loading Information Placard

This placard tells you important information about the:

1. Number of people that can be carried in the vehicle.
2. Total weight your vehicle can carry.
3. Tire size designed for your vehicle.
4. Cold tire inflation pressures for the front, rear, and spare tires.

Loading

The vehicle maximum load on the tire must not exceed the load carrying capacity of the tire on your vehicle. You will not exceed the tire's load carrying capacity if you adhere to the loading conditions, tire size, and cold tire inflation pressures specified on the Tire And Loading Information Placard ➡ page 145.

NOTE:

Under a maximum loaded vehicle condition, Gross Axle Weight Rating (GAWR) for the front and rear axles must not be exceeded.

For further information on GAWR, vehicle loading, and trailer towing ➡ page 145.

To determine the maximum loading conditions of your vehicle, locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs" on the Tire And Loading Information Placard. The combined weight of occupants, cargo/luggage and trailer tongue weight (if applicable) should never exceed the weight referenced here.

Steps For Determining Correct Load Limit—

(1) Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.

(2) Determine the combined weight of the driver and passengers that will be riding in your vehicle.

(3) Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.

(4) The resulting figure equals the available amount of cargo and luggage load capacity. For example, if "XXX" amount equals 1400 lbs. and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400-750 (5x150) = 650 lbs.)

(5) Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.

(6) If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

Metric Example For Load Limit

For example, if "XXX" amount equals 635 kg and there will be five 68

kg passengers in your vehicle, the amount of available cargo and luggage load capacity is 295 kg (635-340 (5x68) = 295 kg) as shown in step 4.

NOTE:

- If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. The

following table shows examples on how to calculate total load, cargo/luggage, and towing capacities of your vehicle with varying seating configurations and number and size of occupants. This table is for illustration purposes only and may not be accurate for the seating and load carry capacity of your vehicle.

- For the following example, the combined weight of occupants and cargo should never exceed 865 lb (392 kg).

Occupants			MINUS	=	AVAILABLE Cargo/Luggage and Trailer Tongue Weight
TOTAL	FRONT	REAR			
<u>EXAMPLE 1</u>					
5	2	3			
			865 lbs	minus	670 lbs
					195 lbs
<u>EXAMPLE 2</u>					
3	2	1			
			865 lbs	minus	540 lbs
					325 lbs
<u>EXAMPLE 3</u>					
2	2	0			
			865 lbs	minus	400 lbs
					465 lbs

WARNING!

Overloading of your tires is dangerous. Overloading can cause tire failure, affect vehicle handling, and increase your stopping distance. Use tires of the recommended load capacity for your vehicle. Never overload them.

TIRES — GENERAL INFORMATION

Tire Pressure

Proper tire inflation pressure is essential to the safe and satisfactory operation of your vehicle. Four primary areas are affected by improper tire pressure:

- Safety
- Vehicle Range
- Tread Wear
- Ride Comfort and Vehicle Stability

Safety

WARNING!

- Improperly inflated tires are dangerous and can cause collisions.
- Underinflation increases tire flexing and can result in overheating and tire failure.
- Overinflation reduces a tire's ability to cushion shock. Objects on the road and chuckholes can cause damage that result in tire failure.

(Continued)

WARNING!

- Overinflated or underinflated tires can affect vehicle handling and can fail suddenly, resulting in loss of vehicle control.
- Unequal tire pressures can cause steering problems. You could lose control of your vehicle.
- Unequal tire pressures from one side of the vehicle to the other can cause the vehicle to drift to the right or left.
- Always drive with each tire inflated to the recommended cold tire inflation pressure.

Both underinflation and overinflation affect the stability of the vehicle and can produce a feeling of sluggish response or over responsiveness in the steering.

NOTE:

- Unequal tire pressures from side to side may cause erratic and unpredictable steering response.
- Unequal tire pressure from side to side may cause the vehicle to drift left or right.

Vehicle Range

Underinflated tires will increase tire rolling resistance resulting in higher electric consumption.

Tread Wear

Improper cold tire inflation pressures can cause abnormal wear patterns and reduced tread life, resulting in the need for earlier tire replacement.

Ride Comfort And Vehicle Stability

Proper tire inflation contributes to a comfortable ride. Overinflation produces a jarring and uncomfortable ride.

Tire Inflation Pressures

The proper cold tire inflation pressure is listed on the left side B-pillar or rear edge of the left side door.

At least once a month:

- Check and adjust tire pressure with a good quality pocket-type pressure gauge. Do not make a visual judgement when determining proper inflation. Tires may look properly inflated even when they are under-inflated.
- Inspect tires for signs of tire wear or visible damage.

CAUTION!

After inspecting or adjusting the tire pressure, always reinstall the valve stem cap. This will prevent moisture and dirt from entering the valve stem, which could damage the valve stem.

Inflation pressures specified on the placard are always "cold tire inflation pressure". Cold tire inflation pressure is defined as the tire pressure after the vehicle has not been driven for at least three hours, or driven less than 1 mile (1.6 km) after sitting for a minimum of three hours. The cold tire inflation pressure must not exceed the maximum inflation pressure molded into the tire sidewall.

Check tire pressures more often if subject to a wide range of outdoor temperatures, as tire pressures vary with temperature changes.

Tire pressures change by approximately 1 psi (7 kPa) per 12°F (7°C) of air temperature change. Keep this in mind when checking tire pressure inside a garage, especially in the Winter.

Example: If garage temperature = 68°F (20°C) and the outside temperature = 32°F (0°C) then the cold tire inflation pressure should be increased by 3 psi (21 kPa), which equals 1 psi (7 kPa) for every 12°F (7°C) for this outside temperature condition.

Tire pressure may increase from 2 to 6 psi (13 to 40 kPa) during operation. DO NOT reduce this normal pressure build up or your tire pressure will be too low.

Tire Pressures For High Speed Operation

The manufacturer advocates driving at safe speeds and within posted speed limits. Where speed limits or conditions are such that the vehicle can be driven at high speeds, maintaining correct tire inflation pressure is very important. Increased tire pressure and reduced vehicle loading may be required for high-speed vehicle operation. Refer to an authorized tire dealer or original equipment vehicle dealer for recommended safe operating speeds, loading and cold tire inflation pressures.

WARNING!

High speed driving with your vehicle under maximum load is dangerous. The added strain on your tires could cause them to fail. You could have a serious

(Continued)

WARNING!

collision. Do not drive a vehicle loaded to the maximum capacity at continuous speeds above 75 mph (120 km/h).

Radial Ply Tires

WARNING!

Combining radial ply tires with other types of tires on your vehicle will cause your vehicle to handle poorly. The instability could cause a collision. Always use radial ply tires in sets of four. Never combine them with other types of tires.

Tire Repair

If your tire becomes damaged, it may be repaired if it meets the following criteria:

- The tire has not been driven on when flat.
- The damage is only on the tread section of your tire (sidewall damage is not repairable).
- The puncture is no greater than ¼ of an inch (6 mm).

Consult an authorized tire dealer for tire repairs and additional information.

Damaged Run Flat tires, or Run Flat tires that have experienced a loss of pressure should be replaced immediately with another Run Flat tire of identical size and service description (Load Index and Speed Symbol). Replace the tire pressure sensor as well as it is not designed to be reused.

Run Flat Tires — If Equipped

Run Flat tires allow you the capability to drive 50 miles (80 km) at 50 mph (80 km/h) after a rapid loss of inflation pressure. This rapid loss of inflation is referred to as the Run Flat mode. A Run Flat mode occurs when the tire inflation pressure is of/or below 14 psi (96 kPa). Once a Run Flat tire reaches the run flat mode it has limited driving capabilities and needs to be replaced immediately. A Run Flat tire is not repairable. When a Run Flat tire is changed after being driven in a Run Flat mode 14 psi (96 kPa) condition, please replace the TPMS sensor as it is not designed to be reused.

NOTE:

TPMS sensor must be replaced after driving the vehicle on a flat tire condition.

It is not recommended driving a vehicle loaded at full capacity or to tow a trailer while a tire is in the Run Flat mode.

See the Tire Pressure Monitoring System section for more information.

Tire Spinning

When stuck in mud, sand, snow, or ice conditions, do not spin your vehicle's wheels above 30 mph (48 km/h) or for longer than 30 seconds continuously without stopping.

WARNING!

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause tire

(Continued)

WARNING!

damage or failure. A tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) for more than 30 seconds continuously when you are stuck, and do not let anyone near a spinning wheel, no matter what the speed.

Tread Wear Indicators

Tread wear indicators are in the original equipment tires to help you in determining when your tires should be replaced.



Tire Tread

1 – Tread Wear Indicators

These indicators are molded into the bottom of the tread grooves. They will appear as bands when the tread depth becomes 1/16 of an inch (1.6 mm). When the tread is worn to the tread wear indicators, the tire should be replaced.

For further information ➡ page 247.

Life Of Tire

The service life of a tire is dependent upon varying factors including, but not limited to:

- Driving style.
- Aero Mode - Driving in Aero Mode will reduce tread life. Placing a vehicle in Aero Mode and using 3S tires will reduce tire life.
- Tire pressure - Improper cold tire inflation pressures can cause uneven wear patterns to develop across the tire tread. These abnormal wear patterns will reduce tread life, resulting in the need for earlier tire replacement.
- Distance driven.
- Performance tires, tires with a speed rating of V or higher, and Summer tires typically have a reduced tread life. Rotation of these tires per the vehicle scheduled maintenance is highly recommended.

WARNING!

Tires and the spare tire should be replaced after six years, regardless of the remaining tread. Failure to follow this warning can result in sudden tire failure. You could lose control and have a collision resulting in serious injury or death.

NOTE:

Wheel valve stem must be replaced as well when installing new tires due to wear and tear in existing tires.

Keep dismounted tires in a cool, dry place with as little exposure to light as possible. Protect tires from contact with oil, grease, and gasoline.

Replacement Tires

The tires on your new vehicle provide a balance of many characteristics. They should be inspected regularly for wear and correct cold tire inflation pressures. The manufacturer strongly recommends using tires equivalent to the originals in size, quality and performance when replacement is needed. Refer to the paragraph on "Tread Wear Indicators" in this section. Refer to the Tire And Loading Information Placard or the Vehicle Certification Label for the size designation of your tire. The Load Index and Speed Symbol for your tire will be found on the original equipment tire sidewall.

For more information relating to the Load Index and Speed Symbol of a tire ➡ page 239.

It is recommended to replace the two front tires or two rear tires as a pair. Replacing just one tire can seriously affect your vehicle's handling. If you ever replace a wheel, make sure that the wheel's specifications match those of the original wheels.

It is recommended you contact an authorized tire dealer or original equipment dealer with any questions you may have on tire specifications or capability. Failure to use equivalent replacement tires may adversely affect the safety, handling, and ride of your vehicle.

WARNING!

- Do not use a tire, wheel size, load rating, or speed rating other than that specified for your vehicle. Some combinations of unapproved tires and wheels may change suspension dimensions and performance characteristics, resulting in changes to steering, handling, and braking of your vehicle. This can cause unpredictable handling and stress to steering and suspension components. You could lose control and have a collision resulting in serious injury or death. Use only the tire and wheel sizes with load ratings approved for your vehicle.
- Never use a tire with a smaller load index or capacity, other than what was originally equipped on your vehicle. Using a tire with a smaller load index could result in tire overloading and failure. You could lose control and have a collision.
- Failure to equip your vehicle with tires having adequate speed capability can result in sudden tire failure and loss of vehicle control.

CAUTION!

Replacing original tires with tires of a different size may result in false speedometer and odometer readings.

TIRE TYPES**All Season Tires — If Equipped**

All Season tires provide traction for all seasons (Spring, Summer, Autumn, and Winter). Traction levels may vary between different all season tires. All season tires can

be identified by the M+S, M&S, M/S or MS designation on the tire sidewall. Use all season tires only in sets of four; failure to do so may adversely affect the safety and handling of your vehicle.

Summer Or Three Season Tires — If Equipped

Summer tires provide traction in both wet and dry conditions, and are not intended to be driven in snow or on ice. If your vehicle is equipped with Summer tires, be aware these tires are not designed for Winter or cold driving conditions. Install Winter tires on your vehicle when ambient temperatures are less than 40°F (5°C) or if roads are covered with ice or snow. For more information, contact an authorized dealer.

Summer tires do not contain the all season designation or mountain/snowflake symbol on the tire sidewall. Use Summer tires only in sets of four; failure to do so may adversely affect the safety and handling of your vehicle.

WARNING!

Do not use Summer tires in snow/ice conditions. You could lose vehicle control, resulting in severe injury or death. Driving too fast for conditions also creates the possibility of loss of vehicle control.

Snow Tires

Some areas of the country require the use of snow tires during the Winter. Snow tires can be identified by a “mountain/snowflake” symbol on the tire sidewall.



If you need snow tires, select tires equivalent in size and type to the original equipment tires. Use snow tires only in sets of four; failure to do so may adversely affect the safety and handling of your vehicle.

Snow tires generally have lower speed ratings than what was originally equipped with your vehicle and should not be operated at sustained speeds over 75 mph (120 km/h). For speeds above 75 mph (120 km/h) refer to original equipment or an authorized tire dealer for recommended safe operating speeds, loading and cold tire inflation pressures.

While studded tires improve performance on ice, skid and traction capability on wet or dry surfaces may be poorer than that of non-studded tires. Some states prohibit studded tires; therefore, local laws should be checked before using these tire types.

SPARE TIRES — If EQUIPPED**NOTE:**

For vehicles equipped with Tire Service Kit instead of a spare tire, please refer to “Tire Service Kit” in “In Case Of Emergency” for further information.

CAUTION!

Because of the reduced ground clearance, do not take your vehicle through an automatic car wash with a compact or limited use temporary spare installed. Damage to the vehicle may result.

For restrictions when towing with a spare tire designated for temporary emergency use

➞ page 150.

Spare Tire Matching Original Equipped Tire And Wheel — If Equipped

Your vehicle may be equipped with a spare tire and wheel equivalent in look and function to the original equipment tire and wheel found on the front or rear axle of your vehicle. This spare tire may be used in the tire rotation for your vehicle. If your vehicle has this option, refer to an authorized tire dealer for the recommended tire rotation pattern.

Full Size Spare — If Equipped

The full size spare is for temporary emergency use only. This tire may look like the originally equipped tire on the front or rear axle of your vehicle, but it is not. This spare tire may have limited tread life. When the tread is worn to the tread wear indicators, the temporary use full size spare tire needs to be replaced. Since it is not the same as your original equipment tire, replace (or repair) the original equipment tire and reinstall on the vehicle at the first opportunity.

Limited Use Spare — If Equipped

The limited use spare tire is for temporary emergency use only. This tire is identified by a label located on the limited use spare wheel. This label contains the driving limitations for this spare. This tire may look like the original equipped tire on the front or rear axle of your vehicle, but it is not. Installation of this limited use spare tire affects vehicle handling. Since it is not the same as your original equipment tire, replace (or repair) the original equipment tire and reinstall on the vehicle at the first opportunity.

WARNING!

Limited use spares are for emergency use only. Installation of this limited use spare tire affects vehicle handling. With this tire, do not drive more than the speed listed on the limited use spare wheel. Keep inflated to the cold tire inflation pressures listed on your Tire And Loading Information Placard located on the driver's side B-pillar or the rear edge of the driver's side door. Replace (or repair) the original equipment tire at the first opportunity and reinstall it on your vehicle. Failure to do so could result in loss of vehicle control.

WHEEL AND WHEEL TRIM CARE

All wheels and wheel trim, especially aluminum and chrome plated wheels, should be cleaned regularly using mild (neutral Ph) soap and water to maintain their luster and to prevent corrosion. Wash wheels with the same soap solution recommended for the body of the vehicle and remember to always wash when the surfaces are not hot to the touch.

Your wheels are susceptible to deterioration caused by salt, sodium chloride, magnesium chloride, calcium chloride, etc., and other road chemicals used to melt ice or control dust on dirt roads. Use a soft cloth or sponge and mild soap to wipe away promptly. Do not use harsh chemicals or a stiff brush. They can damage the wheel's protective coating that helps keep them from corroding and tarnishing.

CAUTION!

Avoid products or automatic car washes that use acidic solutions or strong alkaline additives or harsh brushes. Many aftermarket wheel cleaners and automatic car washes may damage the wheel's protective finish. Such damage is not covered by the New Vehicle Limited Warranty. Only car wash soap, Mopar® Wheel Cleaner or equivalent is recommended.

When cleaning extremely dirty wheels including excessive brake dust, care must be taken in the selection of tire and wheel cleaning chemicals and equipment to prevent damage to the wheels. Mopar® Wheel Treatment or Mopar® Chrome Cleaner or their equivalent is recommended or select a non-abrasive, non-acidic cleaner for aluminum or chrome wheels.

CAUTION!

Do not use scouring pads, steel wool, a bristle brush, metal polishes or oven cleaner. These products may damage the wheel's protective finish. Such damage is not covered by the New Vehicle Limited Warranty. Only car wash soap, Mopar® Wheel Cleaner or equivalent is recommended.

NOTE:

If you intend parking or storing your vehicle for an extended period after cleaning the wheels with wheel cleaner, drive your vehicle and apply the brakes to remove the water droplets from the brake components. This activity will remove the red rust on the brake rotors and prevent vehicle vibration when braking.

Dark Vapor Chrome, Black Satin Chrome, or Low Gloss Clear Coat Wheels**CAUTION!**

If your vehicle is equipped with these specialty wheels, DO NOT USE wheel cleaners, abrasives, or polishing compounds. They will permanently damage this finish and such damage is not covered by the New Vehicle Limited Warranty. **HAND WASH ONLY**

*(Continued)***CAUTION!**

USING MILD SOAP AND WATER WITH A SOFT CLOTH. Used on a regular basis; this is all that is required to maintain this finish.

SNOW TRACTION DEVICES

Use of traction devices require sufficient tire-to-body clearance. Due to limited clearance, the following

snow traction devices are recommended. Follow these recommendations to guard against damage.

- Snow traction device must be of proper size for the tire, as recommended by the snow traction device manufacturer.
- No other tire sizes are recommended for use with the snow traction device.
- Please follow the table for the recommended tire size, axle and snow traction device:

Trim Level		Chainable Axle(s)	Tire/Wheel Size	Chain or Cable Size
AWD	ALL MODELS	REAR	265/60R18 265/50R20 265/50R20XL	7mm
			265/70R18	9mm

WARNING!

Using tires of different size and type (M+S, Snow) between front and rear axles can cause unpredictable handling. You could lose control and have a collision.

CAUTION!

To avoid damage to your vehicle or tires, observe the following precautions:

- Because of restricted traction device clearance between tires and other suspension components, it is important that only traction devices in good condition are used. Broken devices can cause serious damage. Stop the vehicle immediately if noise occurs that could indicate device breakage. Remove the damaged parts of the device before further use.

*(Continued)***CAUTION!**

- Install device as tightly as possible and then retighten after driving about ½ mile (0.8 km). Autosock traction devices do not require retightening.
- Do not exceed 30 mph (48 km/h).
- Drive cautiously and avoid severe turns and large bumps, especially with a loaded vehicle.
- Do not drive for a prolonged period on dry pavement.

(Continued)

CAUTION!

- Observe the traction device manufacturer's instructions on the method of installation, operating speed, and conditions for use. Always use the suggested operating speed of the device manufacturer's if it is less than 30 mph (48 km/h).
- Do not use traction devices on a compact spare tire.


TIRE ROTATION RECOMMENDATIONS

The tires on the front and rear of your vehicle operate at different loads and perform different steering, handling, and braking functions. For these reasons, they wear at unequal rates.

These effects can be reduced by timely rotation of tires. The benefits of rotation are especially worthwhile with aggressive tread designs such as those on On/Off Road type tires. Rotation will increase tread life, help to maintain mud, snow, and wet traction levels, and contribute to a smooth, quiet ride.

For the proper maintenance intervals ➞ page 217.
The reasons for any rapid or unusual wear should be corrected prior to rotation being performed.

The suggested rotation method is the "rearward cross" shown in the following diagram.

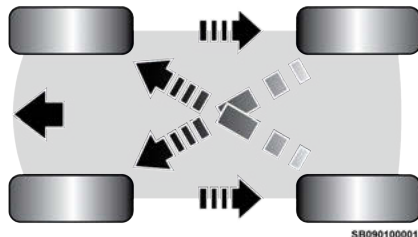

Tire Rotation (Rearward Cross)

CAUTION!

Proper operation of four-wheel drive vehicles depends on tires of equal size, type, and circumference on each wheel. Any difference in tire size can cause damage to the transfer case. Tire rotation schedule should be followed to balance tire wear.

DEPARTMENT OF TRANSPORTATION**DESCRIPTION**

The following tire grading categories were established by the National Highway Traffic Safety Administration. The specific grade rating assigned by the tire's manufacturer in each

category is shown on the sidewall of the tires on your vehicle.

All passenger vehicle tires must conform to Federal safety requirements in addition to these grades.

TREADWEAR

The Treadwear grade is a comparative rating, based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices, and differences in road characteristics and climate.

TRACTION GRADES

The Traction grades, from highest to lowest, are AA, A, B, and C. These grades represent the tire's ability to stop on wet pavement, as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

WARNING!

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

TEMPERATURE GRADES

The Temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat, when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance, which all passenger vehicle tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel, than the minimum required by law.

WARNING!

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

VEHICLE STORAGE

DESCRIPTION

If you are leaving your vehicle dormant for more than 3 weeks, you may want to take these steps to protect your battery.

- Disconnect the negative cable from the battery.

NOTE:

The power hatch will not be operational when the 12 volt battery is disconnected. To prevent manually opening the hatch we recommend leaving the hatch open when disconnecting the 12 volt battery.


- Anytime you store your vehicle, or keep it out of service (e.g., vacation) for two weeks or more, run the air conditioning system at idle for about five minutes in the fresh air and high blower setting. This will ensure adequate system lubrication to minimize the possibility of compressor damage when the system is started again.

NOTE:

When reconnecting the battery, turn on the ignition for one minute. This procedure is necessary to prevent battery drain.



Negative Battery Cable Label Location

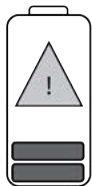

**WHEN RECONNECTING
THE BATTERY, TURN
ON THE IGNITION FOR
1 MINUTE.
THIS PROCEDURE IS
NECESSARY TO PREVENT
BATTERY DRAIN**

Negative Battery Cable Label

BODYWORK AND EXTERIOR CARE

PROTECTION FROM ATMOSPHERIC AGENTS

Vehicle body care requirements vary according to geographic locations and usage. Chemicals that make roads passable in snow and ice and those that are sprayed on trees and road surfaces during other seasons are highly corrosive to the metal in your vehicle. Outside parking, which exposes your vehicle to airborne contaminants, road surfaces on which the vehicle is operated, extreme hot or cold weather and other extreme conditions will have an adverse effect on paint, metal trim, and underbody protection.

The following maintenance recommendations will enable you to obtain maximum benefit from the corrosion resistance built into your vehicle.

What Causes Corrosion?

Corrosion is the result of deterioration or removal of paint and protective coatings from your vehicle.

The most common causes are:

- Road salt, dirt and moisture accumulation.
- Stone and gravel impact.
- Insects, tree sap and tar.
- Salt in the air near seacoast localities.
- Atmospheric fallout/industrial pollutants.

BODY AND UNDERBODY MAINTENANCE

Cleaning Headlights

Your vehicle is equipped with plastic headlights and fog lights that are lighter and less susceptible to stone breakage than glass headlights.

Plastic is not as scratch resistant as glass and therefore different lens cleaning procedures must be followed.

To minimize the possibility of scratching the lenses and reducing light output, avoid wiping with a dry cloth. To remove road dirt, wash with a mild soap solution followed by rinsing.

Do not use abrasive cleaning components, solvents, steel wool or other aggressive material to clean the lenses.

Exterior Lamp Lens Fogging or Condensation

Under certain environmental conditions, visible fog, mist, or fine condensation may appear on a portion of the inside lens of your vehicle's exterior lamps. Most exterior lamps have been designed with a vent system that allows air to be exchanged between the inside and outside of the lamp while preventing liquid water from entering the lamp. The visible fog, mist, or fine condensation on the inside of your exterior lamps will usually clear as the environmental conditions change to allow this visible condensation to change back into a vapor and pass through the vent system. This is considered normal exterior lamp lens condensation.

Puddles of water inside any exterior lamp, or heavy droplets of water that are always present on the inside lens of any exterior lamp, is not considered normal and your vehicle should be serviced at an authorized dealer.

PRESERVING THE BODYWORK

Washing

- Wash your vehicle regularly. Always wash your vehicle in the shade using Mopar® Car Wash, or a mild car wash soap and rinse the panels completely with water.
- If insects, tar, or other similar deposits have accumulated on your vehicle, use Mopar® Super Kleen Bug and Tar Remover to remove.
- Use a high quality cleaner wax, such as Mopar® Cleaner Wax to remove road film, stains and to protect your paint finish. Use precautions to not scratch the paint.

- Avoid using abrasive compounds and power buffing that may diminish the gloss or thin out the paint finish.

CAUTION!

- Do not use abrasive or strong cleaning materials such as steel wool or scouring powder that will scratch metal and painted surfaces.
- Use of power washers exceeding 1,200 psi (8,274 kPa) can result in damage or removal of paint and decals.

Special Care

- If you drive on salted or dusty roads or if you drive near the ocean, hose off the undercarriage at least once a month.
- It is important that the drain holes in the lower edges of the doors, rocker panels, and trunk be kept clear and open.
- If you detect any stone chips or scratches in the paint, touch them up immediately. The cost of such repairs is considered the responsibility of the owner.
- If your vehicle is damaged due to a collision or similar cause that destroys the paint and protective coating, have your vehicle repaired as soon as possible. The cost of such repairs is considered the responsibility of the owner.
- If you carry special cargo such as chemicals, fertilizers, de-icer salt, etc., be sure that such materials are well packaged and sealed.

- If a lot of driving is done on gravel roads, consider mud or stone shields behind each wheel.
- Use Mopar® Touch Up Paint on scratches as soon as possible. An authorized dealer has touch up paint to match the color of your vehicle.

Appearance Care For Fabric Top Models

To maintain the appearance of your vehicle's interior trim and top, follow these precautions:

- Do not run a fabric top through an automatic car wash. Window scratches and wax build-up may result.
- Avoid leaving your vehicle unattended with the top down, as exposure to sun or rain may damage interior trim.
- Do not use harsh cleaners or bleaching agents on top material, as damage may result.
- Do not allow any vinyl cleaner to run down and dry on the paint, leaving a streak.
- After cleaning your vehicle's fabric top, always make sure it is completely dry before lowering.
- Be especially careful when washing the windows by following the directions for "Care of Fabric Top Windows."

Washing – Use Mopar® Car Wash or equivalent, or mild soap suds, lukewarm water, and a brush with soft bristles. If extra cleaning is required, use Mopar® Convertible Cloth Top Cleaner or equivalent, or a mild foaming cleaner on the entire top, but support the top from underneath.

Rinsing – Be sure to remove all traces of cleaner by rinsing the top thoroughly with clean water. Remember to allow the top to dry before lowering it.

CAUTION!

Failure to follow these cautions may cause interior water damage, stains, or mildew of the top material:

- Do not run a fabric top through an automatic car wash. Window scratches and wax build-up may result.
- It is recommended that the top be free of water prior to opening it. Operating the top, opening a door or lowering a window while the top is wet may allow water to drip into the vehicle's interior.
- Use care when washing the vehicle, water pressure directed at the weather strip seals may cause water to leak into the vehicle's interior.
- Careless handling and storage of the removable roof panels may damage the seals, causing water to leak into the vehicle's interior.
- The front panel(s) must be positioned properly to ensure sealing. Improper installation can cause water to leak into the vehicle's interior.

CAUTION!

- Avoid washing with rollers and/or brushes in washing stations. Wash the vehicle only by hand using neutral pH detergents; dry it with a wet chamois leather. Abrasive products and/or polishes should not be used for cleaning the car.

(Continued)

CAUTION!

- Bird droppings must be washed off immediately and thoroughly as the acid they contain is particularly aggressive.
- Avoid (if at all possible) parking the vehicle under trees; remove vegetable resins immediately as, when dried, it may only be possible to remove them with abrasive products and/or polishes, which is highly inadvisable as they could alter the typical opaqueness of the paint.
- Do not use pure windshield washer fluid for cleaning the front windshield and rear window; dilute it to a minimum of 50% water. Only use pure windshield washer fluid when strictly necessary due to outside temperature conditions.

Care Of Fabric Top Windows

Your vehicle's fabric top has pliable plastic windows which can be scratched unless special care is taken by following these directions:

- Never use a dry cloth to remove dust. Instead, **use a microfiber towel or soft cotton cloth moistened with cold or warm, clean water, and wipe across the window, not up and down.** Mopar® Jeep® Soft Glass Window Cleaner or equivalent will safely clean all plastic windows without scratching. It removes fine scratches to improve visibility and provides UV protection to help prevent yellowing.
- When washing, **never use hot water** or anything stronger than a mild soap. Never use solvents such as alcohol or harsh cleaning agents.

- Always rinse thoroughly with cold water, then wipe with a soft and slightly moist, clean cloth.
- When removing frost, snow or ice, **never use a scraper or de-icing chemicals.** Use warm water only if you must clean the window quickly.
- Debris (sand, mud/dirt, dust, or salt) from off-road driving will have an impact on plastic retainer operation. Even normal on-road driving and vehicle washing will eventually impact window plastic retainer operation. To maintain ease of use of the window plastic retainers, each window plastic retainer should be cleaned and lubricated regularly. Cleaning products are available through an authorized dealer.
- Never paste stickers, gummed labels or any tape to the windows. Adhesives are hard to remove and may damage the windows.

INTERIOR CARE

SEATS AND FABRIC PARTS

Use Mopar® Total Clean to clean fabric upholstery and carpeting.

WARNING!

Do not use volatile solvents for cleaning purposes. Many are potentially flammable, and if used in closed areas they may cause respiratory harm.

SEAT BELT MAINTENANCE

Do not bleach, dye or clean the belts with chemical solvents or abrasive cleaners. This will weaken the fabric. Sun damage can also weaken the fabric.

If the belts need cleaning, use a mild soap solution or lukewarm water. Do not remove the belts from the vehicle to wash them. Dry with a soft cloth.

Replace the belts if they appear frayed or worn or if the buckles do not work properly.

WARNING!

A frayed or torn seat belt could rip apart in a collision and leave you with no protection. Inspect the seat belt system periodically, checking for cuts, frays, or loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the seat belt system. If your vehicle is involved in a collision, or if you have questions regarding seat belt or retractor conditions, take your vehicle to an authorized FCA dealer or authorized FCA Certified Collision Care Program facility for inspection.

CARPET SAFETY INFORMATION

Always use carpet designed to fit your vehicle. Only use carpet that does not interfere with the operation of the pedal assemblies. Only operate the vehicle when the carpet is securely attached by the grommets so it cannot slip out of position and interfere with the pedal assemblies or impair safe operation of your vehicle in other ways.

WARNING!

- If operating the vehicle without carpet in place the floor may become hot, and there is a risk of burns.
- An improperly attached, damaged, folded, or damaged grommets may cause your carpet to interfere with the accelerator, brake, or clutch pedals and cause a loss of vehicle control. To prevent **SERIOUS INJURY** or **DEATH**: ALWAYS securely attach your carpet using the grommets.
- ALWAYS make sure objects cannot fall or slide into the driver's side floor area when the vehicle is moving. Objects can become trapped under accelerator, brake, or clutch pedals and could cause a loss of vehicle control.
- NEVER place any objects under the carpet (e.g., towels, keys, etc.). These objects could change the position of the carpet and may cause interference with the accelerator, brake, or clutch pedals.
- ONLY install carpet designed to fit your vehicle. NEVER install carpet that cannot be properly attached and secured to your vehicle. If the carpet needs to be replaced, only use manufacturer approved carpet for the specific make, model, and year of your vehicle.
- If the vehicle carpet has been removed and re-installed, always properly attach carpet to the floor and check that the floor mat fasteners are secure to the vehicle carpet. Fully depress each pedal to check for interference with the accelerator, brake, or clutch pedals then re-install the floor mats.

PLASTIC AND COATED PARTS

Use Mopar® Total Clean to clean vinyl upholstery.

CAUTION!

- Direct contact of air fresheners, insect repellents, suntan lotions, or hand sanitizers to the plastic, painted, or decorated surfaces of the interior may cause permanent damage. Wipe away immediately.
- Damage caused by these type of products may not be covered by your New Vehicle Limited Warranty.

CLEANING PLASTIC INSTRUMENT CLUSTER LENSES

The lenses in front of the instruments in this vehicle are molded in clear plastic. When cleaning the lenses, care must be taken to avoid scratching the plastic.

Clean with a wet soft cloth. A mild soap solution may be used, but do not use high alcohol content or abrasive cleaners. If soap is used, wipe clean with a clean damp cloth. Dry with a soft cloth.

LEATHER SURFACES

Mopar® Total Clean is specifically recommended for leather upholstery.

Your leather upholstery can be best preserved by regular cleaning with a damp soft cloth. Small particles of dirt can act as an abrasive and damage the leather upholstery and should be removed promptly with a damp cloth. Stubborn soils can be removed easily with

a soft cloth and Mopar® Total Clean. Care should be taken to avoid soaking your leather upholstery with any liquid. Please do not use polishes, oils, cleaning fluids, solvents, detergents, or ammonia-based cleaners to clean your leather upholstery.

NOTE:

If equipped with light colored leather, it tends to show any foreign material, dirt, and fabric dye transfer more so than darker colors. The leather is designed for easy cleaning, and FCA recommends Mopar® total care leather cleaner applied on a cloth to clean the leather seats as needed.

CAUTION!

Do not use alcohol and alcohol-based and/or ketone based cleaning products to clean leather upholstery, as damage to the upholstery may result.

VEGAN LEATHER SURFACES

Mopar® Total Clean is specifically recommended for vegan leather upholstery.

Your upholstery can be best preserved by regular cleaning with a damp soft cloth. Small particles of dirt can act as an abrasive and damage the upholstery and should be removed promptly with a damp cloth. Stubborn soils can be removed easily with a soft cloth and Mopar® Total Clean. Care should be taken to avoid soaking your upholstery with any liquid. Please do not use polishes, oils, cleaning fluids, solvents, detergents, or ammonia-based cleaners to clean your upholstery.

CAUTION!

Do not use alcohol and alcohol-based and/or ketone based cleaning products to clean leather upholstery, as damage to the upholstery may result.

GLASS SURFACES

All glass surfaces should be cleaned on a regular basis with Mopar® Glass Cleaner, or any commercial household-type glass cleaner. Never use an abrasive type cleaner. Use caution when cleaning the inside rear window equipped with electric defrosters or windows equipped with radio antennas. Do not use scrapers or other sharp instruments that may scratch the elements.

When cleaning the rearview mirror, spray cleaner on the towel or cloth that you are using. Do not spray cleaner directly on the mirror.

TECHNICAL SPECIFICATIONS

VEHICLE IDENTIFICATION NUMBER (VIN)

DESCRIPTION

The VIN is found on the left front corner of the A-pillar, visible from outside of the vehicle through the windshield.



NOTE:
It is illegal to remove or alter the VIN plate.

Vehicle Identification Number

FLUIDS AND LUBRICANTS

DESCRIPTION

Component	Fluid, Lubricant, or Genuine Part
Coolant	We recommend using Mopar® Antifreeze/Coolant 10 Year/150,000 Mile (240,000 km) Formula OAT (Organic Additive Technology).
Electric Drive Module (EDM)	We recommend using Mopar® ATF+e (Automatic Transmission Fluid) meeting the requirements of the Manufacturer Material Standard MS-A1465.
Brake Fluid Master Cylinder	We recommend using Mopar® DOT 3, SAE J1703.

CAUTION!

- Mixing of coolant (antifreeze) other than specified Organic Additive Technology (OAT) coolant (antifreeze), may result in vehicle damage and may decrease corrosion protection. Organic Additive Technology (OAT) coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) coolant (antifreeze) or any “globally compatible” coolant (antifreeze). If a non-OAT coolant (antifreeze) is introduced into the cooling system in an emergency, the cooling system will need to be drained, flushed, and refilled with fresh OAT coolant (conforming to MS.90032), by an authorized dealer as soon as possible.
- Do not use water alone or alcohol-based coolant (antifreeze) products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based coolant (antifreeze). Use of propylene glycol-based coolant (antifreeze) is not recommended.

FLUID CAPACITIES**DESCRIPTION**

Component	US	Metric
Cooling System	15.1 qt	14.3 L

WHEEL AND TIRES**TORQUE SPECIFICATIONS**

Lug Nut/Bolt Torque	**Lug Nut/Bolt Size	Lug Nut/Bolt Socket Size
130 ft-lb (176 N-m)	M14 x 1.50	22 mm

**Use only authorized dealer recommended lug nuts/ bolts and clean or remove any dirt or oil before tightening.

Inspect the wheel mounting surface prior to mounting the tire and remove any corrosion or loose particles.

Spare Tire Torque Specifications

Lug Nut/Bolt Torque	**Lug Nut/Bolt Size	Lug Nut/Bolt Socket Size
59 ft-lb (80 N-m)	M14 x 1.50	22 mm

**Use only authorized dealer recommended lug nuts/ bolts and clean or remove any dirt or oil before tightening.


Spare tire torque is for the spare tire, located on the swing gate.



B091000007US

Wheel Mounting Surface

Tighten the lug nuts/bolts in a star pattern until each nut/bolt has been tightened twice. Ensure that the socket is fully engaged on the lug nut/bolt (do not insert it halfway).

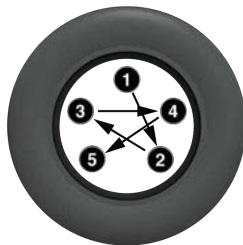

B0901000080US

Torque Patterns

After 25 miles (40 km), check the lug nut/bolt torque to be sure that all the lug nuts/bolts are properly seated against the wheel.

WARNING!

To avoid the risk of forcing the vehicle off the jack, do not tighten the lug nuts/bolts fully until the vehicle has been lowered. Failure to follow this warning may result in personal injury.

CUSTOMER ASSISTANCE

CUSTOMER ASSISTANCE

FCA US LLC and its authorized dealers are interested in your satisfaction. We want you to be happy with our products and services.

Warranty service must be done by an authorized dealer. We strongly recommend that you take the vehicle to an authorized dealer for non-warranty service as well. FCA US LLC's authorized dealers have the facilities, factory-trained technicians, special tools, and the latest information to ensure the vehicle is fixed correctly and in a timely manner.

If your authorized dealer is unable to resolve the concern, you may contact an FCA US LLC Customer Assistance center.

Any communication to an FCA US LLC Customer Assistance center should include the following information:

- Owner's name and address
- Owner's telephone number (home, mobile, and office)
- Authorized dealer name
- Vehicle Identification Number (VIN)
- Vehicle delivery date and mileage

ROADSIDE ASSISTANCE

Available 24 hours, 7 days a week.

Call 1-800-521-2779 or visit chrysler.rsahelp.com (USA)

Call 1-800-363-4869 or visit fca.roadsideaid.com (Canada)

Who is Covered

You are covered by Roadside Assistance services if you are a purchaser for use of the vehicle. Roadside Assistance services last for eight years, or 100,000 miles on the odometer, whichever occurs first. It is calculated from the start date of the Basic Limited Warranty, as set forth in your Warranty Information book.¹

What to Do

If your vehicle requires jump start assistance, tire service, lockout service, out of charge or towing as a result of a mechanical breakdown or flat tire, dial toll-free: USA: 1-800-521-2779/Canada: 1-800-363-4869. Provide your name, Vehicle Identification Number (VIN) required for covered services, license plate number, and your location, including the telephone number from which you are calling. Briefly describe the nature of the problem and answer a few simple questions. You will be given the name of the service provider and

an estimated time of arrival. If you feel you are in an unsafe situation, please let us know. With your consent, we will contact local police or safety authorities.

If Unable to Contact Roadside Assistance

If you are unable to contact Roadside Assistance or unable to provide a valid Vehicle Identification Number (VIN), and you obtain towing services on your own, you may submit your original receipts from the licensed towing or service facility, for services rendered within 30 days of the occurrence. Be sure to include your VIN, odometer mileage at the time of service, and current mailing address. We will process the claim based on vehicle and service eligibility. If eligible, we will reimburse you for the reasonable amount actually paid, based on the usual and customary charges for that service in the area where they were provided. FCA US LLC's determination relating to reimbursement is final. Correspondence should be mailed to:

FCA US LLC Customer Assistance

P.O. Box 9145

Medford, MA 02155

Attention Claims Department

A claim can also be submitted online at <https://stellantis.roadsideimbursement.com>

¹ Towing services provided through Cross Country Motor Club, Inc., 400 River's Edge Drive, Medford, MA 02155, except in AK, CA, HI, OR, WI, and WY, where services are provided by Cross Country Motor Club of California, Inc., 275 East Hillcrest Drive, Suite 165, Thousand Oaks, CA 91360

FCA US LLC reserves the right to modify the terms or discontinue the Roadside Assistance Program at any time. The Roadside Assistance program is subject to restrictions and conditions of use, which are determined solely by FCA US LLC.

Flat Tire Service

If you are inconvenienced by a flat tire, we will dispatch a service provider to use your vehicle's temporary spare tire (if equipped) as recommended in your Owner's Manual (this is not a permanent flat tire repair). If your vehicle is not equipped with a spare tire, we will tow your vehicle to the closest authorized Chrysler, Dodge, Jeep®, or Ram dealer.

Out Of Charge

With Roadside Assistance, we have you covered if your vehicle runs out of charge. Request an out of charge service and we will tow your vehicle to the nearest charging station to get you back on the road.

12V Battery Jump Assistance

No time is a good time for a depleted 12V battery. With Roadside Assistance, you do not have to worry about being stranded. We will dispatch a service provider to provide you with a battery jump anytime, day or night.

Lockout Service

Whether the keys are locked in your vehicle or frozen locks are keeping you from getting on your way, help is just a phone call away. This service is limited to providing access to the vehicle's seating area. It does not cover the cost of replacement keys.

Towing Service

Our towing service gives you peace of mind and confidence. If your vehicle becomes disabled as a result of a mechanical breakdown, we will dispatch a towing service to transport your vehicle to the closest authorized Chrysler, Dodge, Jeep®, or Ram dealer. If you choose to go to another dealer, you will be responsible for the cost of the extra distance.

FOR CALIFORNIA RESIDENTS

Notice Under State Lemon Laws

FCA US LLC has chosen to opt-in to the provisions of the California Code of Civil Procedure, Sections 871.20 through 871.30 and the provisions of those chapters that govern vehicles. Notices pursuant to the Song-Beverly Consumer Warranty Act, containing an accurate Vehicle Identification Number (VIN) of the motor vehicle, and a brief summary of the repair history and problems with the motor vehicle should be emailed to warrantynotice@stellantis.com. Also, notices may be sent by certified or registered mail, return receipt requested to P.O. Box 436000 Pontiac, MI 48343. Additional information can be found at <https://www.dca.ca.gov/acp/>.

NOTE:

California residents asserting a claim arising under the Song-Beverly Consumer Warranty Act agree to arbitrate related claims for attorney fees with the National Center for Dispute Settlement, LLC ("NCDS") under its Attorney Fee Arbitration Rules, as then in effect.

Para los residentes de California, FCA US LLC ha optado por acogerse a las disposiciones del Código de Procedimiento Civil de California, secciones 871.20 a

871.30 y las disposiciones de esos capítulos relativas a vehículos. Las notificaciones de conformidad con la Ley Song-Beverly de garantías del consumidor, que deben contener un número preciso de identificación del vehículo motorizado (VIN), y una breve reseña del historial de reparación y los problemas con el vehículo motorizado, se enviarán por correo electrónico a warrantynotice@stellantis.com. Los avisos también pueden ser enviados por correo certificado o registrado, con acuse de recibo, a P.O. Box 436000 Pontiac, MI 48343. Encontrará más información en <https://www.dca.ca.gov/acp/>

NOTA:

Los residentes de California que presenten una reclamación bajo la Ley Song-Beverly de garantías del consumidor, acuerdan arbitrar las reclamaciones que correspondan a honorarios legales con el Centro Nacional para Liquidación de Disputas, LLC ("NCDS"), en consonancia con sus reglas de arbitraje para honorarios legales vigentes en ese momento.

FCA US LLC CUSTOMER CENTER

P.O. Box 21-8004

Auburn Hills, MI 48321-8004

Phone: (877) 426-5337

FCA CANADA CUSTOMER CARE

P.O. Box 1621

Windsor, Ontario N9A 4H6

Phone: (800) 465-2001 English / (800) 387-9983 French

MEXICO

Customer Relations Office

STELLANTIS Mexico, S.A. de C.V.

Av. Prolongacion Paseo de la Reforma, 1240

Sante Fe C.P. 05109

Mexico, CDMX

In Mexico City: 800-505-1300

Outside Mexico City: +(52) 55 50817568

PUERTO RICO AND US VIRGIN ISLANDS

Customer Service

FCA Caribbean LLC

P.O. Box 191857

San Juan 00919-1857

Phone: (877) 426-5337

CUSTOMER ASSISTANCE FOR THE HEARING OR SPEECH IMPAIRED (TDD/TTY)

To assist customers who have hearing difficulties, FCA US LLC has installed special Telecommunication Devices for the Deaf (TDD) equipment at its customer centers. Any hearing or speech impaired customer, who has access to a TDD or a conventional teletypewriter (TTY) in the United States, can communicate with FCA US LLC by dialing 1-800-380-2479.

Canadian residents with hearing difficulties who require assistance can use the special needs relay service

offered by Bell Canada. For TTY users, dial 711. For Voice callers, dial 1-800-855-0511 to connect with a Bell Relay Service operator.

SERVICE CONTRACT

The Flex Care Vehicle Protection plans offer valuable protection against repair costs after the New Vehicle Limited Warranty expires. They complement but do not replace the warranty coverages provided by FCA US LLC. A variety of plans are available, covering various time-and-mileage periods and various groups of the vehicle's mechanical components. Additionally, Flex Care Vehicle Protection maintenance plans are available to ensure your vehicle operates properly.

Flex Care Vehicle Protection plans are the only extended protection plans authorized, endorsed, and backed by FCA US LLC to provide additional protection beyond your vehicle's warranty. Ask an authorized dealer for details. You may also reach out to the Service Contract National Customer Hotline at 1-800-521-9922 (US).

FCA US LLC is not responsible for any service contract you may have purchased from another manufacturer. If you require service after the Limited warranty expires, please refer to the contract documents, and contact the person listed in those documents.

For Canadian residents, you may have purchased additional coverage with an extended service contract. FCA Canada Inc. stands fully behind its service contracts. Be sure that the one you buy is a genuine FCA Canada Inc. service contract. FCA Canada Inc. is not responsible for other companies' contracts. If you purchased a contract other than a genuine FCA Canada Inc. service contract and you have a problem, you will

have to contact the administrator of that contract for resolution. If you have any questions about the FCA Canada Inc. service contract, call the Service Contract National Customer Hotline at (800) 465-2001 English/ (800) 387-9983 French).

We appreciate that you have made a major investment when you purchased the vehicle. An authorized dealer has also made a major investment in facilities, tools, and training to assure that you are absolutely delighted with the ownership experience.

WARRANTY INFORMATION

To access your warranty information online, visit www.mopar.com/om (US) or www.owners.mopar.ca/en or www.owners.mopar.ca/fr (Canada).



EV warranty service must be done by a certified EV dealer. To find a certified dealer, visit the Find-A-Dealer feature on the provided website and select "Show certified EV dealers only". Improper use of aftermarket charging adapters may void your warranty.

MOPAR® PARTS

Mopar® original equipment parts & accessories and factory filled fluids are available from an authorized dealer. They are recommended for your vehicle to keep it operating at its best and maintain its original condition.

REPORTING SAFETY DEFECTS

In The 50 United States And Washington, D.C.

If you believe that your vehicle has a defect that could cause a crash or cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying FCA US LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, an authorized dealer or FCA US LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll free at 1-888-327-4236 (TTY: 1-800-424-9153); or go to <http://www.NHTSA.gov>; or write to:

Administrator, NHTSA, 1200 New Jersey Avenue, SE., West Building, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from <http://www.NHTSA.gov>.

In Canada

If you believe that your vehicle has a safety defect, you should contact the Customer Service Department immediately. Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to <https://tc.canada.ca/en>.

ORDERING AND ACCESSING ADDITIONAL OWNER'S INFORMATION

To order the following manuals, you may use either the website or the phone numbers listed.

Service Manuals

These comprehensive Service Manuals provide a complete working knowledge of the vehicle, system,

and/or components and is written in straightforward language with illustrations, diagrams, and charts.

Diagnostic Procedure Manuals

Diagnostic Procedure Manuals are filled with diagrams, charts and detailed illustrations. These manuals make it easy to find and fix problems on computer-controlled vehicle systems and features. They show exactly how to find and correct problems, using step-by-step troubleshooting and drivability procedures, proven diagnostic tests and a complete list of all tools and equipment.

To order a digital copy of your Service or Diagnostic Procedure manuals, visit: www.moparTSP.com (US and Canada).

Owner's Manuals

To access your Owner's Information online, visit www.mopar.com/om (US) or www.owners.mopar.ca/en/ (Canada) or visit: www.techauthority.com to order physical copies of Owner's Manuals (US).

Owner's Manuals, Radio Manuals and Warranty Information Books can be ordered through Archway at: **1-800-387-1143 (Canada)**

CHANGE OF OWNERSHIP OR ADDRESS

*If you have purchased this vehicle used or have changed your address, please provide the following information and mail to:

FCA US LLC

P.O. Box 21-8008

Auburn Hills, MI 48321-8004

Make sure to include the following:

- Date of Sale (mm/dd/yy)
- Vehicle Identification Number (17 Character ID located on top left of the instrument panel)
- Exact Odometer Reading
- First and Last Name
- Phone Number
- Street Address, City, State and Zip Code
- Email Address

*Applies to US residents only.

GENERAL INFORMATION

The following regulatory statement applies to all Radio Frequency (RF) devices equipped in this vehicle:

This device complies with Part 15 of the FCC Rules and with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Science and Economic Development applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage, et
2. L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. Es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INDEX

A

Active Driving Assist System	169
Active Lane Management System	167
Adaptive Cruise Control (ACC) (Cruise Control)	189
Air Bag	
Air Bag Operation	54
Air Bag Warning Light	52, 55
Driver Knee Air Bag	58
Enhanced Accident Response	60, 213
Event Data Recorder (EDR)	214
Front Air Bag	55
If Deployment Occurs	60
Knee Impact Bolsters	54
Maintaining Your Air Bag System	61
Maintenance	61
Redundant Air Bag Warning Light	53
Side Air Bags	58
Transporting Pets	215
Air Bag Light	52, 215
Air Conditioner Maintenance	221
Air Conditioner Refrigerant	221
Air Conditioner System	221
Air Conditioning	108
Air Conditioning Filter	111
Air Conditioning System	110
Air Conditioning, Operating Tips	108, 111
Air Pressure	
Tires	245
Alarm	
Arm The System	18
Disarm The System	18
Rearm The System	18
Security Alarm	17, 103
Alarm System	
Security Alarm	17
Alterations/Modifications	
Vehicle	9
Anti-Lock Brake System (ABS)	161
Anti-Lock Warning Light	103
Antifreeze (Engine Coolant)	225
Disposal	226
Apps	117
Arming System	
Security Alarm	17
Assist, Hill Start	197
Audio Systems (Radio)	113
Auto Down Power Windows	31
Auto Hold	106, 126
Automatic Door Locks	21
Automatic Headlights	77
Automatic High Beams	77
Automatic Temperature Control (ATC) ...	108, 110

Automatic Transaxle	127
AutoPark	122
Auxiliary Electrical Outlet (Power Outlet)	88
Auxiliary Power Outlet	88

B

B-Pillar Location	242
Back-Up	173
Battery	102, 130, 220
Charging	133
Charging System Light	102
Jump Starting	209
Keyless Key Fob Replacement	14
Battery Saver Feature	78
Belts, Seat	215
Blind Spot Monitoring	162
Body Mechanism Lubrication	222
Brake Assist System	161
Brake Fluid	227
Brake System	227
Fluid Check	227
Master Cylinder	227
Parking	125
Warning Light	101
Bulb Replacement	238
Bulbs, Light	216

C

Camera, Rear	173, 175
Capacities, Fluid	259
Caps, Filler	
Radiator (Coolant Pressure)	226
Car Washes	253
Cargo	
Vehicle Loading	145
Cargo Compartment	
Light	91
Cargo Light	91
Cargo Load Floor	91
Cargo Tie-Downs	91, 92
Cellular Phone	113
Certification Label	145
Chains, Tire	250
Changing A Flat Tire	207
Charging	133
Wireless	90
Chart, Tire Sizing	239
Checking Your Vehicle For Safety	215
Checks, Safety	215
Child Restraint	62
Child Restraints	
Booster Seats	64
Child Seat Installation	70
How To Stow An unused ALR Seat Belt	68
Infant And Child Restraints	63
Locating The LATCH Anchorages	67
Lower Anchors And Tethers For Children	65
Older Children And Child Restraints	63
Seating Positions	64
Child Safety Locks	21
Cleaning	
Wheels	249
Climate Control	108
Automatic	108
Contract, Service	263
Cooling Pressure Cap (Radiator Cap)	226
Cooling System	224
Adding Coolant (Antifreeze)	225
Coolant Level	226
Cooling Capacity	259
Disposal Of Used Coolant	226
Drain, Flush, And Refill	225
Inspection	224, 226
Points To Remember	226
Pressure Cap	226
Radiator Cap	226
Selection Of Coolant (Antifreeze)	225, 259
Corrosion Protection	253
Cruise Control (Speed Control)	189
Cruise Light	107
Customer Assistance	1, 261–265
Customer Programmable Features	115
Cybersecurity	113

D

Daytime Running Lights	76
De-Icer, Remote Start	17

Dealer Service	221
Defroster, Windshield	215
Digital Rearview Mirror	36
Disabled Vehicle Towing	212
Disposal	
Antifreeze (Engine Coolant)	226
Door Ajar	102, 103
Door Ajar Light	102, 103
Door Locks	21
Automatic	21
Child-Protection Door Lock – Rear Doors ...	21
Door Off Mirror Kit	27
Doors	18
Removal	23, 26
Removal, Front	23
Removal, Rear	26
Driver's Seat Back Tilt	41, 43
Driving	151
Off-Pavement	151
Off-Road	151
Through Flowing, Rising, Or Shallow	
Standing Water	151
Tips	151

E

Electric Brake Control System	
Anti-Lock Brake System	161
Electronic Roll Mitigation	160
Electric Motor Cooling	224
Electric Parking Brake	125

Electric Remote Mirrors	39
Electrical Outlet, Auxiliary (Power Outlet)	88
Electrical Power Outlets	88
Electronic Stability Control (ESC)	160
Emergency Brake	125
Emergency, In Case Of	
Freeing Vehicle When Stuck	212
Hazard Warning Flasher	204
Jacking	207
Jump Starting	209
Tow Hooks	213
Towing	212
Enhanced Accident Response Feature ...	60, 213
Exterior Lights	76, 216

F

Fabric Care	254
Fabric Top	254
FamCam System	188
Filters	
Air Conditioning	111, 221
Flash-To-Pass	77
Flashers	204
Hazard Warning	204
Turn Signal	216
Turn Signals	107
Flat Tire Changing	207, 238, 248
Flat Tire Stowage	238, 248
Fluid Capacities	259
Fluid Leaks	216

Fluid Level Checks	227
Brake	227
Folding Rear Seats	44
Forward Collision Warning	157
Four-Way Hazard Flasher	204
Freeing A Stuck Vehicle	212
Front Axle (Differential)	227
Fuses	227

G

Garage Door Opener (HomeLink®)	83
Glass Cleaning	255, 257
Glove Compartment Storage	87
Gross Vehicle Weight Rating	147
GVWR	146

H

Hazard Warning Flashers	204
Head Restraints	40
Headlights	
Automatic	77
Cleaning	253
High Beam/Low Beam Select Switch	77
Lights On Reminder	78
On With Wipers	77
Passing	77
Heated Mirrors	39
Heated Steering Wheel	72

High Beam/Low Beam Select (Dimmer) Switch	77
High Voltage Battery	130
Hill Start Assist	197
Hitches	
Trailer Towing	148
Hood Prop	92
Hood Release	92

I

Ignition	
Push Button Ignition	73
Information Center, Vehicle	96
Inside Rearview Mirror	36, 204
Instrument Cluster	95, 96
Display	97
Instrument Panel Lens Cleaning	256
Integrated Power Module (Fuses)	228
Interior Appearance Care	255
Interior Lights	78
Interior Monitoring Camera	188
Intermittent Wipers (Delay Wipers)	74
Inverter	
Power	89

J

Jack Location	207
Jack Operation	207, 208

Jacking Instructions	208
Jump Starting	209

K

Key Fob	
Arm The System	18
Disarm The System	18
Programming Additional Key Fobs	15
Key Fob Battery Service (Remote Keyless Entry)	14
Key Fob Programming (Remote Keyless Entry)	15
Keyless Enter 'n Go™	
Passive Entry Programming	19
Keys	13
Replacement	15

L

Lane Change Assist	78
Lane Management System	167
Lap/Shoulder Belts	47
Latches	216
Hood	92
Leaks, Fluid	216
Life Of Tires	247
Light Bulbs	216
Lights	216
Air Bag	52, 215
Ambient	79

Automatic Headlights	77
Brake Warning	101
Bulb Replacement	238
Cargo	91
Cruise	107
Daytime Running	76
Dimmer Switch, Headlight	76, 79
Exterior	76, 216
Fog	78
Hazard Warning Flasher	204
Headlights On With Wipers	77
High Beam	77
High Beam/Low Beam Select	77
Interior	78
Lights On Reminder	78
Multicolor Ambient	79
Park	77, 107
Passing	77
Plug Status	107
Plug Status Fault	103
Reading	78
Seat Belt Reminder	103
Security Alarm	103
Service	238
Tire Pressure Monitoring (TPMS)	199
Turn Signal	216
Turn Signals	76, 107
Load Floor, Cargo	91
Loading Vehicle	145
Tires	242

Locks	
Automatic Door	21
Child Protection	21
Power Door	18
Low Tire Pressure System	199
Lubrication, Body	222
Lug Nuts/Bolts	259
Luggage Carrier	82

M

Maintenance	79, 82
Maintenance Free Battery	220
Maintenance Schedule	216
Manual	
Service	264
McIntosh	117
Memory Feature (Memory Seats)	39
Memory Seat	39
Memory Seats And Radio	39
Memory Settings	39
Mirrors	36
Automatic Dimming	36
Exterior Folding	39
Heated	39
Outside	36, 38
Rearview	36, 204
Vanity	38
Modifications/Alterations	
Vehicle	9
Monitor, Tire Pressure System	199

Mopar Parts	263
Multi-Function Control Lever	76

O

Occupant Restraints	45
Off Road Pages	118
Accessory Gauges	118, 119
Drivetrain	118
Pitch And Roll	118, 119
Selec-Terrain	119
Status Bar	118
Operator Manual	
Owner's Manual	264
Outside Rearview Mirrors	36, 38

P

Paint Care	253
Panic Alarm	13
Parking Brake	104, 125
ParkSense	
Front And Rear	177
Side Distance	182
ParkSense Active Park Assist	184
Full Assist Mode	185
ParkSense System, Rear	177
Passive Entry	19
Pedestrian Warning System	157, 159
Pets	215

Pinch Protection	82
Placard, Tire And Loading Information	242
Power	
Distribution Center (Fuses)	232
Door Locks	18
Inverter	89
Mirrors	39
Outlet (Auxiliary Electrical Outlet)	87
Seats	41
Steering	72
Sunroof	81
Windows	31
Power Sliding Top	79
Operation	79
Pinch Protect	79
Pregnant Women And Seat Belts	51
Preparation For Jacking	207
Pretensioners	
Seat Belts	51

R

Radial Ply Tires	246
Radiator Cap (Coolant Pressure Cap)	226
Radio	
Off Road Pages	118
Radio Operation	113
Radio Remote Controls	114
Rain Sensitive Wiper System	75
Rear Axle (Differential)	227
Rear Camera	173, 175

Rear Cross Path	164
Rear ParkSense System	177
Rear Seat Reminder Alert	157
Rear Swing Gate	91
Rear Wiper/Washer	75
Recreational Towing	151
Refrigerant	221
Release, Hood	92
Reminder, Seat Belt	46
Remote Control	
Starting System	16
Remote Keyless Entry	
Arm The Alarm	18
Disarm The Alarm	18
Programming Additional Key Fobs	15
Remote Sound System (Radio) Control	114
Remote Starting	
Exit Remote Start Mode	17
Remote Starting System	16
Removable Doors	23, 26
Front	23
Rear	26
Removable Top	79
Replacement Keys	15
Replacement Tires	247
Reporting Safety Defects	264
Restraints, Child	62
Restraints, Head	40
Roll Over Warning	8
Roof Type Carrier	82
Rotation, Tires	251

Rough Road Cruise Control	196
---------------------------------	-----

S

Safety Checks Inside Vehicle	215
Safety Checks Outside Vehicle	216
Safety Defects, Reporting	264
Safety Information, Tire	238
Safety Tips	215
Schedule, Maintenance	216
Seat Belt Reminder	103
Seat Belts	46, 215
Adjustable Shoulder Belt	48
Adjustable Upper Shoulder Anchorage	48
Adjustable Upper Shoulder Belt Anchorage	48
Automatic Locking Retractor (ALR)	51
Child Restraints	62
Extender	50
Front Seat	46–48
Inspection	215
Lap/Shoulder Belt Operation	48
Lap/Shoulder Belt Untwisting	48
Lap/Shoulder Belts	47
Operating Instructions	48
Pregnant Women	51
Pretensioners	51
Rear Seat	47
Reminder	46, 107
Seat Belt Extender	50
Seat Belt Pretensioner	51
Seat Belt Reminder	107
Untwisting Procedure	48
Seat Belts Maintenance	255
Seats	41
Adjustment	41, 42, 44
Easy Entry	42
Lumbar Adjustment	42
Power	41
Tilting	41
Vented	43
Ventilated	43
Security Alarm	17, 103
Arm The System	18
Disarm The System	18
Selec-Terrain	129
Selection Of Coolant (Antifreeze)	258
Sentry Key (Immobilizer)	16
Sentry Key Replacement	15
Service Assistance	261
Service Contract	263
Service Manuals	264
Settings	115
Shoulder Belts	47
Side View Mirror Adjustment	36
Signals, Turn	107, 216
Single-Speed-Transmission	127
Snow Chains (Tire Chains)	250
Snow Tires	248
Spare Tire Changing	207
Spare Tires	207, 248, 249
Speed Control	
Accel/Decel (ACC Only)	192

Speed Control (Cruise Control)	189
Starting	122
Button	73
Starting And Operating	122
Starting Procedures	122
Starting The Vehicle	73
Steering	71
Power	72
Tilt Column	71
Wheel, Heated	72
Wheel, Tilt	71
Steering Wheel Audio Controls	114
Steering Wheel Mounted Sound System Controls	114
Storage	87, 252
Behind the Seat	87
Storage, Vehicle	252
Storing Your Vehicle	252
Sun Roof	79, 81, 82
Sunglasses Storage	87
Sunshade Operation	81, 82
Surround View Camera System	173
Surroundview Camera	175
Swing Gate, Rear	91
Symbol Glossary	8, 9
System, Remote Starting	16

T

Telescoping Steering Column	71
Temperature Control, Automatic (ATC) ..	108, 110

Third Party Apps	117
Tie Down Hooks, Cargo	91, 92
Tilt Steering Column	71
Tire And Loading Information Placard	242
Tire Markings	238
Tire Safety Information	238
Tires216, 245, 248, 249, 251	
Aging (Life Of Tires)	247
Air Pressure	245
Chains	250
Changing	207
General Information	245, 248, 249
High Speed	246
Inflation Pressure	245
Jacking	207
Life Of Tires	247
Load Capacity	242, 243
Pressure Monitoring System (TPMS)	105, 199
Quality Grading	251
Radial	246
Replacement	247
Rotation	251
Safety	238, 245
Sizes	239
Snow Tires	248
Spare Tires	207, 248, 249
Spinning	246
Tread Wear Indicators	247
Wheel Nut Torque	259
To Open Hood	92
Tongue Weight/Trailer Weight	149

Top	
Power Sliding	79
Tow Hooks	
Emergency	213
Towing	146
Disabled Vehicle	212
Guide	148
Recreational	151
Weight	148
Towing Behind A Motorhome	151
Traction Control	160
Traffic Sign Assist System	197
Trail Recording	119
Trailer Towing	146
Hitches	148
Minimum Requirements	149
Trailer And Tongue Weight	149
Wiring	150
Trailer Weight	148
Transaxle	
Automatic	127
Operation	127
Transporting Pets	215
Tread Wear Indicators	247
Turn Signals	107

U

Uconnect Settings	115
Customer Programmable Features	21, 115
Passive Entry Programming	19, 21

Underhood Compartment	219
Uniform Tire Quality Grades	251
Untwisting Procedure, Seat Belt	48
USB	88
USB Port	88


V


Vanity Mirrors	38
Vehicle Identification Number (VIN)	258
Vehicle Loading	145, 243
Vehicle Maintenance	221
Vehicle Modifications/Alterations	9
Vehicle Security Alarm	17
Vehicle Storage	252
Voice Command	114
Climate	110
Voice Recognition	114
Voice Recognition System (VR)	114


W

Warning Flashers, Hazard	204
Warning Lights	
Red	99
Warning Lights And Messages	99
Warnings, Roll Over	8
Washers, Windshield	74, 220
Washing Vehicle	253
Wheel And Wheel Tire Care	249

Wheel And Wheel Tire Trim	249
Window Fogging	111
Window Lockout Switch	32
Windows	31
Power	31
Reset Auto-Up	32
Windshield Defroster	215
Windshield Washers	74, 220
Fluid	220
Windshield Wiper Blades	223
Windshield Wipers	74
Wipers Blade Replacement	223
Wipers, Intermittent	74
Wipers, Rain Sensitive	75
Wipers, Rear	75
Wireless Charging Pad	90







The driver's primary responsibility is the safe operation of the vehicle. Driving while distracted can result in loss of vehicle control, resulting in an accident and personal injury. FCA US LLC strongly recommends that the driver use extreme caution when using any device or feature that may take their attention off the road. Use of any electrical devices, such as cellular telephones, computers, portable radios, vehicle navigation or other devices by the driver while the vehicle is moving is dangerous and could lead to a serious accident. Texting while driving is also dangerous and should never be done while the vehicle is moving. If you find yourself unable to devote your full attention to vehicle operation, pull off the road to a safe location and stop your vehicle. Some states or provinces prohibit the use of cellular telephones or texting while driving. It is always the driver's responsibility to comply with all local laws.

This Owner's Manual has been prepared to help you get acquainted with your new Jeep® brand vehicle and to provide a convenient reference source for common questions.

Not all features shown in this manual may apply to your vehicle. For additional information, visit mopar.com/om (USA), owners.mopar.ca (Canada) or your local Jeep® brand dealer.

Do not attempt water fording unless depth is known. Traversing water can cause damage that may not be covered by the new vehicle warranty. Always off-road responsibly in approved areas.

DRIVING AND ALCOHOL

Drunk driving is one of the most frequent causes of accidents. Your driving ability can be seriously impaired with blood alcohol levels far below the legal minimum. If you are drinking, don't drive. Ride with a designated non-drinking driver, call a cab, a rideshare, a friend or use public transportation.

WARNING

Driving after drinking can lead to an accident. Your perceptions are less sharp, your reflexes are slower and your judgment is impaired when you have been drinking. Never drink and then drive.



The Jeep® app puts the latest in connectivity and convenience in the palm of your hand. The App provides access to your remote vehicle commands (if properly equipped), service history, My Garage and the Digital Glovebox. To get this app, go directly to the App Store® or Google Play® Store and enter the search keyword “Jeep” (U.S. residents only).

DOWNLOAD THE MOST UP-TO-DATE OWNER'S MANUAL, RADIO AND WARRANTY BOOKS

U.S.



mopar.com/om

CANADA



owners.mopar.ca



©2026 FCA US LLC. All Rights Reserved. Tous droits réservés. Jeep is a registered trademark of FCA US LLC. Jeep est une marque déposée de FCA US LLC. App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

First Edition
26_EJ_OM_EN_USC